

[Manuals.plus](#) /

> [Mujocooker](#) /

> Mujocooker 36V 8AH Electric Scooter Battery User Manual

## Mujocooker 36V 8AH

# Mujocooker 36V 8AH Electric Scooter Battery User Manual

Model: 36V 8AH Lithium-Ion Battery

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Mujocooker 36V 8AH Lithium-Ion battery for electric scooters. Please read this manual thoroughly before installation and operation to ensure proper function and longevity of your battery.

## SAFETY INSTRUCTIONS

---

**WARNING:** Failure to follow these safety instructions may result in fire, electric shock, injury, or damage to the battery and scooter.

- Do not disassemble, puncture, or modify the battery.
- Keep the battery away from water, fire, and extreme temperatures.
- Use only the charger specified for this battery.
- Do not short-circuit the battery terminals.
- Store the battery in a cool, dry place when not in use.
- Keep out of reach of children.
- If the battery shows signs of damage, swelling, or leakage, discontinue use immediately and contact support.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x Mujocooker 36V 8AH Lithium-Ion Battery
- 1 x User Manual (this document)
- *(Note: Charger may be sold separately or included with your scooter.)*

## SETUP AND INSTALLATION

---

Before installing the battery, ensure your electric scooter is powered off and disconnected from any charging source.

1. **Locate Battery Compartment:** Identify the battery compartment on your electric scooter. This is typically located under the deck or within the stem.
2. **Remove Old Battery (if applicable):** If replacing an existing battery, carefully disconnect its connectors and remove it from the compartment.
3. **Insert New Battery:** Gently place the Mujocooker 36V 8AH battery into the designated compartment. Ensure it fits securely without forcing.
4. **Connect Terminals:** Connect the battery's positive (+) and negative (-) terminals to the corresponding connectors on your scooter. Ensure a firm and correct connection to prevent damage.
5. **Secure Compartment:** Close and secure the battery compartment cover according to your scooter's design.
6. **Initial Charge:** It is recommended to fully charge the battery before its first use. Refer to the "Operating: Charging the Battery" section.



*Image: The Mujocooker 36V 8AH Lithium-Ion battery. This image shows the general appearance of the battery pack, typically rectangular with connection terminals.*

## OPERATING

### Charging the Battery

Always use a compatible 36V Lithium-Ion battery charger. Using an incompatible charger can damage the battery or pose a safety risk.

1. Ensure the scooter is powered off.
2. Connect the charger to a standard wall outlet.
3. Connect the charger's output plug to the scooter's charging port.
4. Observe the charger's indicator light. It typically shows red during charging and turns green when fully charged.
5. Once fully charged, disconnect the charger from the scooter first, then from the wall outlet.
6. Do not overcharge the battery. Unplug the charger once charging is complete.

### Discharging and Usage

The battery is designed for optimal performance within its specified voltage range. Avoid completely draining the battery, as this can reduce its lifespan.

- Monitor your scooter's battery indicator during use.
- Recharge the battery when the charge level is low, ideally before it drops below 20%.
- Performance may decrease in extremely cold temperatures.

## MAINTENANCE

- **Cleaning:** Wipe the battery and its terminals with a dry, clean cloth. Do not use water or solvents.
- **Storage:** If storing the battery for an extended period (more than one month), charge it to approximately 50-60% capacity. Store in a cool, dry place between 0°C and 25°C (32°F and 77°F). Recharge every 3 months to prevent deep discharge.
- **Inspection:** Periodically inspect the battery for any physical damage, swelling, or corrosion on the terminals.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Battery not charging	Charger not connected, faulty charger, faulty charging port, deeply discharged battery.	Ensure charger is properly connected to wall and scooter. Test charger with another device if possible. Check charging port for debris. If deeply discharged, try a brief charge, but if it doesn't respond, contact support.
Scooter not powering on	Battery not connected, low battery charge, faulty battery.	Check battery connections. Charge the battery fully. If issues persist, the battery may be faulty; contact support.

Problem	Possible Cause	Solution
Reduced range/performance	Low battery charge, aging battery, extreme temperatures, heavy load.	Ensure battery is fully charged. Battery capacity naturally degrades over time. Avoid using in extreme cold. Reduce load if possible.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact Mujocooker customer support.

## SPECIFICATIONS

- **Model:** 36V 8AH
- **Battery Type:** Lithium-Ion
- **Nominal Voltage:** 36V
- **Nominal Capacity:** 8AH (Amp Hours)
- **Battery Cell Composition:** Lithium Ion
- **UPC:** 790807257331
- **ASIN:** B0CL6LT5H9
- **Manufacturer:** MUJO-B-FBM

## WARRANTY INFORMATION

Mujocooker products are typically covered by a limited warranty against defects in materials and workmanship. The specific warranty period and terms may vary. Please retain your proof of purchase. For detailed warranty information, refer to the warranty card included with your product or visit the official Mujocooker website.

## CUSTOMER SUPPORT

For technical assistance, warranty claims, or general inquiries, please contact Mujocooker customer support through the following channels:

- **Website:** [Visit the Mujocooker Store on Amazon](#)
- **Email:** Refer to your product packaging or the official website for the most current email address.
- **Phone:** Refer to your product packaging or the official website for the most current phone number.