

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Telefunken](#) /

› [Telefunken TDV-322 DVD Player Instruction Manual](#)

## Telefunken TDV-322

# Telefunken TDV-322 DVD Player Instruction Manual

Model: TDV-322

## INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Telefunken TDV-322 DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. The Telefunken TDV-322 is designed to play various disc formats, offering versatile entertainment options for your home. It includes multiple output options for connecting to different television and audio systems.

## PRODUCT OVERVIEW

The Telefunken TDV-322 DVD Player is a compact device for playing DVDs and CDs. It features a front-loading disc tray, a digital display, and front-panel controls. Connectivity options are located on the rear panel.



**Figure 1:** Front view of the Telefunken TDV-322 DVD Player. The image displays the black unit with a central disc tray, a digital time display, a USB port, and two microphone input jacks on the right side. Below the disc tray are several control buttons.

## KEY FEATURES

- Full DVD player functionality for various disc types.
- Easy-to-use remote control for convenient operation.
- Component video output for standard-definition television connections.
- Composite video output for older television models.
- Coaxial and optical digital audio outputs for surround sound system integration.
- Parental control features for content management.
- Compatibility with DVD, DVD-R, DVD-RW, VCD, SVCD, CD, CD-R, CD-RW, MP3, WMA, JPEG, and MPEG4 files.

## SETUP INSTRUCTIONS

### 1. Unpacking

Carefully remove the DVD player and all accessories from the packaging. Retain the packaging for future transport or storage.

### 2. Connecting to a Television

The TDV-322 offers several video output options:

- **Component Video Output:** Use a component video cable (red, green, blue connectors) to connect the DVD player's component output jacks to the corresponding input jacks on your standard-definition TV.
- **Composite Video Output:** Use a composite video cable (yellow connector) to connect the DVD player's composite video output jack to the video input jack on an older TV.

*Note: This DVD player does not feature an HDMI port. Ensure your television has compatible input ports.*

### 3. Connecting to an Audio System

For enhanced audio, connect the DVD player to an external audio system:

- **Coaxial Digital Audio Output:** Use a coaxial digital audio cable to connect the DVD player's coaxial output to a compatible input on your surround sound receiver.
- **Optical Digital Audio Output:** Use an optical digital audio cable to connect the DVD player's optical output to a compatible input on your surround sound receiver.

### 4. Power Connection

Connect the power cord to the DVD player's power input and then plug it into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

### 1. Basic Playback

1. Press the **POWER** button on the front panel or remote control to turn on the player.
2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place a disc (DVD, CD, etc.) gently onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. The player will automatically begin playback or display a menu.
6. Use the **PLAY/PAUSE, STOP, FORWARD, and REVERSE** buttons on the remote control or front panel to manage playback.

### 2. Using the Remote Control

The included remote control provides full functionality for the DVD player. Refer to the remote control diagram (not provided in this manual) for specific button layouts. Ensure batteries are correctly inserted.

### 3. USB Playback

Insert a USB flash drive into the USB port on the front panel. The player will detect the drive and allow you to browse and play compatible media files (MP3, WMA, JPEG, MPEG4).

### 4. Parental Controls

The DVD player includes parental control features to restrict playback of certain content. Access these settings through the system menu using the remote control. A password may be required to enable or disable these features.

## MAINTENANCE

---

- **Cleaning the Unit:** Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Use a soft, lint-free cloth to wipe discs from the center outwards.
- **Ventilation:** Ensure the DVD player has adequate ventilation. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, disconnect the power cord and store the unit in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely connected. Check power outlet with another device.
No video output	Video cables incorrectly connected; Incorrect TV input selected.	Verify component or composite video cables are securely connected to the correct input on your TV. Select the correct input source on your TV.
No audio output	Audio cables incorrectly connected; Incorrect audio input selected on receiver/TV; Volume too low.	Check coaxial/optical audio connections. Ensure the correct audio input is selected on your audio system or TV. Increase volume.
Disc does not play	Disc is dirty or scratched; Disc is inserted incorrectly; Unsupported disc format.	Clean the disc. Reinsert the disc with the label side up. Verify the disc format is supported (DVD, CD, VCD, SVCD).
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries. Ensure correct battery polarity. Remove any obstructions. Point remote directly at the player's sensor.

## SPECIFICATIONS

Feature	Detail
<b>Model Number</b>	TDV-322
<b>Brand</b>	Telefunken
<b>Color</b>	Black
<b>Supported Disc Formats</b>	DVD, DVD-R, DVD-RW, VCD, SVCD, CD, CD-R, CD-RW
<b>Supported File Formats</b>	MP3, WMA, JPEG, MPEG4 (via USB)
<b>Video Outputs</b>	Component Video, Composite Video
<b>Audio Outputs</b>	Coaxial Digital Audio, Optical Digital Audio
<b>Additional Ports</b>	USB port, Microphone inputs

## WARRANTY INFORMATION

The Telefunken TDV-322 DVD Player comes with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. For details regarding warranty terms and conditions, refer to the warranty card included with your product or contact Telefunken customer support.

## CUSTOMER SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Telefunken customer support. Contact information can typically be found on the product packaging, the official Telefunken website, or the warranty documentation.

When contacting support, please have your model number (TDV-322) and purchase details ready.

© 2023 Telefunken. All rights reserved.