

ASHATA ASHATAwpm9xggst1

ASHATA 3D Hologram Fan User Manual

Model: ASHATAwpm9xggst1

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your ASHATA 3D Hologram Fan, Model ASHATAwpm9xggst1. Please read this manual thoroughly before using the device to ensure proper function and safety.

2. SAFETY INFORMATION

- The 3D Hologram Fan features a transparent protective cover. Ensure this cover is always in place during operation to prevent contact with the rotating blade and to minimize noise.
- This device is primarily designed for indoor use. If used outdoors, appropriate waterproof measures must be taken to protect the unit from moisture and environmental elements.
- Keep the device away from water, heat sources, and direct sunlight.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.
- Ensure the device is placed on a stable, flat surface when using the table mount option.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x ASHATA 3D Hologram Fan Unit
- 2 x Base Brackets (for mounting)
- 1 x Memory Card (4GB, pre-installed or included separately)
- 1 x Remote Control
- 1 x Card Reader
- 1 x USB Power Cable



Image: Contents of the ASHATA 3D Hologram Fan package, showing the main unit, two base brackets, a remote control, and a USB card reader.

4. SETUP INSTRUCTIONS

4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Inspect all items for any signs of damage. If any damage is found, do not proceed with setup and contact customer support.

4.2 Mounting the Device

The ASHATA 3D Hologram Fan supports both floor mount and table mount configurations using the provided base brackets.

- **Table Mount:** Place the fan unit on a flat, stable surface. The transparent protective cover acts as a stable base.
- **Floor Mount:** Attach the two base brackets to the bottom of the fan unit as indicated in the diagram (refer to product diagrams for specific attachment points). Ensure the brackets are securely fastened before placing the unit on the floor.

4.3 Power Connection

1. Connect the USB power cable to the designated port on the ASHATA 3D Hologram Fan unit.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB

port. The device requires 5 watts of power.

4.4 Initial Content Preparation

The device comes with a 4GB memory card. You can upload content directly to this card or use the mobile application.

1. Memory Card Method:

- Insert the included memory card into the card reader.
- Connect the card reader to your computer.
- The memory card contains instructions for downloading the companion application software. Read these instructions using the card reader before proceeding.
- Transfer your desired 3D content (supported formats: mp4, avi, rmvb, mkv, gif, jpg, png) to the memory card.
- Safely eject the memory card from your computer and insert it into the memory card slot on the bottom of the ASHATA 3D Hologram Fan unit.

2. Mobile App Method:

- Download the '5D Displayer' mobile application from your device's app store.
- Follow the in-app instructions to connect your mobile device to the ASHATA 3D Hologram Fan via WiFi.
- Use the app to transmit and load 3D displays directly to the fan. This method allows for fast data transfer and access to a 3D image database.



Image: A detailed view of the ASHATA 3D Hologram Fan, highlighting the internal circuitry and the transparent protective dome.



WiFi Compatible

Can transfer and load 3D displays

No need to worry about location limiting your access to files, fast data transfer

After accessing the 3D image database, you can pull the files over WiFi and play them immediately

Image: The ASHATA 3D Hologram Fan in a setting, illustrating its WiFi compatibility for seamless content transfer from a mobile device or computer.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Once connected to power, the device will typically power on automatically. Use the remote control to turn the display on or off.

5.2 Playing Content

After content has been loaded onto the memory card or transmitted via the mobile app, the device will begin playing the 3D animation automatically. The built-in speakers will play accompanying audio if present in the content.

5.3 Using the Remote Control

The included remote control allows for convenient operation of the ASHATA 3D Hologram Fan.

- **Power Button:** Turns the display on or off.
- **Volume Controls:** Adjusts the audio output from the built-in speakers.

- **Playback Controls:** Play, pause, skip forward, skip backward for content navigation.
- **Brightness/Mode:** Adjusts display brightness or cycles through display modes (if applicable).



Image: The ASHATA 3D Hologram Fan alongside its remote control, which is used for managing playback and settings.

6. MAINTENANCE

6.1 Cleaning the Device

- Ensure the device is powered off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior of the fan unit and the transparent protective cover.
- Do not use abrasive cleaners, solvents, or spray directly onto the device.

6.2 Remote Control Battery Replacement

The remote control uses a built-in 160mAh CR2025 button battery. When the remote control's performance degrades, replace the battery with a new CR2025 battery. Refer to the remote control's casing for instructions on accessing the battery compartment.

6.3 Storage

When not in use for extended periods, store the ASHATA 3D Hologram Fan in a cool, dry place, away from direct sunlight and extreme temperatures. Keep the protective cover in place to prevent dust accumulation.

7. TROUBLESHOOTING

If you encounter issues with your ASHATA 3D Hologram Fan, refer to the following common problems and solutions:

- **No Display/Fan Not Spinning:**
 - Check if the power cable is securely connected and the power source is active.
 - Ensure the remote control battery is not depleted and the device is powered on using the remote.
- **Content Not Playing/Poor Quality Display:**
 - Verify that the content files are in a supported format (mp4, avi, rmvb, mkv, gif, jpg, png).
 - Ensure the memory card is properly inserted into the fan unit.
 - If using the app, confirm a stable WiFi connection.
 - For optimal visual quality, ensure your video content has a suitable resolution for holographic display. Very low-resolution content may appear pixelated or unclear.
- **Remote Control Not Responding:**
 - Check and replace the CR2025 button battery in the remote control.
 - Ensure there are no obstructions between the remote control and the fan unit.
- **Unusual Noise:**
 - Ensure the transparent protective cover is securely in place.
 - Check for any foreign objects obstructing the fan's rotation.

If the problem persists after attempting these solutions, please contact customer support for further assistance.

8. SPECIFICATIONS

Model	ASHATAwpm9xggst1
Material	PMMA, PC, Hardware (Acrylic, Polycarbonate)
Power Source	Battery Powered (USB Power Cable)
Wattage	5 watts
Control Method	Remote Control

Remote Control Battery	Built-in 160mAh CR2025 Button Battery
Memory Card Support	4GB included, supports up to 16GB
Supported Content Formats	mp4, avi, rmvb, mkv, gif, jpg, png
Mobile App Name	5D Displayer
Usage Environment	Indoor (Outdoor with waterproof measures)
Useful Life	30,000 Hours
Mounting Type	Floor Mount/Table Mount
Parcel Dimensions	12.6 x 12.4 x 7.1 cm
Weight	300 g

9. WARRANTY INFORMATION

Specific warranty details for the ASHATA 3D Hologram Fan are typically provided at the point of purchase or within separate documentation. Please retain your proof of purchase for any warranty claims. For information regarding warranty coverage, duration, and terms, please refer to the seller's policy or contact ASHATA customer support directly.

10. SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact ASHATA customer service through the following channels:

- **Manufacturer Website:** Refer to the official ASHATA website for support resources and contact information.
- **Seller Support:** Contact the seller from whom you purchased the product for direct assistance.

© 2023 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CL757TRT>

More documents and user manuals: <https://manuals.plus/>