

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Midea](#) /
- › Midea MDRF700FGM46 French Door Refrigerator User Manual

Midea MDRF700FGM46

Midea MDRF700FGM46 French Door Refrigerator User Manual

Model: MDRF700FGM46

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Midea MDRF700FGM46 French Door Refrigerator. Please read these instructions thoroughly before installation and use, and retain them for future reference. This appliance features a Plus Inverter compressor, LED lighting in both refrigerator and freezer compartments, and a door open alarm.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This refrigerator is designed for household use only. Ensure the appliance is properly grounded. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Keep ventilation openings clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Dispose of packaging responsibly. Inspect the refrigerator for any damage incurred during transit. If damage is found, contact your retailer immediately.

3.2 Placement

Place the refrigerator on a firm, level floor away from direct sunlight and heat sources (e.g., stove, heater). Allow adequate space around the appliance for proper ventilation. The recommended clearances are 10 cm at the back, 5 cm on the sides, and 30 cm at the top. Ensure the ambient temperature is suitable for the appliance's climate class.



Figure 1: Front view of the Midea MDRF700FGM46 French Door Refrigerator.



Figure 2: Refrigerator dimensions: 78.5 cm (depth) x 75 cm (width) x 169.2 cm (height).

3.3 Leveling

Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. This helps prevent vibrations and ensures proper door sealing.

3.4 Electrical Connection

Connect the refrigerator to a dedicated 120 Volt (AC) power outlet. Do not use extension cords or multiple outlet adapters. Ensure the power cord is not pinched or damaged.

3.5 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a soft cloth and a mild detergent solution. Wipe dry thoroughly.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features an adjustable temperature control system. The control panel is located inside the fresh food compartment. Use the controls to set the desired temperature for both the refrigerator and freezer sections. Refer to the markings on the control panel for specific temperature settings.



Figure 3: Internal control panel for temperature adjustment.

4.2 Using the Refrigerator Compartment

The fresh food compartment is equipped with multiple tempered glass shelves and crisper drawers for organizing food items. The shelves can be adjusted to different heights to accommodate various container sizes. The crisper drawers are ideal for storing fruits and vegetables to maintain their freshness.



Figure 4: Empty interior of the refrigerator compartment.



Figure 5: Refrigerator compartment with food items, demonstrating storage capacity.



Figure 6: Detail of the crisper drawers for fresh produce.

4.3 Using the Freezer Compartment

The freezer compartment is located at the bottom and is designed for long-term storage of frozen foods. It features a drawer system for easy access and organization. The freezer has a capacity of 160 liters.



Figure 7: Freezer drawer with frozen food items.

4.4 Door Open Alarm

The refrigerator is equipped with a door open alarm that will sound if a door is left open for an extended period. Close the door to silence the alarm and conserve energy.

5. MAINTENANCE

5.1 Cleaning

Interior Cleaning: Unplug the refrigerator before cleaning. Wash interior surfaces with a solution of mild soap and warm water. Rinse and dry thoroughly. Do not use abrasive cleaners or harsh chemicals. Remove shelves and drawers for easier cleaning.

Exterior Cleaning: Clean the exterior surfaces with a soft cloth and mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner. Wipe dry to prevent streaks.

5.2 Defrosting

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting of the freezer compartment. Any frost that forms will be automatically melted and drained.

5.3 Power Outage Care

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily. If the outage is prolonged, consider transferring perishable items to a cooler with ice.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

- **Refrigerator not cooling:** Check if the power cord is securely plugged in. Ensure the temperature control is set correctly. Verify that the doors are fully closed.
- **Excessive noise:** Ensure the refrigerator is level. Check if any items inside are vibrating against each other.
- **Water on the floor:** Check if the drain pan is properly positioned or if the drain hose is clogged.
- **Door alarm sounds frequently:** Ensure doors are closing completely and door seals are clean and intact.

7. SPECIFICATIONS

Model Number	MDRF700FGM46
Brand	Midea
Type	French Door Refrigerator
Capacity (Total)	19 Cubic Feet
Fresh Food Capacity	369 Liters
Freezer Capacity	160 Liters
Dimensions (D x W x H)	78.5 cm x 75 cm x 169.2 cm
Weight	92 Kilograms
Color	Gris (Steel)
Door Material	Stainless Steel
Installation Type	Freestanding
Defrost System	Automatic
Voltage	120 Volts (AC)
Annual Energy Consumption	465 Kilowatt Hours Per Year
Energy Compliance	Energy Star
Number of Doors	2
Shelf Type	Tempered Glass
Adjustable Temperature Control	Yes

8. WARRANTY AND SUPPORT

This Midea refrigerator comes with a **2-year product warranty**. The Plus Inverter compressor is covered by a 10-year warranty. For warranty claims or technical support, please refer to the contact information provided in your purchase documentation or visit the official Midea website. Keep your proof of purchase for warranty validation.

