

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Fockety](#) /

> [Fockety 4K Digital Video Camcorder \(Model: Fockety0yaq3kih54\) User Manual](#)

## Fockety Fockety0yaq3kih54

# Fockety 4K Digital Video Camcorder (Model: Fockety0yaq3kih54) User Manual

Comprehensive instructions for setup, operation, and maintenance.

## INTRODUCTION

Thank you for purchasing the Fockety 4K Digital Video Camcorder. This manual provides detailed instructions to help you understand and operate your new device effectively. Please read this manual thoroughly before use and keep it for future reference.

## SAFETY INFORMATION

- Do not expose the camcorder to water or moisture.
- Avoid dropping the device or subjecting it to strong impacts.
- Keep the camcorder away from direct sunlight and high temperatures.
- Use only specified batteries and accessories.
- Do not attempt to disassemble or repair the camcorder yourself. Contact customer support for assistance.

## PACKAGE CONTENTS

Ensure all items are present in the package:

- Fockety 4K Digital Video Camcorder
- USB Cable
- User Manual (this document)

*Note: 3x AAA 1.5V dry batteries are required for operation and are not included in the package.*

## PRODUCT OVERVIEW

Familiarize yourself with the various parts of your camcorder.



**Figure 1:** Front-side view of the camcorder, showing the lens, fill light, and wrist strap.



**Figure 2:** Side view of the camcorder with the 1.8-inch LCD screen open, displaying control buttons (T, W, Mode) and ports (SNAP, USB, AV).

## Key Features:

- 1.8-inch IPS Touch Screen
- 12MP Image Resolution
- 4x Digital Zoom
- Integrated Fill Light
- Electronic Image Stabilization
- Loop Recording and Time Watermark
- USB Connectivity for PC

## SETUP

### 1. Inserting Batteries

The camcorder requires 3 AAA 1.5V dry batteries, which are not included. Locate the battery compartment, insert

the batteries according to the polarity indicators, and close the compartment cover securely.

## 2. Inserting a Memory Card

This camcorder supports a maximum of 32GB storage card (not included). Open the memory card slot cover, insert the SD card with the metal contacts facing the correct direction until it clicks into place. Close the cover.

## 3. Powering On/Off

To power on the device, open the LCD screen and press the power button for 2-3 seconds. To power off, press and hold the power button again.

# OPERATING INSTRUCTIONS

---

## 1. Recording Video

1. Power on the camcorder.
2. Ensure the camcorder is in video recording mode (usually indicated by an icon on the screen).
3. Press the **Record** button (often marked with a red dot or camera icon) to start recording.
4. Press the **Record** button again to stop recording.
5. The camcorder supports charging while recording.

## 2. Taking Photos

1. Power on the camcorder.
2. Switch to photo mode.
3. Frame your shot using the LCD screen.
4. Press the **SNAP** button (refer to Figure 2) to capture a photo.

## 3. Using the Fill Light

The camcorder features a built-in fill light on the front. This can be activated in low-light conditions to improve image brightness. Refer to the on-screen menu or a dedicated button for fill light activation.



**Figure 3:** Illustration of the camcorder's fill light functionality, useful for low-light environments.

#### **4. Digital Zoom**

The camcorder supports 4x digital zoom. Use the 'T' (Telephoto) and 'W' (Wide) buttons (visible in Figure 2) to zoom in and out while recording or in photo mode.

#### **5. Connecting to a Computer**

Connect the camcorder to your computer using the provided USB cable. The camcorder can function as a computer camera or allow you to transfer photos and videos to your computer.



Figure 4: The camcorder shown with its USB cable, ready for connection to a computer.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** When not in use for extended periods, remove the batteries and store the camcorder in a cool, dry place away from dust and extreme temperatures.
- **Battery Care:** If using rechargeable batteries, follow the manufacturer's guidelines for charging and discharge cycles.

## TROUBLESHOOTING

| Problem  | Possible Cause   | Solution   |
|--|--|--|
| Camcorder does not power on.                           | Batteries are dead or incorrectly inserted.                      | Replace batteries with new ones or ensure correct polarity.  |
| Cannot record video or take photos.                    | Memory card is full, not inserted, or corrupted.                 | Insert a memory card, delete unnecessary files, or format the card (this will erase all data).     |
| Video/Audio quality is poor (glitches, crunchy audio). | Low light conditions, microphone obstruction, or internal issue. | Use the fill light in low light. Ensure microphone is clear. If problem persists, contact support. |
| No zoom function when recording video.                 | This model may have limitations on zoom during video recording.  | Confirm if digital zoom is supported in video mode via settings. If not, adjust framing manually.  |
| Camcorder not recognized by computer.                  | Faulty USB cable or driver issue.                                | Try a different USB port or cable. Ensure camcorder is powered on.                                 |

## SPECIFICATIONS

| Feature                 | Detail  |
|-------------------------|---|
| Image Resolution        | 12M (maximum)                                   |
| Image Format            | JPG   |
| Video Resolution        | 4K, 720p, 480p                                  |
| Video Format            | AVI   |
| Screen Size             | 1.8 inches                                      |
| Digital Zoom            | 4x  |
| Shutter                 | Electronic                                      |
| Self Timer Timing       | 2 seconds, 10 seconds, continuous shooting      |
| Storage                 | Maximum support storage card 32G (not included) |
| Battery Type            | AAA1.5V dry batteries x 3 (not included)        |
| Connectivity Technology | USB   |
| Photo Sensor Technology | CMOS  |
| Flash Memory Type       | SD  |
| Supported Audio Format  | AAC, MP3  |
| Item Weight             | 5.6 ounces                                      |
| Model Number            | Fockety0yaq3kih54                               |

## CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact Fockety customer support through your purchase platform or the official brand website. Please have your model number (Fockety0yaq3kih54) and purchase details ready.