

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fulealfly](#) /

› [Fulealfly DC406-LF Digital Camera User Manual](#)

Fulealfly DC406-LF

Fulealfly DC406-LF Digital Camera User Manual

Model: DC406-LF | Brand: Fulealfly

1. PRODUCT OVERVIEW

The Fulealfly DC406-LF is a compact digital camera designed for ease of use, featuring FHD 1080P video recording, 44MP image resolution, 16X digital zoom, and anti-shake technology. It includes a 32GB micro SD card and a neck lanyard for portability.



Image 1.1: Fulealfly DC406-LF Digital Camera with included accessories.

Key Features:

- 44 Megapixel Image Resolution
- FHD 1080P Video Recording
- 16X Digital Zoom
- Anti-Shake Function
- 2.4-inch LCD Display
- Built-in LED Fill Light
- Self-Timer and Continuous Shooting Modes
- Supports up to 32GB Micro SD Card
- USB-C Connectivity for Charging and Data Transfer

2. SETUP GUIDE

2.1 Battery and Micro SD Card Installation

Before first use, ensure the battery is fully charged and correctly inserted, along with the micro SD card.

1. Open the battery compartment cover located on the side of the camera.
2. Insert the provided Lithium Polymer battery with the green side facing up.
3. Insert the 32GB micro SD card into the designated slot with the metal contacts facing up.
4. Close the battery compartment cover securely.

Video 2.1: Instructions on how to install the battery and micro SD card.

2.2 Attaching the Neck Lanyard

The neck lanyard helps prevent accidental drops and makes the camera easy to carry.

1. Thread the thin loop of the lanyard through the small eyelet on the side of the camera.
2. Pass the main strap of the lanyard through the loop and pull it tight to secure.
3. Connect the two ends of the lanyard strap using the buckle.

Video 2.2: Guide on how to attach the neck lanyard to the camera.

2.3 Initial Camera Settings

Upon first power-on or after a reset, you may need to configure basic settings.

1. Long press the On/Off button to power on the camera.
2. Use the navigation buttons (up, down, left, right) and the OK button to navigate through the menu.
3. Adjust settings such as image size, anti-shake, face detection, effects, language, auto power off, frequency, and format as desired.

Video 2.3: Detailed steps on how to set up your camera's basic functions.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To turn the camera on or off, long press the On/Off button located on the top of the camera.

3.2 Taking Photos and Recording Videos

The camera supports both still photography and video recording.

1. **To Take a Photo:** Ensure the camera is in photo mode (indicated by an icon on the screen). Press the shooting button (shutter button) on top of the camera to capture an image.
2. **To Record a Video:** Press the 'Mode' button once to switch to video recording mode. Press the shooting button to start recording, and press it again to stop.

Video 3.1: Demonstrates how to take photos and record videos.

3.3 Using the LED Fill Light

The built-in LED fill light provides additional illumination in low-light conditions.

1. Long press the On/Off button to turn on the camera.
2. Press the 'Up' navigation button to activate the fill light. An icon will appear on the screen.
3. Press the 'Up' navigation button again to turn off the fill light.

Video 3.2: Instructions on how to activate and deactivate the LED fill light.

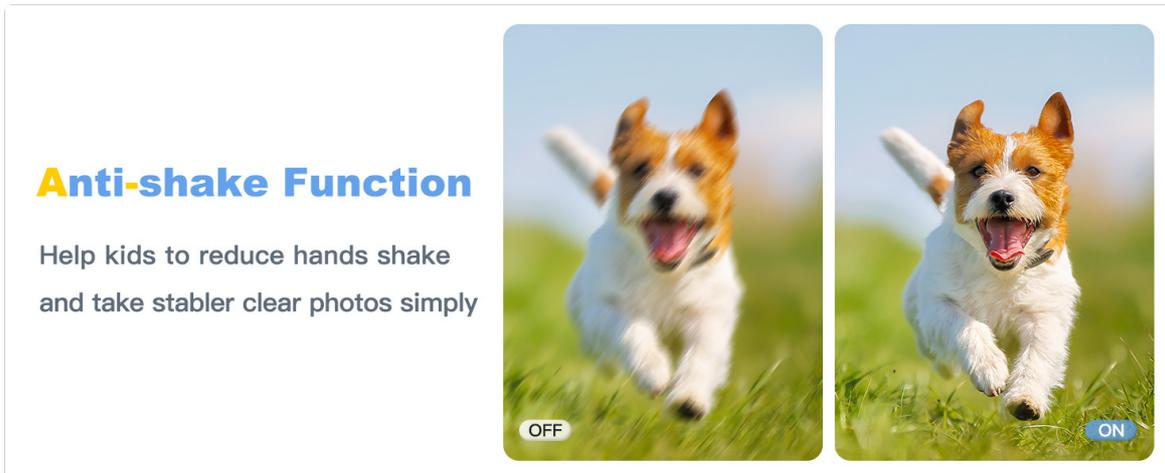


Image 3.1: Demonstrates the effect of the LED fill light in low-light conditions.

3.4 Digital Zoom

The camera features 16X digital zoom to magnify your subjects.

- Press the 'W' button to zoom out.
- Press the 'T' button to zoom in.

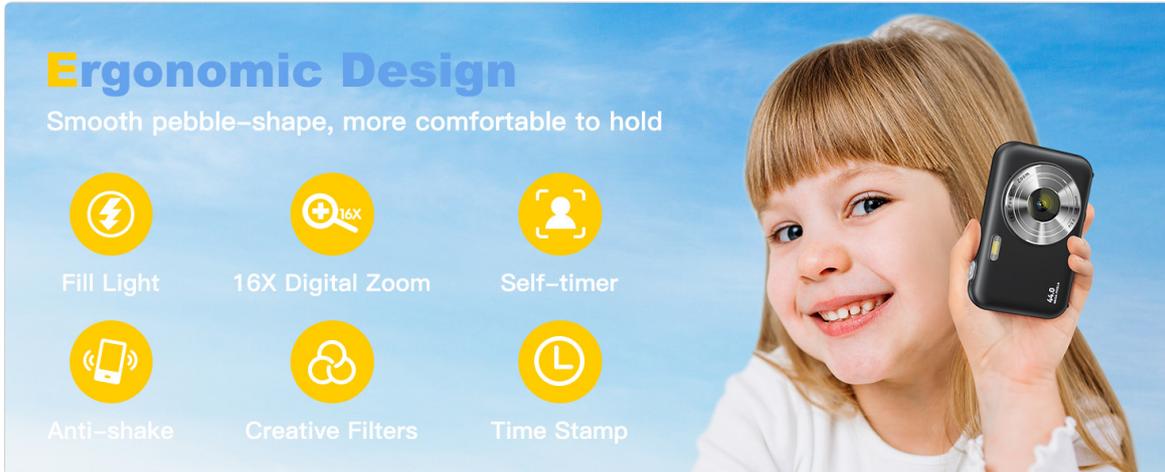


Image 3.2: Visual representation of 16X digital zoom.

3.5 Self-Timer Function

Use the self-timer for delayed shots, allowing you to be in the picture.

- Access the self-timer setting through the camera menu.
- Choose from 2-second, 5-second, or 10-second delay options.



16X Digital Zoom


You can press the “W” and “T” to zoom in or out

Image 3.3: Self-timer settings with 2s, 5s, and 10s options.

3.6 Anti-Shake Function

The anti-shake feature helps to reduce blur caused by camera movement, resulting in clearer images.

- This feature can be enabled or disabled in the camera's settings menu.

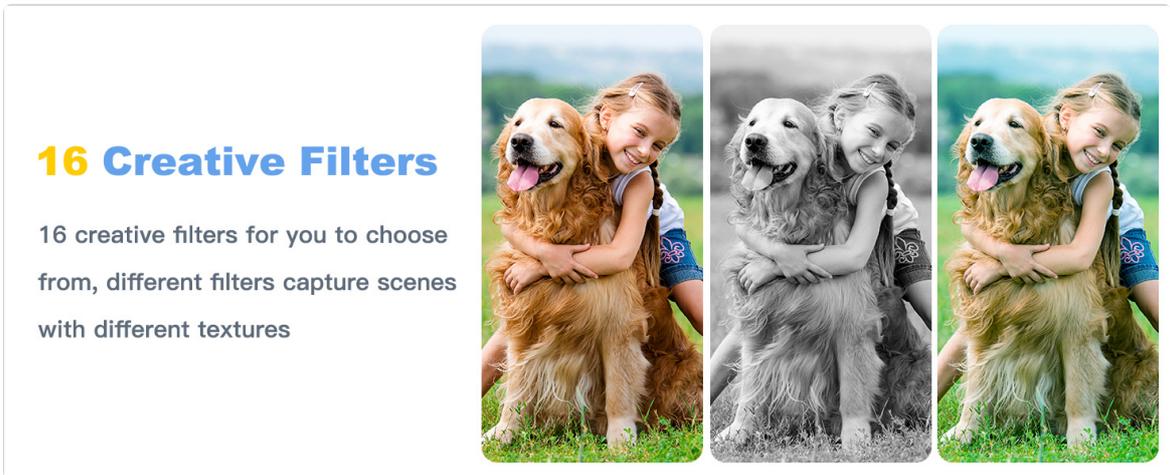

16 Creative Filters

16 creative filters for you to choose from, different filters capture scenes with different textures

Image 3.4: Visual comparison demonstrating the effectiveness of the anti-shake function.

3.7 Creative Filters

Enhance your photos with 16 creative filters available in the camera settings.

- Navigate to the 'Effect' option in the menu to select different filters like Normal, Black/White, Sepia, Red, etc.



OFF

LED Fill Light

ON

3.8 Date Stamp Function

You can enable or disable a date stamp on your photos and set the correct date and time.

1. Turn on the camera and press the 'Setting' button.
2. Use the navigation buttons to find 'Date Stamp' in the menu.
3. Select 'On' to enable the date stamp.
4. To set the date and time, select 'Set Date' and adjust the year, month, day, hour, minute, and second using the navigation buttons.

Video 3.6: How to enable and set the date stamp function.

3.9 Transferring Files to a Computer or Mobile Phone

You can transfer your photos and videos to a computer or mobile phone using the provided USB-C cable or an external card reader (not included).

1. **Using USB-C Cable:** Connect the camera to your computer using the USB-C cable. The camera should appear as a removable disk drive.
2. **Using a Card Reader:** Remove the micro SD card from the camera and insert it into a card reader. Connect the card reader to your computer or mobile phone.

Video 3.7: Guide on transferring files from the camera to a computer.

Why choose us?

- ★ Trustworthy Certificates
- ★ High Quality Images & Videos
- ★ Comes with All Accessories You Need
- ★ Professional 24H Online Team

Image 3.6: Illustrates connecting the camera to a computer or using a card reader for file transfer.

3.10 Webcam Functionality

The camera can be used as a webcam for video calls or live streaming.

- Connect the camera to your computer via the USB-C cable.
- Select 'Webcam' mode on the camera if prompted, or choose it from your computer's camera settings.



Image 3.7: The camera functioning as a webcam for video communication.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your camera.

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Remove the battery if the camera will not be used for an extended period.
- **Battery Care:** Charge the battery regularly, even if not in use, to maintain its health. Avoid fully discharging the battery frequently.

5. TROUBLESHOOTING

If you encounter issues with your Fulealfly DC406-LF camera, refer to the following common solutions:

Problem	Possible Solution
Camera does not turn on	Ensure the battery is fully charged and correctly inserted. Try charging the battery for at least 1-2 hours.
Cannot take photos/record videos	Check if the micro SD card is inserted correctly and has sufficient free space. The card might need to be formatted (this will erase all data).
Images are blurry	Ensure the lens is clean. Activate the anti-shake function in the settings. Hold the camera steady while shooting.
Camera freezes or becomes unresponsive	Remove and reinsert the battery to perform a hard reset. If the issue persists, try formatting the micro SD card.

Problem	Possible Solution
Files not transferring to computer	Ensure the USB-C cable is securely connected to both the camera and the computer. Try a different USB port or cable. Check if the camera is in the correct mode for data transfer.

If these solutions do not resolve the issue, please contact Fulealfly customer support for further assistance.

6. SPECIFICATIONS

Detailed technical specifications for the Fulealfly DC406-LF Digital Camera:

Feature	Specification
Brand	Fulealfly
Model Number	DC406-LF
Photo Sensor Technology	CMOS
Effective Still Resolution	44 MP
Video Resolution	FHD 1080P
Digital Zoom	16X
Screen Size	2.4 Inches (LCD)
Image Stabilization	Yes (Anti-Shake)
Focus Type	Auto Focus
Flash	Built-In (LED Fill Light)
Storage Media	Micro SDXC (up to 32 GB supported)
Included SD Card	32 GB
Battery Type	Lithium Polymer (700mAh)
Connectivity	USB-C
Shooting Modes	Automatic, Continuous Shooting, Self Timer
Water Resistance Level	Not Water Resistant

7. WARRANTY AND SUPPORT

Fulealfly products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official

Fulealfly website.

You can also contact the seller directly through the Amazon platform by navigating to your order history and selecting 'Ask a question' next to the product. This ensures responsive 1-to-1 service for any inquiries regarding your purchase.