

[Manuals.plus](#) /

> [Xiaomi](#) /

> Xiaomi Redmi Pad SE 11" 8GB/256GB User Manual

Xiaomi Redmi Pad SE

Xiaomi Redmi Pad SE 11" 8GB/256GB User Manual

Model: Redmi Pad SE | Brand: Xiaomi

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Xiaomi Redmi Pad SE. Please read this manual thoroughly before using the device and keep it for future reference.

Package Contents

- Redmi Pad SE
- Power Adapter
- USB Cable
- Warranty Card
- User Guide (this manual)



Image: The Xiaomi Redmi Pad SE, showcasing its sleek gray design with the display on the right and the rear camera module on the left.

SETUP

Initial Charging

Before first use, fully charge your Redmi Pad SE using the provided power adapter and USB cable. Connect the USB cable to the tablet's USB Type-C port and the power adapter to a wall outlet. The charging indicator will show the charging status.

Powering On/Off

To power on, press and hold the Power button until the Xiaomi logo appears. To power off, press and hold the Power button, then select "Power off" from the options that appear on the screen.

First-time Setup

Upon first power-on, follow the on-screen instructions to set up your device. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and setting up security features like AI Face Unlock.

OPERATING INSTRUCTIONS

Display and Navigation

The Redmi Pad SE features an 11-inch FHD+ display with a refresh rate of up to 90Hz. Navigate the interface using touch gestures: tap to select, swipe to scroll, pinch to zoom.

Camera Usage

The tablet is equipped with an 8MP rear camera and a 5MP front camera. Open the Camera app to capture photos and videos. Select between photo, video, and other modes. The rear camera supports 1080P video recording at 30fps, and the front camera also supports 1080P video recording at 30fps.

Audio and Multimedia

Enjoy immersive audio with the quad speakers supporting Dolby Atmos. Connect headphones via the 3.5mm audio jack for private listening. Use the pre-installed media players to enjoy music and videos.

Connectivity

Wi-Fi: Connect to Wi-Fi networks (2.4 GHz and 5 GHz) via Settings > Wi-Fi. Ensure a stable connection for internet access.

Bluetooth: Pair with Bluetooth devices (e.g., headphones, keyboards) via Settings > Bluetooth. The device supports Bluetooth 5.0.

Storage Management

The device comes with 256GB of internal storage. You can expand storage up to 1TB using a microSD card (not included). Manage files and applications through the File Manager app and Settings > Storage.

MAINTENANCE

Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal longevity. Use only the original charger and cable.

Storage

When storing the device for extended periods, ensure it is partially charged (around 50%) and stored in a cool, dry

place away from direct sunlight.

TROUBLESHOOTING

Issue	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Screen is unresponsive.	Restart the device by pressing and holding the Power button for about 10 seconds until it reboots.
Wi-Fi connection issues.	Check if Wi-Fi is enabled. Restart your router. Forget the network and reconnect.
Battery drains quickly.	Reduce screen brightness, close unused apps, disable background data for certain apps, or turn off Wi-Fi/Bluetooth when not in use.
Apps are crashing or freezing.	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app or reinstall it. Ensure sufficient free storage space.
Device is slow or lagging.	Close background applications. Clear cache and temporary files. Consider a factory reset if the issue persists (back up data first).
Camera not working.	Ensure the Camera app has necessary permissions. Restart the device. Clear the Camera app's cache and data.

TECHNICAL SPECIFICATIONS

Feature	Detail
Processor	Snapdragon 680 Mobile Platform (6nm, up to 2.4 GHz)
GPU	Qualcomm Adreno
RAM	8GB LPDDR4X
Internal Storage	256GB eMMC 5.1
Expandable Storage	Up to 1TB (microSD)
Dimensions	255.53 mm x 167.08 mm x 7.36 mm
Display	11-inch FHD+ (1920 x 1200), 90Hz refresh rate, 400 nits (typ)
Display Certifications	TÜV Rheinland Low Blue Light, TÜV Rheinland Flicker Free
Rear Camera	8MP, f/2.0
Front Camera	5MP, f/2.2

Feature	Detail
Battery	8000mAh (typ)
Charging	10W USB Type-C
Security	AI Face Unlock
Wi-Fi	2.4 GHz 5 GHz
Bluetooth	Bluetooth 5.0
Audio	Quad speakers, Dolby Atmos, 3.5mm headphone jack
Sensors	Virtual ambient light sensor, Accelerometer, Hall sensor
Operating System	MIUI Pad 14 based on Android 13

WARRANTY AND SUPPORT

Product Warranty

Your Xiaomi Redmi Pad SE comes with a one-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please visit the official Xiaomi support website or contact their customer service hotline. Refer to the warranty card or Xiaomi's official website for specific contact details in your region.

For more information, visit: [Xiaomi Official Support](#)