

[manuals.plus](#) /› [Andoer](#) /› [Andoer Corpora Mini Camera User Manual](#)**Andoer Corpora**

Andoer Corpora Mini Camera User Manual

Model: Corpora (3ade3dde-1b5b-43eb-ad8e-558f4922a6d1)

1. INTRODUCTION

The Andoer Corpora Mini Camera is a compact and versatile recording device designed for various applications, including daily recording, service, and delivery monitoring. It features 1080P video resolution, a 180° rotating lens, 90° wide-angle view, night vision capabilities, and motion detection. This manual provides detailed instructions for setting up, operating, and maintaining your camera.

2. WHAT'S IN THE Box

- 1 x Andoer Corpora Mini Camera
- 1 x USB Cable
- 1 x User Manual
- Mounting accessories (as pictured)



Image: Contents of the Andoer Corpora Mini Camera package, including the camera and USB cable.

3. PRODUCT OVERVIEW

3.1 Key Features

- **1080P HD Video Recording:** Captures clear video at 1920*1080P resolution.
- **180° Rotating Lens:** Allows flexible adjustment of the camera angle.
- **90° Wide Angle View:** Provides a broad field of vision.
- **Night Vision Function:** Enables clear recording in low-light conditions.
- **Motion Detection:** Automatically records when movement is detected.
- **Long Standby Time:** Equipped with a 500mAh lithium battery, offering up to 3 hours of recording.
- **Large Memory Capacity:** Supports TF cards up to 128GB for ample storage.
- **Clip-on Design:** Portable and easy to attach to clothing or backpacks.

3.2 Components

The camera features a compact design with accessible controls and ports.



Image: Front view of the Andoer Corpora Mini Camera, highlighting its compact size and rotating lens.

- **Rotating Lens:** Located at the top, adjustable by 180 degrees.
- **Power Button:** To turn the device on/off.
- **Mode Switch:** For selecting recording modes (Normal, Motion Detection).
- **TF Card Slot:** For inserting a Micro SD card (up to 128GB).
- **USB-C Port:** For charging and data transfer.
- **Reset Button:** Small pinhole for resetting the device.
- **Back Clip:** For easy attachment to clothing or surfaces.

90°Wide Angle & Night Vision

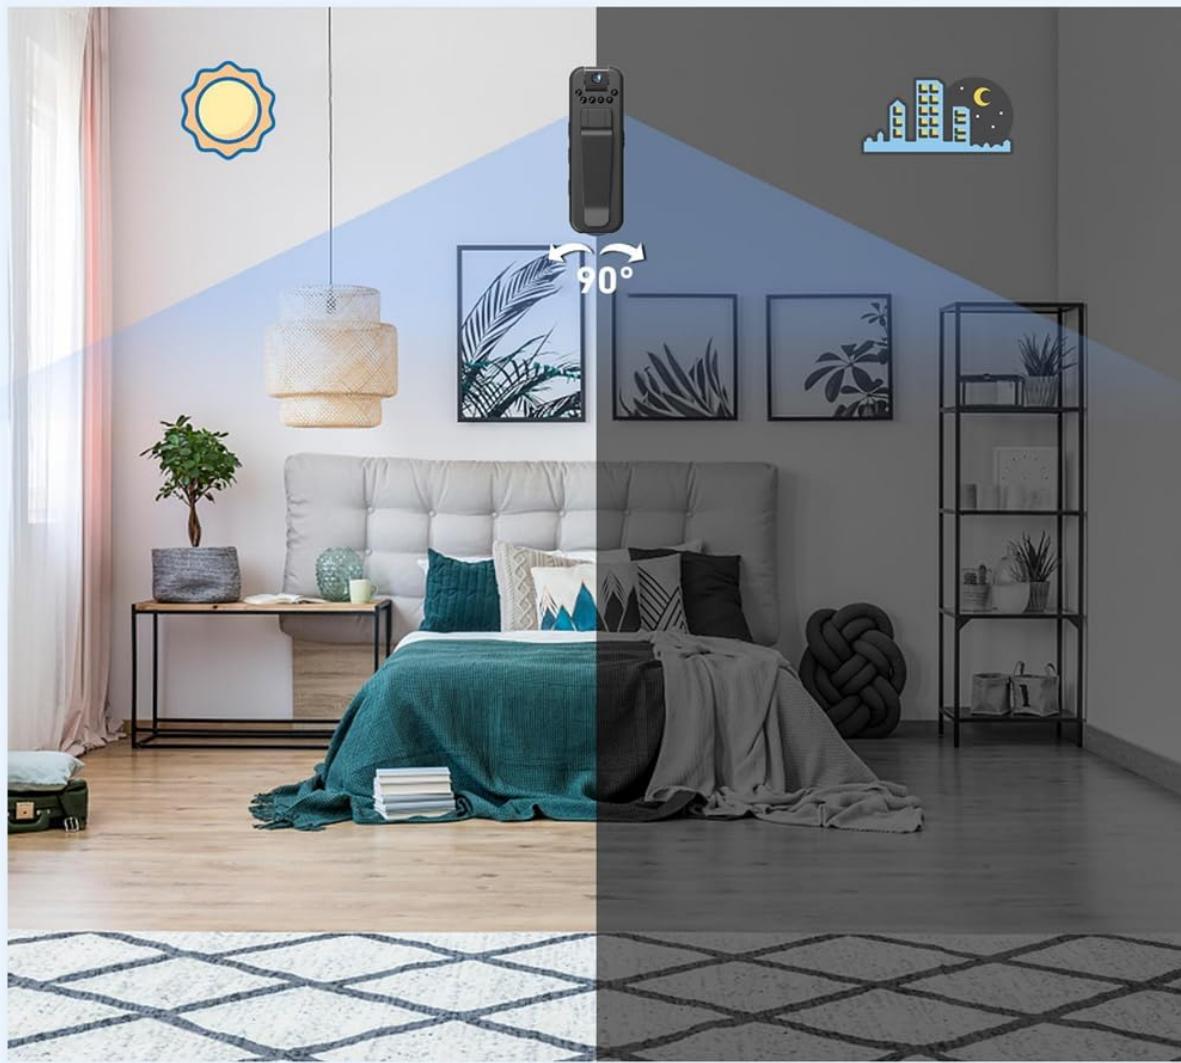


Image: Side view of the camera, detailing the power button, mode switch, TF card slot, and USB-C port.

4. SETUP

4.1 Charging the Camera

1. Connect the camera to a power source using the provided USB cable.
2. The indicator light will show charging status (e.g., red for charging, blue for fully charged).
3. Ensure the camera is fully charged before first use for optimal battery life.

4.2 Inserting the TF Card

1. Locate the TF card slot on the side of the camera.
2. Gently insert a Micro SD (TF) card (up to 128GB, not included) into the slot until it clicks into place.
3. Ensure the card is inserted correctly to avoid damage.

Your browser does not support the video tag.

Video: Demonstration of inserting a TF card and operating the camera's mode switch. This video shows the physical interaction with the device's components.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the Power Button until the indicator light illuminates.
- To power off, press and hold the Power Button again until the indicator light turns off.

5.2 Recording Modes

The camera offers different recording modes, selectable via the mode switch.

1. **Normal Recording:** Slide the mode switch to the designated position for continuous video recording. The camera will record until the memory card is full or the battery runs out.
2. **Motion Detection Recording:** Slide the mode switch to the motion detection position. The camera will only record when movement is detected within its field of view, conserving battery and storage.
3. **Night Vision:** The camera features a night vision function. Refer to the manual for specific instructions on how to activate/deactivate night vision, typically through a dedicated button or mode.

Your browser does not support the video tag.

Video: Overview of the camera's features, including night vision and motion detection capabilities, and how to operate the rotating lens.

Your browser does not support the video tag.

Video: Demonstrates the camera's display and recording functionality, showing how to view recorded footage directly on the device.

5.3 Adjusting the Lens

The camera's lens can be rotated 180° to capture footage from various angles. Gently rotate the lens to your desired position before starting recording.

Suitable for Different Purposes



Image: The camera highlighting its 180° rotating lens for flexible recording angles.

6. DATA TRANSFER

To access recorded files, connect the camera to your computer using the USB cable. The camera will appear as a removable disk, allowing you to copy files to your computer.

7. MAINTENANCE

- Keep the camera clean and free from dust and debris.
- Avoid exposing the camera to extreme temperatures or moisture.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.
- Regularly back up important recordings from your TF card.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera not turning on	Low battery; device malfunction.	Charge the camera fully. If problem persists, perform a reset using the reset pinhole.
Not recording	No TF card; TF card full or corrupted; incorrect mode.	Insert a TF card. Format or replace the TF card. Ensure correct recording mode is selected.
Poor video quality	Low light conditions; dirty lens.	Ensure adequate lighting or activate night vision. Clean the lens gently with a soft cloth.
Cannot access files on computer	Loose USB connection; driver issue.	Ensure USB cable is securely connected. Try a different USB port or computer.

9. SPECIFICATIONS

Feature	Detail
Video Resolution	1920*1080P
Video Format	AVI
Recording Format	WAV 512 kbps
Lens Angle Range	90° (Real Angle Of View)
Lens Rotation	180°
Storage Support	TF card up to 128GB
Battery Capacity	3.7V/500mAh lithium battery
Recording Time	Up to 3 hours (180 minutes)
USB Interface	High Speed USB2.0
Product Weight	23g
Dimensions	8*2.5*11.5cm (approx. 3.15"W x 0.98"D x 4.53"H)
Night Vision	Yes
Motion Detection	Yes
Water Resistance Level	Not Water Resistant

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for warranty claims.