

MOSISO 360 Protective Laptop Shoulder Bag (13.3 inch)

MOSISO 360 Protective Laptop Shoulder Bag (13.3 Inch)
Instruction Manual

Model: 360 Protective Laptop Shoulder Bag (13.3 inch) | Brand: MOSISO

- Introduction
- Features
- Setup
- Operating
- Maintenance
- Troubleshooting
- Specifications
- Support

1. INTRODUCTION

Thank you for choosing the MOSISO 360 Protective Laptop Shoulder Bag. This manual provides essential information to help you understand, set up, and maintain your new laptop bag. Designed for 13-13.3 inch notebooks, this bag offers comprehensive protection and convenient storage solutions for your devices and accessories. Please read this manual thoroughly before use.



Image 1.1: The MOSISO 360 Protective Laptop Shoulder Bag in Teal Green, showcasing its sleek design and multiple compartments.

2. PRODUCT FEATURES

The MOSISO 360 Protective Laptop Shoulder Bag is engineered with several features to enhance protection and usability:

- **360-Degree Protection:** Reinforced interior edges with foam padding and fluffy fleece lining protect your laptop from accidental drops, bumps, and scratches.
- **Multiple Storage Pockets:** Features a main inner compartment for your laptop/tablet and four front zipper pockets for quick access to essentials like cell phones, pens, wallets, and keys.
- **Convenient Access:** Side-opening double zippers allow for smooth and easy access to your laptop.
- **Versatile Carrying Options:** Includes a removable and adjustable padded shoulder strap (28.54 to 52.56 inches) and an extendable PU handle for comfortable hand-carrying. The handle can be tucked away when not in use.

- **Travel-Friendly Design:** A back trolley suitcase belt allows the bag to be securely attached to luggage handles, simplifying travel.
- **Durable Construction:** Made with high-quality materials for long-lasting use.



Image 2.1: Close-up view highlighting the 360-degree all-around protection with extra thick cushion and reinforced interior edges.

Keep Small Items Organized



Image 2.2: The front of the bag with its four zipper pockets open, demonstrating how small items like a phone, power bank, mouse, and cables can be organized.


3. SETUP

Before using your MOSISO laptop bag, follow these simple steps for initial setup:

1. **Unpack the Bag:** Carefully remove the laptop bag and any accessories, such as the shoulder strap, from its packaging.
2. **Inspect for Damage:** Check the bag for any signs of damage from shipping. If any damage is found, contact customer support immediately.
3. **Attach Shoulder Strap (Optional):** If you prefer to carry the bag over your shoulder, attach the adjustable shoulder strap to the D-rings located on the sides of the bag using the metal clips. Adjust the strap length for comfortable carrying.
4. **Prepare Main Compartment:** Open the side-opening double zippers of the main compartment. Ensure the fluffy fleece lining is smooth and free of debris before inserting your laptop.
5. **Organize Accessories:** Utilize the four front zipper pockets to store your laptop charger, mouse, pens, wallet, keys, and other small items. This helps keep your belongings organized and easily accessible.



Portable Handle

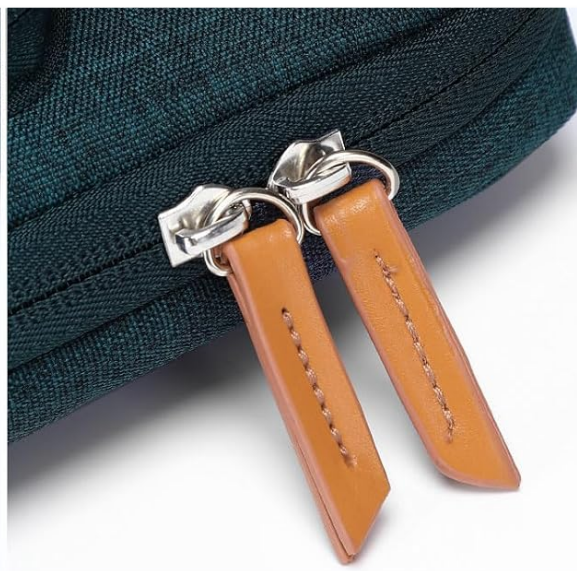

Double Zippers



Back Luggage Strap

Image 3.1: This image illustrates the extendable PU handle, the smooth double zippers for the main compartment, and the convenient back luggage strap for travel.

4. OPERATING INSTRUCTIONS

Using your MOSISO laptop bag is straightforward. Follow these guidelines for optimal use:

1. **Inserting Your Laptop:** Open the main compartment zippers. Gently slide your 13-13.3 inch laptop or tablet into the padded compartment. Ensure it fits snugly to maximize protection. Close the zippers completely.
2. **Accessing Accessories:** Use the front zipper pockets for items you need to access quickly. The various sizes of these pockets are designed to accommodate different small accessories.
3. **Carrying the Bag:**
 - **By Hand:** Use the extendable PU handle for comfortable hand-carrying. When not needed, the handle can be

tucked away for a sleeker profile.

- **Over Shoulder:** If the shoulder strap is attached, carry the bag over your shoulder. Adjust the strap to a comfortable length to distribute weight evenly.
- **On Luggage:** For travel, slide the back trolley suitcase belt over the handle of your rolling luggage for secure transport.

4. **Securing Contents:** Always ensure all zippers are fully closed before carrying the bag to prevent items from falling out.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the various compartments and how to organize items within the MOSISO 360 Protective Laptop Shoulder Bag, highlighting its practical design for daily use.

Your browser does not support the video tag.

Video 4.2: A detailed overview of the MOSISO 360 Protective Laptop Shoulder Bag, showcasing its features, including the padded interior, multiple pockets, and versatile carrying options.

5. MAINTENANCE

Proper care will extend the life and appearance of your laptop bag:

- **Cleaning:** For minor spills or dirt, wipe the exterior with a damp cloth and mild soap. Do not machine wash or tumble dry. Allow to air dry completely.
- **Stain Removal:** For stubborn stains, use a specialized fabric cleaner suitable for polyester materials. Test on an inconspicuous area first.
- **Zipper Care:** Keep zippers free of debris. If zippers become stiff, apply a small amount of zipper lubricant or wax.
- **Storage:** When not in use, store the bag in a cool, dry place away from direct sunlight to prevent material degradation.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Laptop does not fit:** Ensure your laptop's dimensions are within the specified internal dimensions of the bag (14.17 x 9.25 x 0.79 inches). This bag is designed for 13-13.3 inch laptops.
- **Zippers are sticking:** Clean any visible debris from the zipper teeth. Apply a small amount of zipper lubricant (e.g., beeswax, silicone spray) to the teeth and gently work the zipper back and forth.
- **Bag appears dirty:** Refer to the "Maintenance" section for cleaning instructions. Avoid harsh chemicals that may damage the fabric.
- **Shoulder strap detaches:** Ensure the metal clips are fully closed and securely fastened to the D-rings on the bag. Check for any damage to the clips or D-rings.

7. SPECIFICATIONS

Feature	Detail
Internal Dimensions (L x W x H)	14.17 x 9.25 x 0.79 inches
External Dimensions (L x W)	14.57 x 10.24 inches
Left Raised Pocket (L x W)	8.66 x 5.31 inches
Right Raised Pocket (L x W)	7.68 x 7.49 inches
Horizontal Pocket (L x W)	6.10 x 5.91 inches
Vertical Pocket (L x W)	6.85 x 3.74 inches
Item Weight	15.1 ounces
Color	Teal Green
Number of Compartments	1 main, 4 front zipper pockets
Shoulder Strap Length	28.54 to 52.56 inches (adjustable)
Compatibility	MacBook Pro 14 (2025-2021), MacBook Air 13 (2017-2010), MacBook Pro 13 (2008-2015), Surface Book/Laptop 13.5-13.8, Dell Latitude/Chromebook 13.3, HP Elitebook/Spectre/Envy/Stream 13.3, Lenovo IdeaPad/ThinkPad 13.3, Acer Chromebook 13.3

8. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your MOSISO 360 Protective Laptop Shoulder Bag, please refer to the seller's return policy or contact MOSISO customer service directly through the platform where you made your purchase. Keep your purchase receipt for warranty claims, if applicable.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question