

## VINABTY DG11J1-34

# VINABTY DG11J1-34 Replacement Remote Control User Manual

For Whirlpool 3D AC Air Conditioning Units

## 1. INTRODUCTION


This manual provides comprehensive instructions for the VINABTY DG11J1-34 replacement remote control. This remote is designed to operate various Whirlpool 3D AC Air Conditioning models, offering a direct replacement without the need for complex programming. Please read this manual carefully to ensure proper use and maintenance of your remote control.

**Compatible Models:** WHIRLPOOL DG11J1-34, AMD018, AMD019, AMD021, AMD021IX, AMD024, AMD027, AMD314, AMD386, FM09IDUWA2, FM18IDUWA2, and similar models.

## 2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

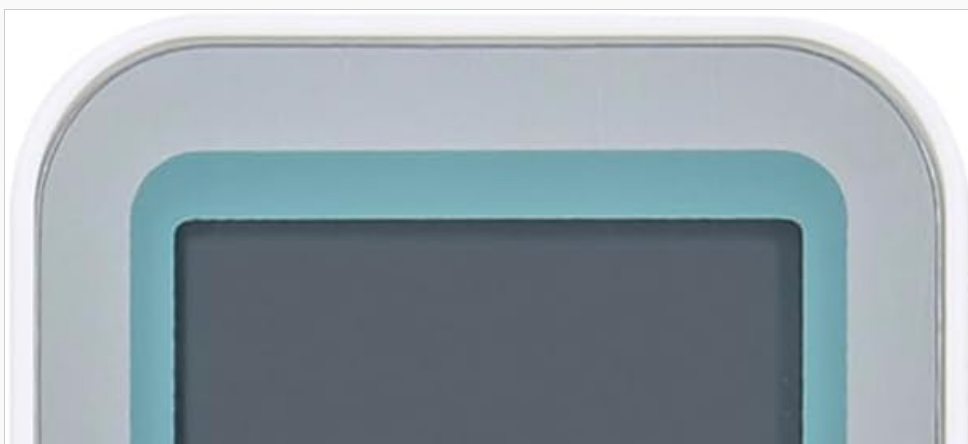



*Image: Back view of the remote control with the battery cover removed, revealing the battery slots.*

**Note:** No programming or setup is required. Once batteries are installed, the remote is ready for use.

### 3. OPERATING INSTRUCTIONS

Point the remote control directly at your air conditioning unit's receiver. Ensure there are no obstructions between the remote and the unit.



*Image: Front view of the remote control, displaying the buttons and LCD screen.*

#### Button Functions:

- **ON/OFF:** Powers the air conditioning unit on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TURBO:** Activates rapid cooling or heating for a quick temperature change.
- **SWING:** Controls the louver movement for air direction.
- **SLEEP:** Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep.
- **DIM:** Adjusts the brightness of the air conditioner's display.
- **6TH SENSE:** Activates Whirlpool's 6th Sense technology for intelligent temperature and humidity control.
- **AROUND U:** Uses a sensor in the remote to measure the temperature around the user and adjust the AC accordingly.
- **TIMER ON/OFF:** Sets a timer for the unit to turn on or off automatically.

- **CLOCK:** Sets the current time on the remote control.
- **POWER SAVER:** Activates energy-saving mode.
- **Temperature Up/Down Arrows:** Adjusts the desired temperature setting.

## 4. MAINTENANCE

### Battery Replacement:

Replace batteries when the remote's response becomes sluggish or the display fades. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

### Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 5. TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote and the air conditioning unit.
  - Confirm the remote is pointed directly at the unit's infrared receiver.
- **Short transmission distance:**
  - Replace batteries if they are low.
  - Ensure no strong light sources (like direct sunlight) are interfering with the infrared signal.

## 6. SPECIFICATIONS

- **Brand:** VINABTY
- **Model Number:** DG11J1-34
- **Compatible Devices:** Air Conditioning units (Whirlpool 3D AC)
- **Connectivity Technology:** Infrared
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Material:** ABS
- **Color:** Black (as per product image)
- **Special Feature:** Ergonomic design
- **Power Source:** 2 x AAA Batteries (not included)

## 7. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product data. For any issues or support inquiries, please refer to the retailer or manufacturer from whom the product was purchased. Keep your purchase receipt as proof of purchase.

