

[Manuals.plus](#) /

> [Moulinex](#) /

> Moulinex Mix & Move Mini Personal Blender LM15F127 Instruction Manual

Moulinex LM15F127

Moulinex Mix & Move Mini Personal Blender LM15F127 Instruction Manual

Model: LM15F127

1. INTRODUCTION

Thank you for choosing the Moulinex Mix & Move Mini Personal Blender. This appliance is designed for convenient blending of smoothies, shakes, and other beverages, offering portability with its two Tritan to-go bottles. With 300W of power, it provides efficient blending for your daily needs. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: The Moulinex Mix & Move Mini Personal Blender, showcasing the main unit with a bottle filled with berries and a second bottle containing a blended red smoothie.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or any other liquid.
- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.

- Keep hands and utensils out of the blending bottle while blending to prevent injury and damage to the blender.
- Blades are sharp. Handle with care when cleaning.
- Ensure the bottle is securely attached to the motor unit before operating.
- Do not blend hot liquids, as pressure buildup may cause the bottle to burst.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

3. PRODUCT COMPONENTS

The Moulinex Mix & Move Mini Personal Blender consists of the following main components:

1. **Motor Unit:** The base containing the 300W motor and control button.
2. **Blending Blade Assembly:** Removable blades for efficient blending.
3. **Tritan To-Go Bottles (x2):** Durable 0.6 L capacity bottles for blending and carrying.
4. **Drinking Lids (x2):** Lids designed for easy drinking on the go.



Image 3.1: Overview of the Moulinex Mix & Move Mini Personal Blender components, including the motor unit and two empty Tritan bottles.

4. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (bottles, lids, blade assembly) in warm, soapy water. Rinse thoroughly and dry.

1. Place the motor unit on a clean, dry, and stable surface.
2. Fill one of the Tritan bottles with your desired ingredients. Do not overfill beyond the maximum fill line.
3. Screw the blending blade assembly onto the open end of the filled bottle until it is securely tightened.
4. Invert the bottle and blade assembly, then align the tabs on the blade assembly with the slots on the motor unit.
5. Press down and twist the bottle clockwise until it locks into place on the motor unit.



EASY-CLEANING

Removable blades

سهولة تنظيف

شفرات قابلة للإزالة

Image 4.1: A Tritan bottle prepared with various ingredients layered inside, illustrating how to fill the bottle before blending.

5. OPERATING INSTRUCTIONS

Once the blender is assembled and locked, you are ready to blend.

1. Ensure the motor unit is plugged into a suitable power outlet.
2. Press and hold the single control button on the front of the motor unit to begin blending.
3. Blend until your desired consistency is achieved. For best results, blend in short pulses rather than continuously.
4. Release the button to stop blending.
5. Unplug the motor unit from the power outlet.
6. Twist the bottle counter-clockwise and lift it off the motor unit.
7. Unscrew the blade assembly from the bottle.
8. Attach a drinking lid to the bottle for on-the-go consumption.



Image 5.1: A close-up of a hand activating the blender by pressing the ergonomic single-button control.



Image 5.2: Illustrates the smooth blending capability, with a person holding a freshly blended smoothie bottle and the blender unit nearby.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your blender.

1. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
2. **Blade Assembly:** Carefully unscrew the blade assembly from the bottle. Rinse the blades under running water immediately after use to prevent food from drying on them. Use a brush if necessary to remove stubborn residue. Handle blades with extreme caution as they are sharp.
3. **Bottles and Lids:** Wash the Tritan bottles and drinking lids in warm, soapy water. They are also dishwasher safe (top rack recommended).
4. Ensure all parts are completely dry before storing.



Image 6.1: Demonstrates the easy cleaning process of the removable blade assembly under running water. For convenient storage, the compact design allows the blender and bottles to fit easily into kitchen cupboards.



Image 6.2: The compact design of the blender and bottles allows for space-saving storage in a kitchen cabinet.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; bottle not correctly assembled/locked.	Ensure the power cord is securely plugged into a working outlet. Verify the bottle and blade assembly are correctly locked onto the motor unit.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Blend in pulses.
Motor stops during operation.	Overheating due to continuous use or overloading.	Unplug the blender and let it cool down for at least 15 minutes. Reduce the load or blend in shorter intervals.
Leakage from the bottle.	Blade assembly not tightened properly; bottle overfilled.	Ensure the blade assembly is securely tightened onto the bottle. Do not fill ingredients past the maximum fill line.

8. SPECIFICATIONS

- **Brand:** Moulinex
- **Model Number:** LM15F127
- **Power:** 300 Watts
- **Capacity:** 0.6 Liters per bottle (x2 bottles included)
- **Material:** Plastic (Tritan bottles)
- **Color:** White
- **Product Dimensions:** Approximately 12.3D x 12.3W x 31H centimeters (assembled)
- **Item Weight:** Approximately 1.09 Kilograms
- **Special Features:** Compact, Portable, Removable Blade, Removable Tritan Bottles, Single-Button Control
- **Included Components:** Motor Unit, 2x Tritan Bottles, 2x Drinking Lids, Blade Assembly

9. WARRANTY AND SUPPORT

This Moulinex product comes with a 2-year warranty. For warranty claims or technical support, please refer to your purchase documentation or contact Moulinex customer service.

Moulinex is committed to product longevity. Parts for this appliance are repairable at a fair price for up to 15 years, with availability through 6200 approved repair centers worldwide. This commitment aims to help protect the environment and reduce waste.



Image 9.1: Moulinex's commitment to 15-year repairability, supported by a global network of repair centers.