

[manuals.plus](#) /› [EasySMX](#) /› [EasySMX 9100Pro Wired Gaming Controller User Manual](#)

EasySMX 9100PRO

EasySMX 9100Pro Wired Gaming Controller User Manual

MODEL: 9100PRO

1. Introduction

Thank you for choosing the EasySMX 9100Pro Wired Gaming Controller. This manual provides essential information for setting up, operating, and maintaining your controller. Please read it thoroughly to ensure optimal performance and a satisfying gaming experience.

The EasySMX 9100Pro is a versatile wired gamepad designed for comfort and precision across multiple platforms, including Windows PC, PS3, Android TV BOX, and Tesla vehicles.

2. Product Overview

The EasySMX 9100Pro controller features an ergonomic design with Hall Effect triggers, long-life buttons, and a Turbo function for enhanced gameplay.

MULTI PLATFORM GAMING CONTROLLER

Supporting PC/PS3/Android/
Android TV BOX/Steam/Tesla



Figure 2.1: EasySMX 9100Pro Controller highlighting its compatibility with various platforms.

Key Features:

- **Universal Compatibility:** Supports Windows PC/Laptop, PS3, Android TV BOX, and Tesla.
- **Plug-and-Play:** USB wired connection for easy setup without additional drivers. Cable length is 7.1 ft (approximately 2.16 meters).
- **Precise Control:** Hall Effect triggers provide a comfortable feel, long button life, low latency, and enhanced gaming accuracy.
- **Turbo Function:** Customize turbo with any button for rapid actions.
- **Designed for Comfort:** Larger size suitable for users with big hands, featuring soft materials around the grips for an ergonomic and anti-slip experience.



Figure 2.2: Key components of the EasySMX 9100Pro Controller.

3. Setup Instructions

3.1 Connecting the Controller

The EasySMX 9100Pro controller is designed for plug-and-play convenience. Simply connect the USB cable to an available USB port on your device.

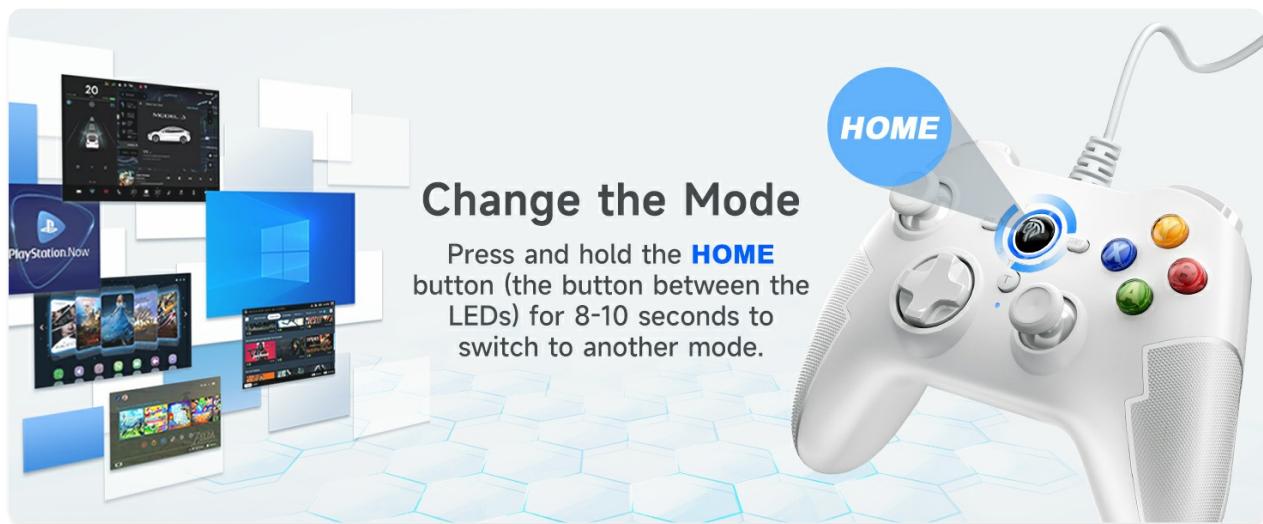


Figure 3.1: Plug and Play connection for the controller.

3.2 Device Compatibility Notes

- **Windows PC/Laptop:** The controller will automatically install necessary drivers upon first connection.
- **PS3:** Connect directly to an available USB port.
- **Android TV BOX:** Connect directly to an available USB port.
- **Tesla:** Use the glove box USB-A port for connection. Model 3 / Y 2022 and newer models may not have data transfer function in the center console ports.
- **Android Phones/Tablets & Steam Deck:** A USB-C to USB-A adapter is required if your device does not have a standard USB-A port. (Adapter not included).



Figure 3.2: USB-C to USB-A adapter requirement for certain devices.

4. Operating Instructions

4.1 Hall Effect Triggers

The Hall Effect triggers provide precise and smooth control with an accuracy of up to 0.1mm. This technology ensures a longer lifespan and consistent performance for your triggers.

HALL EFFECT LINEAR TRIGGERS

Accuracy up to 0.1mm, smoother control & Longer life



Figure 4.1: Hall Effect Linear Triggers for precise input.

4.2 Turbo Function

The Turbo function allows you to assign rapid-fire capabilities to any button. This can be beneficial in games requiring quick, repeated button presses.



Figure 4.2: Turbo Function button and its effect in gameplay.

4.3 Dual Vibration Feedback

Experience immersive gameplay with the built-in dual vibration motors. These motors provide realistic feedback for in-game events like bumps, shocks, and gunshots.



Figure 4.3: Dual Vibration Feedback for immersive gaming.

4.4 Ergonomic Design

The controller features an ergonomic shape with soft rubber cover grips, providing a comfortable and anti-slip hold, especially beneficial for extended gaming sessions.



Figure 4.4: Ergonomic design with comfortable grips.

4.5 Switching Modes

To switch between different modes (e.g., Xinput, Dinput for PC, or specific console modes), press and hold the **HOME** button (the button between the LEDs) for 8-10 seconds.



Figure 4.5: How to switch controller modes.

4.6 LED Indicators

The LED indicators on the controller provide information about the current connection mode and player number. Refer to the diagram below for details:



Figure 4.6: LED Indicator patterns for various devices and modes.

4.7 Official Product Video

Your browser does not support the video tag.

Video 4.7: An official overview of the EasySMX Wired Controller, demonstrating its features and compatibility with Windows PC, PS3, Android TV, and Tesla.

5. Maintenance

To ensure the longevity and optimal performance of your EasySMX 9100Pro controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly around the controller to prevent damage.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

6. Troubleshooting

If you encounter any issues with your EasySMX 9100Pro controller, please refer to the following common solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely connected to both the controller and the device.
 - Try connecting the controller to a different USB port on your device.

- Restart your device (PC, console, Android TV Box).
- Verify that the correct mode is selected for your device by holding the HOME button for 8-10 seconds to cycle through modes.

- **Buttons or Joysticks Not Working Correctly:**

- Check for any physical obstructions or debris around the buttons or joysticks.
- Test the controller on another compatible device to determine if the issue is with the controller or the original device.
- For PC, ensure drivers are correctly installed. You may need to check your device manager.

- **No Vibration Feedback:**

- Ensure the game you are playing supports vibration feedback.
- Check in-game settings to ensure vibration is enabled.

If these steps do not resolve the issue, please contact EasySMX customer support for further assistance.

7. Specifications

Feature	Detail
Model Number	9100PRO
Product Dimensions	6.06 x 4.92 x 2.36 inches
Item Weight	11.64 ounces
Connectivity	Wired USB
Cable Length	7.1 ft (approx. 2.16 m)
Trigger Technology	Hall Effect Linear Triggers
Vibration	Dual Vibration Motors
Compatibility	Windows PC/Laptop, PS3, Android TV BOX, Tesla

8. Warranty and Support

EasySMX products are designed for quality and reliability. For any questions, concerns, or issues regarding your EasySMX 9100Pro controller, please contact the seller directly. Providing your purchase details and a clear description of the issue will help expedite support.

Customers may encounter problems due to incorrect use of the item. Please contact the seller in advance if you have any questions before returning it.

