

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HEYSONG](#) /

› [HEYSONG Portable Bluetooth Speaker User Manual](#)

HEYSONG HEYSONG SONIC BLAST

HEYSONG Portable Bluetooth Speaker User Manual

Model: HEYSONG SONIC BLAST

1. PRODUCT OVERVIEW

The HEYSONG Portable Bluetooth Speaker is designed to deliver powerful, high-fidelity audio with dynamic RGB LED lighting, making it ideal for various indoor and outdoor settings. Its robust waterproof construction ensures durability, while multiple connectivity options provide versatile music playback.

Key Features:

- **High-Fidelity Sound:** Precise frequency response, low distortion, and wide dynamic range for rich audio.
- **Vibrant RGB LED Lights:** Adjustable lighting to enhance ambiance and mood.
- **IPX6 Waterproof:** Enjoy music near water without worry, suitable for beach, pool, and outdoor use.
- **Portable Design:** Lightweight with an integrated microphone for hands-free calls, perfect for travel.
- **Advanced Connectivity:** Bluetooth 5.0 for stable connection up to 20m, supports AUX-IN, Micro-SD card, and USB playback.
- **True Wireless Stereo (TWS):** Pair two speakers for an immersive stereo sound experience.



Figure 1.1: HEYSONG Portable Bluetooth Speaker, showcasing its waterproof design.

30W Powerful Sound

Bring the outdoor party anywhere

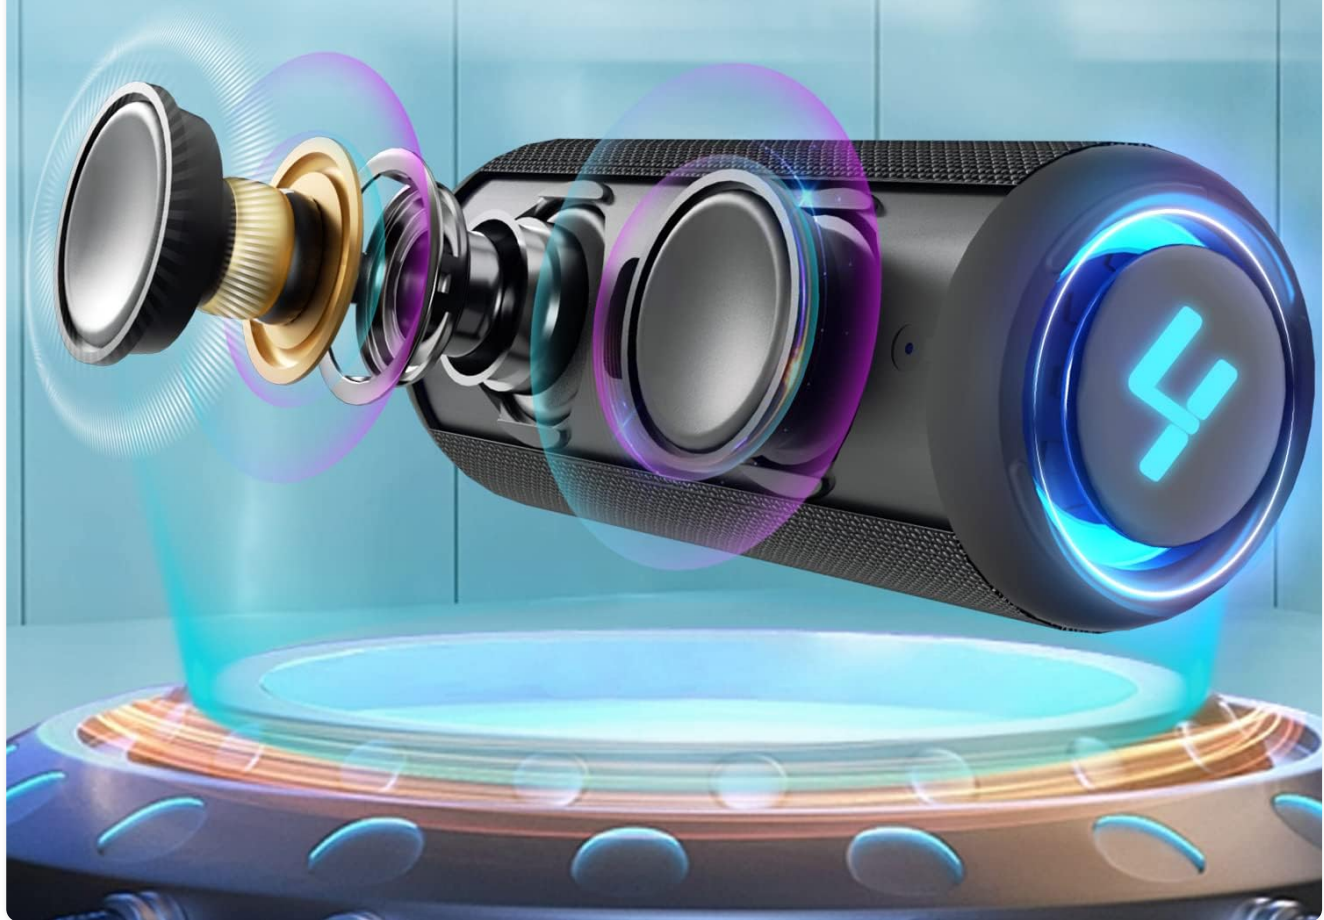


Figure 1.2: Internal components illustrating the speaker's powerful 30W sound output.

2. SETUP

2.1 Unboxing and Initial Charge

Carefully remove the speaker and all accessories from the packaging. Before first use, fully charge the speaker using the provided Type-C charging cable. The charging port is located on the side of the speaker, usually protected by a rubber flap.

2.2 Powering On/Off

- **To Power On:** Press and hold the Power button () for 2-3 seconds until you hear an audible prompt and the LED lights illuminate.
- **To Power Off:** Press and hold the Power button () for 2-3 seconds until the lights turn off and you hear an audible prompt.

2.3 Bluetooth Pairing

After powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.

1. Enable Bluetooth on your device (smartphone, tablet, laptop).
2. Search for available Bluetooth devices.
3. Select "HEYSONG SONIC BLAST" from the list.
4. Once connected, you will hear a confirmation sound, and the LED light will stop flashing.

2.4 True Wireless Stereo (TWS) Pairing

To achieve a true stereo sound experience, you can pair two HEYSONG SONIC BLAST speakers together.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (often indicated by two interlocking circles or a dedicated TWS icon) for 2-3 seconds.
3. The primary speaker will search for the secondary speaker. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 2.3. Both speakers will play audio in stereo.

True Wireless Stereo

Pair wirelessly for 60W loud stereo sound



Figure 2.1: Demonstrating True Wireless Stereo pairing for enhanced sound.

2.5 Other Connection Options

The speaker supports multiple input sources:

- **AUX-IN:** Connect external audio devices using a 3.5mm audio cable. The speaker will automatically switch to AUX mode.
- **Micro-SD Card:** Insert a Micro-SD card with MP3 audio files into the designated slot. The speaker will automatically play music from the card.
- **USB Playback:** Insert a USB flash drive with MP3 audio files into the USB port. The speaker will automatically play music from the drive.

Multiple Connection Options

Meet all your needs



Figure 2.2: Overview of the speaker's multiple connection options.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

Button/Control	Function
(Power Button)	Press and hold for 2-3s to Power On/Off. Short press to switch playback modes (Bluetooth/AUX/TF/USB).
+ (Volume Up)	Short press to increase volume. Long press for next track.
- (Volume Down)	Short press to decrease volume. Long press for previous track.

Button/Control	Function
▶ (Play/Pause)	Short press to Play/Pause music. Short press to Answer/End calls. Long press to Reject calls.
TWS Icon	Press and hold for 2-3s to initiate TWS pairing. Short press to disconnect TWS.
Light Icon	Short press to cycle through LED light modes. Long press to turn lights On/Off.

3.2 LED Light Modes

The speaker features multiple RGB LED light modes. Press the Light button to cycle through different patterns and colors. Long press the Light button to turn the LED lights on or off.



Figure 3.1: The speaker's colorful LED light show in action.

4. MAINTENANCE

4.1 Cleaning

Due to its waterproof design, the speaker can be easily cleaned. Use a soft, damp cloth to wipe down the exterior. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port and other openings are dry before charging.



Figure 4.1: The speaker's IPX6 waterproof rating allows for easy cleaning and use near water.

4.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

4.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the speaker to temperatures above 60°C (140°F) or below -10°C (14°F).

- Use only the provided or certified charging cables and adapters.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed long enough.	Charge the speaker fully. Press and hold the Power button for 2-3 seconds.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is flashing LED (pairing mode). Turn device Bluetooth off/on. Move device closer (within 20m).
No sound.	Volume too low; Incorrect input mode; Device not playing.	Increase speaker and device volume. Press Power button to cycle modes. Ensure music is playing on device.
TWS pairing fails.	Speakers already connected to a device; Too far apart.	Disconnect both speakers from any Bluetooth device. Ensure speakers are within 5m of each other.
LED lights not working.	Lights turned off.	Long press the Light button to turn lights on.

6. SPECIFICATIONS

Feature	Detail
Brand	HEYSONG
Model Name	HEYSONG SONIC BLAST
Product Dimensions (L x W x H)	22 x 11.5 x 10 cm (8.66 x 4.53 x 3.94 inches)
Item Weight	820 grams (1.81 pounds)
Maximum Range	20 Meters (Bluetooth)
Special Features	Bluetooth, RGB light up, Wireless
Connections	Bluetooth, AUX-IN, Micro-SD, USB
Battery	1 Lithium-ion (included)

Feature	Detail
Maximum Speaker Output Power	10 Watts (Note: Product description mentions 30W, this spec might be per channel or a different metric)
Audio Output Mode	Stereo
Mounting Type	Table Mount
Speaker Type	Surround Sound
Recommended Uses	For smartphone or tablet
Compatible Devices	MP3 Player, Smartphone, Tablet, Television
Included Components	Speaker

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the product packaging or the retailer's website for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the retailer or the manufacturer's customer support. Contact information can typically be found on the product packaging or the official HEYSONG website.