

[Manuals.plus](#) /

› [BOSCH](#) /

› Bosch Series 4 Front Load Washing Machine 8Kg, 1400Rpm, EcoSilence Drive - User Manual

BOSCH WAN28282GC

Bosch Series 4 Front Load Washing Machine User Manual

Model: WAN28282GC

INTRODUCTION AND PRODUCT OVERVIEW

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Bosch Series 4 Front Load Washing Machine, model WAN28282GC. Please read this manual thoroughly before using the appliance for the first time and keep it for future reference.



Front view of the Bosch Series 4 Front Load Washing Machine, highlighting its sleek design and control panel.

The Bosch Series 4 washing machine is engineered for efficiency and quiet operation, featuring an 8 kg capacity and a maximum spin speed of 1400 RPM. Key technologies include EcoSilence Drive for silent performance and various

programs designed for optimal laundry care.

SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance:

- Ensure the appliance is properly earthed and connected to a suitable power supply (220 Volts).
- Do not allow children to play with or operate the washing machine. The appliance includes a Child Lock feature for safety.
- Never force the door open during operation. Wait until the cycle is complete and the door unlocks automatically.
- Do not wash items that have been soiled with flammable substances.
- Disconnect the appliance from the power supply before cleaning or maintenance.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

Unpacking and Positioning

1. Carefully remove all packaging materials and transport bolts from the rear of the machine. Keep the transport bolts for future relocation.
2. Position the washing machine on a firm, level surface. Adjust the feet to ensure stability and prevent vibration during operation.



Dimensional diagram of the washing machine, showing height (84.8 cm), width (59.8 cm), and depth (59 cm).

Water and Electrical Connection

- Connect the water inlet hose to a cold water tap. Ensure a tight seal to prevent leaks. An extension for the cold

water inlet/Aquastop is included.

- Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed to prevent displacement during draining.
- Plug the power cord into a grounded 220V electrical outlet. The appliance consumes 2300 watts.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various washing programs to achieve optimal results.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the front load door and load laundry loosely into the drum, ensuring not to exceed the 8 kg capacity.
- Add appropriate detergent and fabric softener to the dispenser drawer.

Program Selection and Special Features

Turn the control console dial to select your desired washing program. The touch control panel allows for further customization.



Reload Convenience: This feature allows you to pause the wash cycle, open the door, and add or remove clothes seamlessly, provided conditions like high suds, temperature, or water level are not met.

BOSCH

Washing Machine

Speed Perfect Washing

Perfectly clean in up to 65% less time

BOSCH

Invented for life

Speed Perfect: Reduce washing time by up to 65% without compromising cleaning results. This function is compatible with many programs and is ideal for smaller loads, such as washing 4kg of laundry in 46 minutes with the Mix Programme.

BOSCH

Washing Machine

Active Water Plus

Eco-friendly choice ensuring water is used efficiently for every wash

BOSCH

Invented for life

Active Water Plus: Smart technology detects smaller loads and adjusts water usage accordingly, ensuring efficient cleaning while conserving water. This makes the appliance an eco-friendly choice.

BOSCH

Washing Machine

BOSCH

Hygiene Plus

Washing Machine

BOSCH

Invented for life

Hygiene Plus: Achieves hygienically clean laundry at 40°C with a constant temperature and an extra rinse cycle, effectively eliminating 99.99% of germs. This feature ensures thorough cleanliness for sensitive items.

BOSCH

Washing Machine

BOSCH

The Whisper Quiet Machine

Remarkable quiet operation with AntiVibration design on side walls

BOSCH

Invented for life

Whisper Quiet Operation: The AntiVibration design on the side walls enhances stability and reduces vibration, while improved insulation controls noise levels. This results in remarkably quiet operation, even during spin cycles.

Starting a Wash Cycle

1. Close the dispenser drawer and the loading door securely.
2. Press the Start/Pause button to begin the selected program.
3. The machine will automatically proceed through the wash, rinse, and spin cycles.

MAINTENANCE AND CARE

Regular maintenance ensures the optimal performance and extends the lifespan of your washing machine.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer and rinse it under running water to remove any residue.

Cleaning the Drum and Door Seal

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to clean the drum.
- Wipe the rubber door seal after each wash to prevent mold and mildew buildup.

Cleaning the Drain Pump Filter

- Locate the drain pump filter at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully unscrew and remove the filter, clean it of lint and debris, then reinsert and tighten securely.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; machine not level; uneven load.	Remove transport bolts; adjust leveling feet; redistribute laundry inside drum.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Check drain hose for kinks; clean drain pump filter.
Detergent residue in dispenser	Insufficient water pressure; dispenser clogged.	Check water supply; clean detergent dispenser.

TECHNICAL SPECIFICATIONS

Detailed specifications for the Bosch Series 4 Front Load Washing Machine, model WAN28282GC.

Feature	Specification
Brand	BOSCH
Model Info	WAN28282GC
Product Dimensions (D x W x H)	59 x 59.8 x 84.8 cm
Item Weight	70.2 Kilograms
Capacity	8 Kilograms
Max Spin Speed	1400 RPM
Installation Type	Freestanding

Feature	Specification
Special Features	Child Lock, Reload, Speed Perfect, Active Water Plus, Hygiene Plus, EcoSilence Drive, AntiVibration Design
Color	White
Control Console	Touch
Access Location	Front Load
Voltage	220 Volts
Wattage	2300 watts
Material Type	ABS
Included Components	Extension for cold water inlet /Aquastop

WARRANTY AND SUPPORT

Your Bosch Series 4 Washing Machine comes with a manufacturer's warranty. For specific details regarding your warranty coverage, please refer to the warranty card included with your appliance or visit the official Bosch website. A **10-year warranty** is provided for the motor, highlighting the durability and reliability of the EcoSilence Drive technology. For technical assistance, spare parts, or to schedule a service appointment, please contact Bosch customer service in your region. You can find contact information on the official Bosch website or through your local retailer. For more information, you may visit the [Official Bosch Store on Amazon.ae](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is a key icon flashing on my Bosch WAN28282GC washing machine?

On Bosch washing machines like the WAN28282GC, a flashing key icon indicates that the Child Lock is active. This feature prevents the program from being changed or the machine from being started accidentally. To deactivate...

[Read full answer](#)