

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MEDION](#) /

› [MEDION MD 11780 Air Fryer X10 XL Instruction Manual](#)

MEDION X10 XL

MEDION MD 11780 Air Fryer X10 XL Instruction Manual

MODEL: X10 XL (MD 11780)

Introduction

This manual provides essential information for the safe and efficient operation of your MEDION MD 11780 Air Fryer X10 XL. Please read all instructions carefully before first use and retain this manual for future reference. This appliance is designed for preparing a variety of foods using hot air, offering a healthier alternative to traditional frying with little to no oil.



Image: The MEDION MD 11780 Air Fryer X10 XL, showcasing its sleek design and a basket filled with golden-brown fries, illustrating its primary function.

Setup

- 1. Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for storage or transport.
- 2. Initial Cleaning:** Before first use, clean the frying basket and grill insert with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
- 3. Placement:** Place the air fryer on a stable, heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it near flammable materials or heat sources.

4. **First Use:** It is recommended to run the air fryer empty for approximately 10-15 minutes at 200°C (390°F) during its first use. This helps to burn off any manufacturing residues and may produce a slight odor, which is normal. Ensure the area is well-ventilated.

Operating Instructions

The MEDION MD 11780 features an intuitive touch screen control panel for easy operation.



Image: Detailed view of the touch control panel, showing various program icons, temperature, and time displays, along with control buttons.

Basic Operation:

- **Power On/Off:** Press the power icon on the touch screen to turn the appliance on or off.
- **Setting Temperature and Time:** Use the temperature (up/down arrows) and time (up/down arrows) controls to adjust cooking settings manually. The temperature range is up to 230°C.
- **Pre-set Programs:** The air fryer includes 10 automatic programs for common dishes. Select the desired program icon on the touch screen. The appliance will automatically set the optimal temperature and time.

Special Features:

- **Automatic Water Vapor Function:** This feature introduces a fine mist of water vapor during cooking to enhance crispiness. Fill the small water reservoir (if applicable, refer to specific model instructions for location) before starting the cooking process.



Image: An illustration of the water reservoir and the steam outlet, demonstrating how the automatic water vapor

function works to create crispy results.

- **Viewing Window and Interior Light:** Monitor your food's progress without opening the basket using the integrated viewing window and interior LED light. This helps maintain consistent cooking temperatures.



Image: A close-up view of the air fryer's transparent window, allowing users to observe the cooking process of food inside without interruption.

- **Grill Insert:** The supplementary grill insert improves air circulation for more even cooking and crispier results. Place it at the bottom of the frying basket.

Insert supplémentaire pour la grille de cuisson

Améliore la circulation de l'air



Image: The grill insert designed to enhance air circulation within the frying basket, illustrated with arrows showing airflow around food items.

- **Automatic Shut-off:** The appliance will automatically shut off when the set cooking time is complete or if the basket is removed during operation.

Cooking Tips:

- For best results, shake the basket halfway through the cooking time for items like fries or smaller pieces of food.
- While designed for oil-free cooking, a small amount of oil (1-2 tablespoons) can be added to some foods for extra crispiness.

Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Frying Basket and Grill Insert:** These parts have a non-stick coating and can be cleaned with warm soapy water and a non-abrasive sponge. For stubborn residue, soak them in warm water for a few minutes before cleaning.

They may also be dishwasher safe (check specific product details or manufacturer guidelines).

- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Interior:** Clean the interior with a damp cloth. Ensure no food particles are left in the heating element area.
- **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the frying basket firmly into the appliance until it clicks into place.
Food is not cooked evenly.	Basket overloaded; food not shaken; incorrect temperature/time.	Do not overload the basket. Shake the basket halfway through cooking. Adjust temperature and time as needed. Ensure the grill insert is used for optimal air circulation.
White smoke coming from the appliance.	Greasy food residue; excessive oil used.	Clean the basket and interior thoroughly. Reduce the amount of oil if adding to food.
Food is not crispy.	Not enough cooking time; temperature too low; food too moist.	Increase cooking time or temperature. Pat moist foods dry before cooking. Utilize the automatic water vapor function for enhanced crispiness.

Specifications

- **Brand:** MEDION
- **Model:** X10 XL (MD 11780)
- **Power:** 1500 Watts
- **Capacity:** 5 Liters
- **Voltage:** 220 Volts
- **Dimensions (L x W x H):** 36.5 x 27 x 31 cm
- **Weight:** 4.8 Kilograms
- **Color:** Black
- **Special Features:** Automatic shut-off, hot air circulation, temperature selection (up to 230°C), LED lighting, touch screen, non-stick coating, automatic water vapor function, viewing window.

Capacité utile de 5 litres



Image: A visual representation of the air fryer with its key dimensions (height, width, depth) labeled for clarity.

Warranty and Support

For information regarding warranty coverage, please refer to the warranty card included with your product or contact your retailer. MEDION is committed to providing excellent customer service.

If you encounter issues not covered in the troubleshooting section, or require further assistance, please contact MEDION customer support. Our competent customer service team is available 365 days a year to assist you.

Please note that information on spare parts availability may vary and is currently unavailable through general product listings. For specific spare part inquiries, please contact customer support directly.

