

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Cecotec](#) /

> [Cecotec IronHero 3000 Sauna i-Pump Steam Iron User Manual](#)

Cecotec IronHero 3000 Sauna i-Pump (01878)

Cecotec IronHero 3000 Sauna i-Pump Steam Iron User Manual

Model: IronHero 3000 Sauna i-Pump (01878)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in accidents or damage to the product.

- Ensure the voltage indicated on the appliance matches your mains voltage before connecting.
- Do not immerse the iron, power cord, or plug in water or any other liquid.
- Always unplug the iron from the power outlet when filling or emptying the water tank, and when not in use.
- Keep the iron and its cord out of reach of children and pets.
- Use the iron on a stable, heat-resistant surface. Never leave a hot iron unattended.
- Do not touch the hot soleplate. Always use the handle.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Only use tap water for the water tank. Do not use perfumed water, vinegar, starch, descaling agents, or other chemicals, as these can damage the iron.
- Do not use the appliance if it has been dropped, if there are visible signs of damage, or if it is leaking.

2. PRODUCT OVERVIEW

The Cecotec IronHero 3000 Sauna i-Pump is a powerful steam iron designed for efficient and effective garment care. It features advanced technologies for quick heating, continuous steam, and enhanced durability.



Image: The Cecotec IronHero 3000 Sauna i-Pump steam iron, showcasing its sleek design and soleplate.

Key Features:

- **3000W Power:** Ensures rapid heating and powerful performance.
- **Thermoblock & Dual Heating Element:** Provides quick and consistent heat for optimal ironing results.
- **Integrated Automatic Water Pump (i-Pump):** Delivers continuous steam up to 80 g/min and a super steam shot of 300 g/min.
- **Turbo Slide Soleplate:** Resistant, non-stick, and designed for perfect glide over fabrics.
- **Drip Block Anti-Drip System:** Prevents water stains on garments.
- **Cyclo Clean Anti-Calc System:** Filters limescale to maintain performance and extend the iron's lifespan.
- **Smart Auto OFF:** Safety system that automatically turns off the iron when not in use.
- **Fabric-Specific Temperature Selector:** Allows precise temperature control for various fabric types.



Image: Close-up of the Turbo Slide soleplate, illustrating the internal heating elements and steam channels.



Image: An internal view highlighting the integrated automatic water pump (i-Pump) mechanism.

3. SETUP

3.1 Unpacking and First Use

1. Carefully remove the iron from its packaging.
2. Remove any labels or protective film from the soleplate.
3. Before first use, it is recommended to iron an old piece of fabric to remove any manufacturing residues from the soleplate.

3.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Open the water tank inlet cover.
3. Fill the water tank with tap water up to the 'MAX' indicator. Do not overfill.
4. Close the water tank inlet cover securely.

3.3 Connecting to Power

- Plug the power cord into a grounded electrical outlet.
- The LED indicator will illuminate, signaling that the iron is receiving power.

4. OPERATING INSTRUCTIONS

4.1 Temperature Selection

1. Turn the temperature selector dial to the desired setting based on the fabric type. Refer to the garment's care label for recommendations.
2. Allow the iron to heat up. The LED indicator will turn off when the selected temperature is reached.

4.2 Steam Ironing

1. Ensure the water tank is filled and the iron is heated to a steam-appropriate temperature (usually higher settings).
2. Press the steam button to activate continuous steam. The i-Pump will deliver a steady flow of steam.
3. For stubborn creases, press the super steam shot button for an extra burst of steam (300 g/min).



Image: A person demonstrating the use of the steam iron on an ironing board, effectively removing creases from a shirt.

4.3 Dry Ironing

- For dry ironing, ensure the water tank is empty or the steam function is turned off.
- Select the appropriate temperature for your fabric and wait for the iron to heat up.

4.4 Vertical Steaming

1. Hold the iron vertically, close to the garment but not touching it.
2. Press the steam button to release steam. This is suitable for delicate fabrics, curtains, or garments on hangers.



Image: A person demonstrating the vertical steaming function, holding the iron upright to steam a hanging shirt.

4.5 Smart Auto OFF Safety System

- The iron is equipped with a Smart Auto OFF feature for safety.
- If left stationary on its soleplate for a certain period, or on its heel for a longer period, the iron will automatically turn off.
- To reactivate, simply move the iron.

5. MAINTENANCE

5.1 After Each Use

1. Unplug the iron from the power outlet and allow it to cool completely.
2. Empty any remaining water from the tank.

5.2 Cleaning the Soleplate

- To clean the soleplate, wipe it with a damp cloth and a non-abrasive cleaner after it has cooled down.
- Do not use metallic scourers or abrasive cleaners, as these can damage the soleplate.

5.3 Cyclo Clean Anti-Calc System

- The Cyclo Clean system helps prevent limescale buildup. Regular use of this feature is recommended, especially in areas with hard water.
- Refer to the specific instructions in the full manual for detailed steps on how to perform the Cyclo Clean self-cleaning cycle.

5.4 Storage

- Store the iron upright on its heel in a safe, dry place, away from direct sunlight and moisture.
- Ensure the power cord is neatly wrapped and not kinked.

6. TROUBLESHOOTING

If you encounter any issues with your iron, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-------------------------------------|--|---|
| Iron does not heat up. | Not plugged in; power outage; Smart Auto OFF activated. | Check power connection; check circuit breaker; move the iron to reactivate. |
| No steam or insufficient steam. | Water tank empty; temperature too low; steam vents blocked. | Fill water tank; set to a higher temperature; perform Cyclo Clean or clean soleplate. |
| Water leaking from soleplate. | Temperature too low for steam; Drip Block system issue; overfilled water tank. | Increase temperature; ensure Drip Block is functioning; do not overfill water tank. |
| White flakes or residue on clothes. | Limescale buildup. | Perform the Cyclo Clean anti-calc cycle. |

7. SPECIFICATIONS

- **Model Name:** IronHero 3000 Sauna i-Pump
- **Model Number:** 01878
- **Power:** 3000 Watts
- **Continuous Steam Output:** Up to 80 g/min
- **Super Steam Shot:** 300 g/min

- **Soleplate Material:** Anodized Aluminum (Turbo Slide)
- **Weight:** 2.35 Kilograms
- **Special Features:** Thermoblock, Integrated Water Pump, Drip Block, Cyclo Clean, Smart Auto OFF
- **Color:** Black

8. WARRANTY AND SUPPORT

Cecotec is committed to providing quality products. This product comes with a commitment to spare parts availability for 10 years from the date of purchase.

For any questions, technical assistance, or warranty claims, please contact Cecotec customer support through their official website or the retailer where the product was purchased. Please have your model number (01878) and proof of purchase ready.