

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Severin](#) /

› [SEVERIN SC 7142 Steam Cleaner Instruction Manual](#)

## Severin 7142

# SEVERIN SC 7142 Steam Cleaner Instruction Manual

Model: SC 7142

## 1. INTRODUCTION

Thank you for choosing the SEVERIN SC 7142 Steam Cleaner. This appliance is designed for effective and hygienic cleaning of various surfaces using steam, eliminating up to 99.9% of bacteria without the need for harsh chemicals. Please read this manual carefully before first use to ensure safe and optimal operation.

## Key Features:

- **2-in-1 Functionality:** Operates as both a floor steam cleaner and a handheld steam cleaner.
- **Chemical-Free Cleaning:** Utilizes steam to clean and sanitize, making it environmentally friendly.
- **Fast Heat-Up:** Ready to use in approximately 20 seconds.
- **Versatile Accessories:** Includes a steam nozzle, flat spatula, round brush, and carpet glider for various cleaning tasks.
- **Extended Reach:** Equipped with a 7-meter power cable for wide coverage.
- **Maneuverable Design:** 180-degree swivel system for easy navigation around furniture.

## 2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before using the appliance.
- Do not leave the appliance unattended while plugged in or operating.
- Keep the appliance out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances.
- Use only distilled or demineralized water to prevent mineral buildup.
- Never immerse the appliance in water or other liquids.
- Unplug the appliance before filling, emptying, or cleaning.
- Do not open the water tank cap while the appliance is under pressure.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Do not use the appliance on unsealed wooden floors, unglazed ceramic tiles, or delicate fabrics that may be damaged by steam.

### 3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your SEVERIN SC 7142 Steam Cleaner and its accessories.



**Image 3.1:** Exploded view of the SEVERIN SC 7142 steam cleaner, showing the main unit, handle, floor head, water tank, and various attachments including the carpet glider, flat nozzle, round brush, and spatula.



**Image 3.2:** The SEVERIN SC 7142 steam cleaner assembled in its upright position, ready for floor cleaning.

### Included Accessories:

- Main Steam Unit (Handheld)
- Extension Handle
- Floor Head
- Carpet Glider
- Steam Nozzle (for joints)
- Flat Spatula
- Round Brush
- 2 x Microfiber Cleaning Pads





**Image 3.3:** Two microfiber cleaning pads, designed for attachment to the floor head for effective cleaning.

## 4. SETUP

---

## 4.1 Assembly

1. Attach the extension handle to the main steam unit until it clicks into place.
2. Connect the floor head to the bottom of the main steam unit.
3. Secure a microfiber cleaning pad to the floor head.

## 4.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Unscrew the water tank cap.
3. Fill the water tank with up to 0.4 liters of distilled or demineralized water. Do not overfill.
4. Securely replace the water tank cap.

## 4.3 Initial Heat-Up

1. Plug the appliance into a suitable power outlet.
2. Press the power button (refer to Image 4.1 for location). The indicator light will illuminate.
3. The appliance will heat up in approximately 20 seconds. The indicator light will change or stop flashing when ready for use.



**Image 4.1:** Close-up view of the main unit, highlighting the power switch and steam ready indicator light.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 General Operation

Once the appliance is heated and the indicator light signals readiness, press the steam trigger to release steam. Release

the trigger to stop steam flow.

## 5.2 Using as a Floor Cleaner

1. Ensure the floor head with a microfiber pad is attached.
2. For carpets, attach the carpet glider over the floor head.
3. Plug in the appliance and wait for it to heat up.
4. Gently glide the floor head over the surface to be cleaned, pressing the steam trigger as needed.
5. Move slowly to allow the steam to penetrate and clean effectively.



**Image 5.1:** The steam cleaner in use on a carpeted floor, demonstrating the carpet glider attachment.

### 5.3 Using as a Handheld Cleaner

1. Detach the extension handle and floor head from the main steam unit.
2. Select the appropriate accessory (steam nozzle, flat spatula, or round brush) and attach it to the handheld unit.



**Image 5.2:** A hand demonstrating the attachment of a round brush accessory to the handheld steam unit.

3. Plug in the appliance and wait for it to heat up.
4. Direct the steam towards the area to be cleaned, pressing the steam trigger.



**Image 5.3:** The handheld steam cleaner with a nozzle attachment being used to clean grout lines in a bathroom.



**Image 5.4:** The handheld steam cleaner with a flat spatula attachment effectively cleaning a stovetop surface.



**Image 5.5:** The handheld steam cleaner with a round brush attachment being used to clean a baking tray.

## 5.4 Adjusting Power Levels

The SEVERIN SC 7142 features two adjustable power levels for varying cleaning needs. Refer to the control panel on the main unit to select the desired steam intensity.

## 6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

### 6.1 After Each Use

1. Unplug the appliance and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Remove and clean all accessories.

### 6.2 Cleaning Accessories

- **Microfiber Pads:** The microfiber cleaning pads are machine washable. Wash them separately from other laundry at a low temperature (e.g., 30°C) without fabric softener or bleach. Allow them to air dry.







**Image 6.1:** A microfiber cleaning pad being placed into a washing machine for cleaning.

- **Other Attachments:** Wipe the steam nozzle, flat spatula, and round brush with a damp cloth. For stubborn residue, use a mild detergent.

## 6.3 Descaling

If you notice reduced steam output or mineral buildup, descaling may be necessary. Consult the full user manual for detailed descaling instructions, typically involving a descaling solution or vinegar solution.

## 6.4 Storage

Store the appliance and its accessories in a cool, dry place, out of reach of children.

# 7. TROUBLESHOOTING

If you encounter issues with your steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty Appliance not heated Mineral buildup	Refill water tank Wait for indicator light to signal readiness Descale the appliance
Appliance not turning on	Not plugged in correctly Power outlet issue	Check power cord connection Test outlet with another appliance
Water leaking from unit	Water tank cap not secured Overfilled water tank	Ensure cap is tightly closed Do not overfill the tank

If the problem persists after attempting these solutions, please contact SEVERIN customer support.

# 8. SPECIFICATIONS

Feature	Specification
Model Number	SC 7142
Brand	Severin
Power	1500 Watts
Voltage	220 Volts
Water Tank Capacity	0.4 Liters (400 Milliliters)
Heat-up Time	Approx. 20 seconds
Cable Length	7 meters
Product Dimensions (L x W x H)	28 x 20 x 120 cm

Feature	Specification
Item Weight	2.64 Kilograms
Special Features	Removable nozzle, Compact design, Portable
Surface Recommendation	Floor
Country of Origin	China

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

This SEVERIN appliance comes with a standard manufacturer's warranty. Spare parts availability is guaranteed for 1 year. Please retain your proof of purchase for any warranty claims.

### 9.2 Customer Support

For further assistance, technical support, or to inquire about spare parts, please visit the official SEVERIN website or contact their customer service department. Contact details can typically be found in the packaging or on the brand's official website. You can also visit the [Severin Brand Store](#) for more information.