

[Manuals.plus](#) /

› [caSino187](#) /

› caSino187 Clean Base Automatic Dirt Disposal System for Roomba j Series User Manual

caSino187 J Series J5 J6 J7 J8 J9

caSino187 Clean Base Automatic Dirt Disposal System User Manual

Model: J Series J5 J6 J7 J8 J9

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your caSino187 Clean Base Automatic Dirt Disposal System. Please read this manual thoroughly before using the product to ensure proper function and longevity.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the Clean Base.
- Do not allow children to play with or operate the Clean Base.
- Use only as described in this manual.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Unplug from outlet when not in use and before servicing.

PACKAGE CONTENTS

Verify that all items are present in your package:

- caSino187 Clean Base Automatic Dirt Disposal System
- 1 x Dirt Disposal Bag (pre-installed)
- 1 x Power Cord

Note: This product does NOT include the dust bin that attaches to your Roomba. A compatible dust bin with a green evacuation port/flap is required for automatic dirt disposal functionality.



Image: The caSino187 Clean Base Automatic Dirt Disposal System, showing the main unit and charging dock.

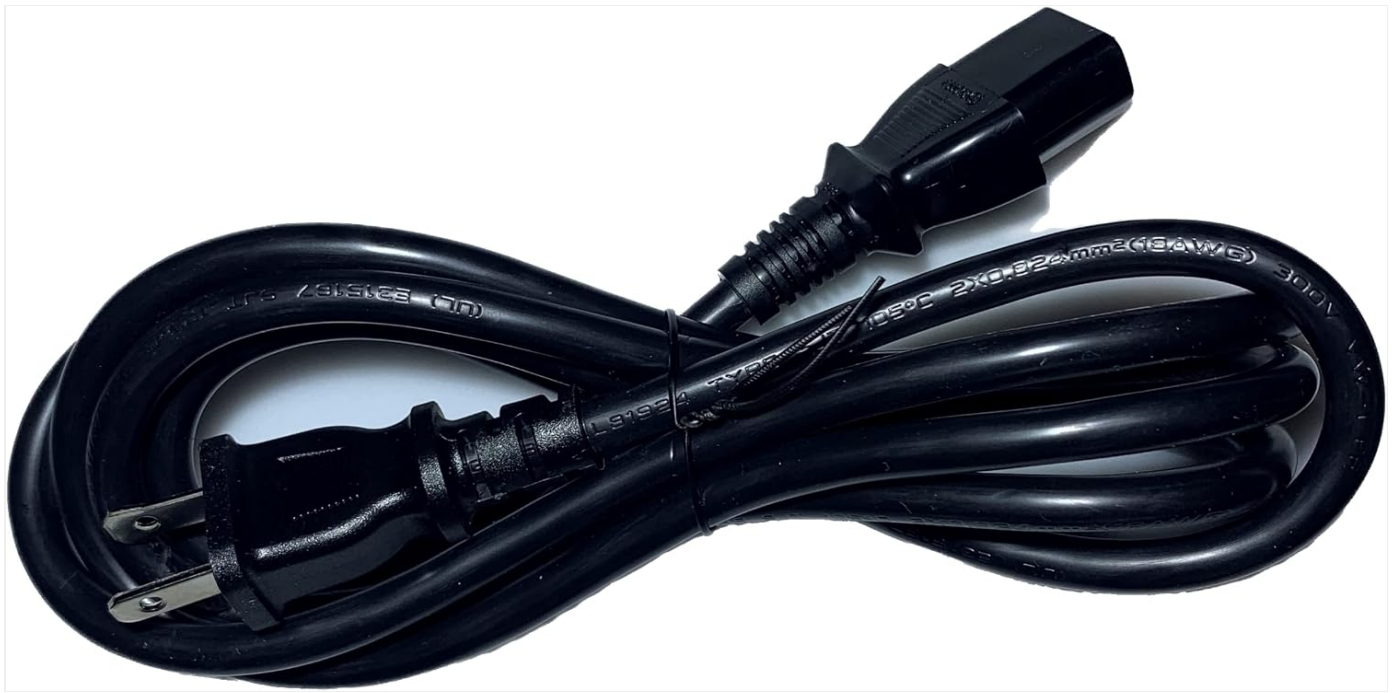


Image: The included power cord for connecting the Clean Base to an electrical outlet.

SETUP INSTRUCTIONS

1. **Choose a Location:** Place the Clean Base on a hard, level surface against a wall. Ensure there is at least 1.5 feet (0.5 meters) of clear space on each side of the Clean Base and 4 feet (1.2 meters) in front of it. Avoid placing it near stairs or obstacles that could interfere with your Roomba's navigation.
2. **Connect Power:** Plug the power cord into the Clean Base and then into a wall outlet. Ensure the power cord is not obstructing the Roomba's path.
3. **Prepare Your Roomba:** Ensure your Roomba j Series robot vacuum is equipped with a compatible dust bin that features a green evacuation port/flap on the bottom. This port is essential for the Clean Base to automatically empty the robot's dust bin. If your Roomba does not have this, you will need to acquire a compatible dust bin separately.
4. **Dock Your Roomba:** Manually place your Roomba onto the Clean Base. The robot should align itself and begin charging. The Clean Base will automatically detect the Roomba and prepare for dirt disposal.

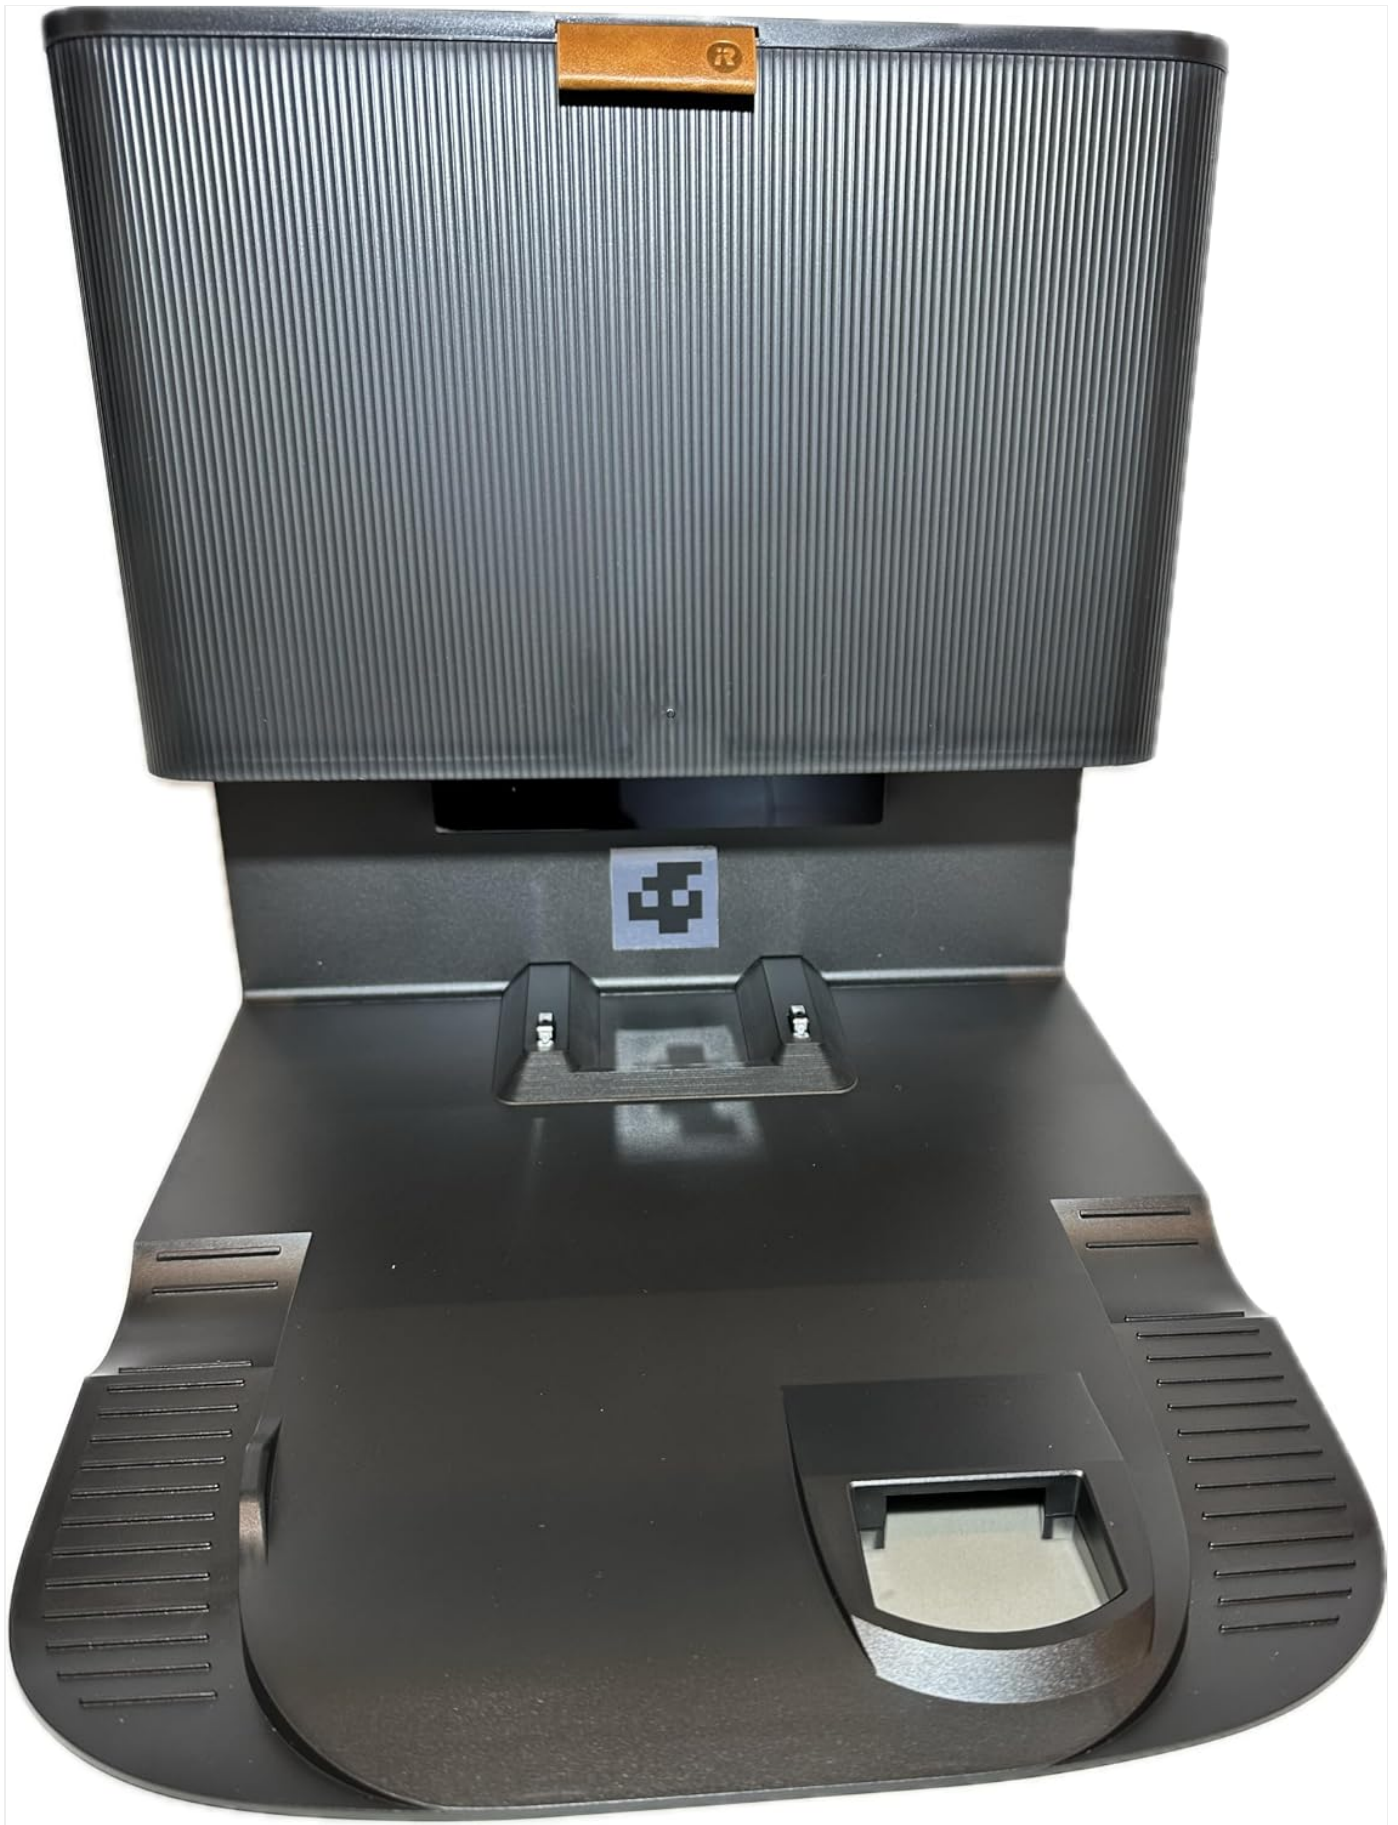


Image: Front view of the Clean Base, highlighting the charging contacts and the dirt disposal port where the Roomba docks.

OPERATION

The caSino187 Clean Base is designed to work seamlessly with your Roomba j Series robot vacuum to provide automatic

dirt disposal.

1. **Automatic Emptying:** After your Roomba completes a cleaning job and returns to the Clean Base, or when its dust bin is full during a cleaning cycle, the Clean Base will automatically activate its powerful vacuum to empty the contents of the Roomba's dust bin into a sealed disposal bag located inside the Clean Base. This process typically takes a few seconds.
2. **Charging:** The Clean Base also serves as the charging station for your Roomba. Ensure the Roomba is properly docked for continuous charging.
3. **App Control:** For advanced settings and monitoring, refer to your Roomba's companion mobile application. The Clean Base integrates with the Roomba's system to manage emptying cycles.

MAINTENANCE

Regular maintenance ensures optimal performance of your Clean Base.

Replacing the Dirt Disposal Bag

The Clean Base uses sealed bags to contain dirt and debris. Replace the bag when the indicator light on the Clean Base or the Roomba app notifies you, or approximately every 30-60 days depending on usage and pet hair accumulation.

1. **Open the Lid:** Lift the lid of the Clean Base to access the bag compartment.
2. **Remove Old Bag:** Carefully pull the old bag upwards from the compartment. The bag opening will automatically seal to prevent dust from escaping.
3. **Insert New Bag:** Insert a new caSino187 compatible dirt disposal bag into the compartment, ensuring it sits securely.
4. **Close Lid:** Close the lid firmly until it clicks into place.



Image: Top view of the Clean Base with the lid open, illustrating the compartment for the dirt disposal bag and instructions for replacement.

[Cleaning the Charging Contacts](#)

Periodically wipe the charging contacts on the Clean Base and your Roomba with a clean, dry cloth to ensure a good connection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clean Base not emptying Roomba's bin.	Roomba's dust bin is not compatible (missing green evacuation port). Dirt disposal bag is full or improperly installed. Obstruction in the evacuation port or Clean Base suction path. Clean Base not powered on.	Ensure Roomba has a compatible dust bin with a green evacuation port/flap. Replace the dirt disposal bag or ensure it is correctly seated. Check for debris in the Roomba's dust bin evacuation port and the Clean Base's suction inlet. Verify the Clean Base is plugged in and receiving power.
Roomba not docking or charging.	Charging contacts are dirty. Clean Base is not positioned correctly. Power issue with Clean Base.	Clean the charging contacts on both the Roomba and the Clean Base with a dry cloth. Ensure the Clean Base is on a level surface with adequate clear space around it. Check power cord connection and wall outlet.
"Base clogged" message (from Roomba app).	Green evacuation port/flap on Roomba's dust bin is pushed in or obstructed. Debris blocking the suction path in the Clean Base.	Inspect the green flap on the Roomba's dust bin and ensure it moves freely and is not obstructed. Check the Clean Base's suction inlet for any blockages.

SPECIFICATIONS

Brand	caSino187
Model Name	J Disposal Clean Base
Compatible Roomba Models	Roomba j Series (J5, J6, J7, J8, J9)
Special Feature	Automatic Dust Collection
Color	Black
Product Dimensions	16"L x 16"W x 16"H
Included Components	Clean Base, 1 Dirt Disposal Bag (installed), Power Cord
Filter Type	Cartridge (within disposal bag)
Power Source	Corded Electric
Control Method	App (via Roomba)
Item Weight	14.54 pounds

UPC	647535609904
-----	--------------

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact caSino187 customer service directly. Keep your proof of purchase for warranty claims.

For additional assistance or to purchase compatible accessories, please visit the [caSino187 Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLBJZ4ZZ>

More documents and user manuals: <https://manuals.plus/>