

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Funistree](#) /

› [Funistree H77 Cell Phone Stand with Wireless Bluetooth Speaker User Manual](#)

## Funistree H77

# User Manual

## FUNISTREE CELL PHONE STAND WITH WIRELESS BLUETOOTH SPEAKER

Model: H77 | Brand: Funistree

### Introduction

Thank you for purchasing the Funistree Cell Phone Stand with Wireless Bluetooth Speaker. This device combines a versatile phone stand with a high-quality Bluetooth speaker and a white noise machine, designed to enhance your audio and viewing experience. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

### Product Overview

The Funistree H77 is a multi-functional device featuring a detachable phone stand and a wireless Bluetooth speaker. Its innovative design allows for independent use of the speaker and the stand, or combined for an integrated entertainment solution.



Image: The Funistree H77 device, illustrating its 2-in-1 design with the phone stand attached to the speaker base and also shown detached.

### Key Features:

- **2-in-1 Detachable Design:** The phone stand magnetically connects to the Bluetooth speaker, allowing for combined or separate use.
- **Adjustable & Portable Stand:** Offers multiple viewing angles and includes a hanging design for easy portability.
- **HD Stereo Sound:** Equipped with a dual stereo system for enhanced bass, clear highs, and balanced midrange.
- **White Noise Machine:** Features 10 soothing white noise sounds with an auto-off timer (15, 30, or 60 minutes).
- **Stable Base:** Anti-slip silicone pads ensure device stability.
- **Long Battery Life:** Optimized 1800 mAh battery for extended use.

### Package Contents

Please check the package for the following items:

- Funistree Cell Phone Stand with Wireless Bluetooth Speaker (Model H77)
- USB Charging Cable
- User Manual

*Note: Contents may vary slightly. If any items are missing or damaged, please contact customer support.*

## Setup

---

### Charging the Device:

1. Locate the charging port on the speaker base.
2. Connect the provided USB charging cable to the speaker.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

*Initial charge time is approximately 2-3 hours.*

### Assembling the Phone Stand and Speaker:

The phone stand and speaker connect magnetically.

1. Align the magnetic base of the phone stand with the top surface of the speaker.
2. The magnets will snap the two components together securely.
3. To detach, simply pull the phone stand upwards from the speaker base.

# MAGNETIC DETACHABLE DESIGN

The connecting edge is equipped with strong magnetic strip, and you can use the phone stand and wireless speaker separately.

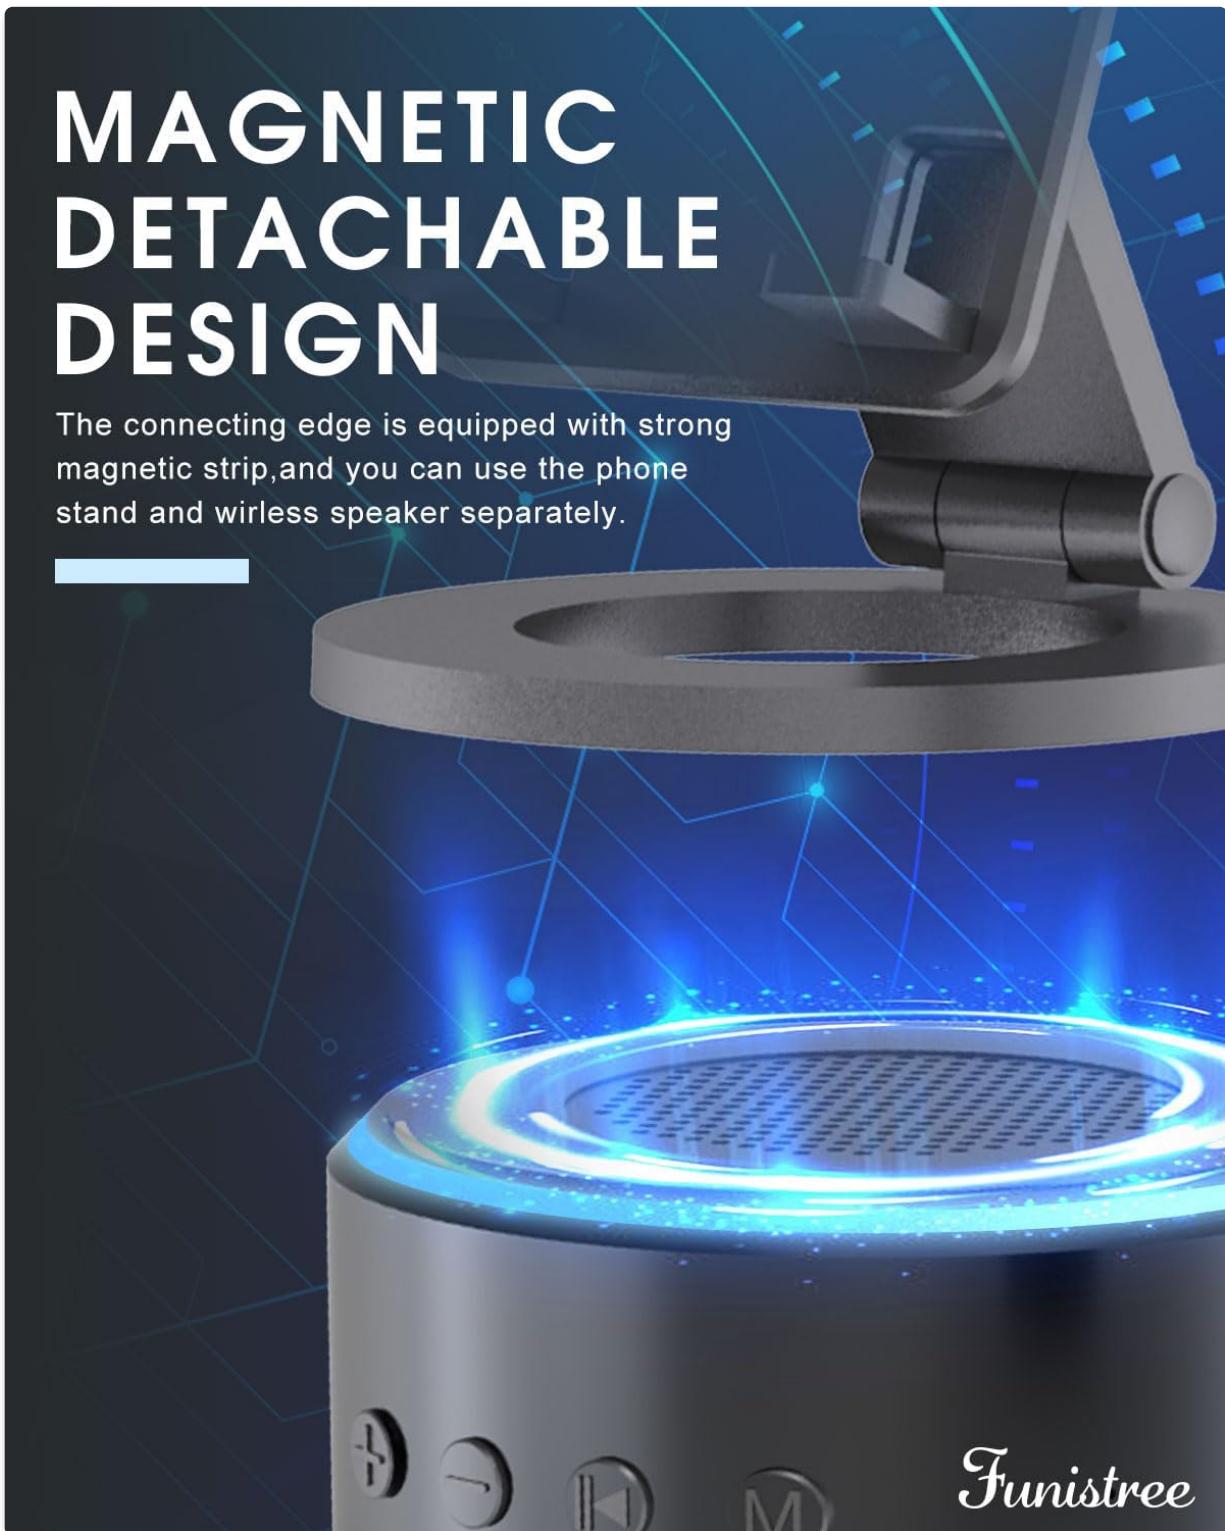


Image: Close-up view demonstrating the magnetic connection between the phone stand and the speaker base.

## Operating Instructions

### Power On/Off:

- To power on, press and hold the Power button (usually marked with a power symbol) on the speaker base for a few seconds until you hear an audible prompt or see an indicator light.
- To power off, press and hold the Power button again for a few seconds.

### Bluetooth Pairing:

1. Ensure the speaker is powered on and in pairing mode (indicated by a flashing LED light, usually

blue). If not, briefly press the Bluetooth button (if available) or power cycle the device.

2. On your mobile device (smartphone, tablet, etc.), go to Bluetooth settings.
3. Search for available devices. The speaker will appear as "H77" or "Funistree H77".
4. Select the speaker from the list to pair. Once paired, you will hear a confirmation sound, and the LED light will become solid.
5. You can now play audio from your device through the speaker.



Image: The Funistree H77 in use, with a smartphone mounted on the stand, playing music, and a laptop nearby, illustrating its versatile functionality.

#### White Noise Function:

The speaker includes 10 built-in white noise sounds to aid relaxation or concentration.

- Press the 'M' (Mode) button to cycle through the white noise sounds.
- To set a timer for the white noise, press the Timer button (if available) or refer to the specific button layout on your device. The available timer settings are 15, 30, or 60 minutes. The device will automatically turn off after the selected duration.

# 10 TYPES OF WHITE NOISE

15/30/60 mins timer  
memory function

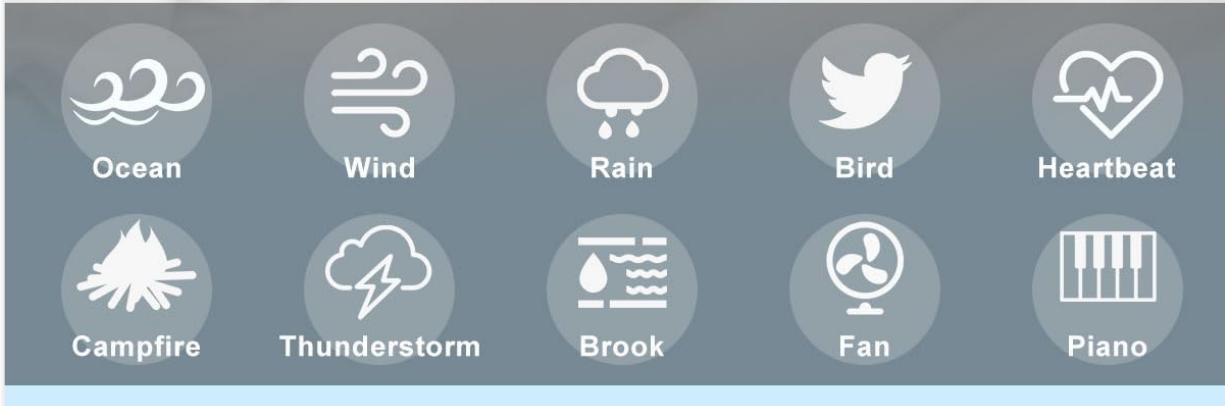


Image: Visual representation of the 10 white noise options (Ocean, Wind, Rain, Bird, Heartbeat, Campfire, Thunderstorm, Brook, Fan, Piano) and timer settings, with a person sleeping, indicating the relaxation benefits.

## Adjusting Volume and Playback:

- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.
- **Play/Pause:** Press the Play/Pause button (usually marked with a triangle/two vertical bars).

- **Next Track:** Press the '>>|' button.
- **Previous Track:** Press the '|<<' button.

### Using the Phone Stand:

The phone stand is adjustable to provide optimal viewing angles.

- Place your smartphone or tablet securely on the stand's cradle.
- Adjust the angle of the stand by gently pushing or pulling the articulated arm to your desired viewing position.
- The stand features anti-slip silicone pads to prevent your device from sliding.

**ADJUSTABLE ANGLE & ANTI-SLIP DESIGN**

**Adjustable Angle**

flat silicone anti-slip design

rotating angle anti-slip design

base silicone anti-slip design

*Funistree*

Image: Detailed view highlighting the adjustable angle mechanism and the anti-slip silicone pads on the phone stand and base for secure device placement.

### Portability:

The speaker can be carried easily using its integrated hanging design.



Image: A woman outdoors, holding the Funistree speaker by its hanging rope, demonstrating its portability for outdoor activities.

### Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the device. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the finish.

- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in active use.
- **Avoid Water:** This device is not waterproof. Keep it away from water, moisture, and excessive humidity.
- **Handle with Care:** Avoid dropping or subjecting the device to strong impacts.

## Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on source device; device too far.	Ensure speaker is in pairing mode. Enable Bluetooth on your device. Move devices closer (within 10 meters). Forget previous pairings and try again.
No sound or low volume.	Volume too low on speaker or source device; device not properly paired.	Increase volume on both speaker and source device. Repair the device.
White noise function not working.	Incorrect mode selected.	Press the 'M' (Mode) button to cycle to the white noise function.
Phone stand is unstable.	Device not placed correctly; surface is uneven.	Ensure phone is centered on the cradle. Place the stand on a flat, stable surface.

If the problem persists, please contact Funistree customer support.

## Specifications

<b>Model Number</b>	H77
<b>Product Dimensions</b>	4.53 x 4.13 x 4.37 inches
<b>Item Weight</b>	15.8 ounces
<b>Battery Type</b>	1 Lithium Ion battery (included)
<b>Battery Capacity</b>	1800 mAh
<b>Connectivity</b>	Bluetooth
<b>White Noise Sounds</b>	10 types (Ocean, Wind, Rain, Bird, Heartbeat, Campfire, Thunderstorm, Brook, Fan, Piano)
<b>Timer Settings</b>	15, 30, 60 minutes

## Compatible Devices

Smartphones, Tablets (iPhone, Galaxy, LG, iPad, Samsung Tab, Sony, etc.)

## Safety Information

- Do not disassemble, repair, or modify the device. This may cause damage, electric shock, or fire.
- Keep the device away from heat sources, direct sunlight, and high temperatures.
- Do not expose the device to water or other liquids.
- Do not use the device in environments with strong electromagnetic interference.
- Keep out of reach of children and pets.
- Dispose of the device and its battery responsibly according to local regulations. Do not dispose of with household waste.



## Warranty and Support

Funistree products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Funistree website. If you encounter any issues or have questions regarding your product, please contact our customer service team.

For further assistance, please visit: [Funistree Official Store on Amazon](#)

## Related Documents - H77

	<p><a href="#">BOSGAME H66/H68/H77 Mini PC User Manual and Technical Specifications</a></p> <p>Official user manual for BOSGAME H66, H68, and H77 mini PCs, detailing technical specifications, safety precautions, connection steps, warranty, and FCC compliance.</p>
	<p><a href="#">GIGABYTE GA-Z77-D3H/GA-H77-D3H</a></p> <p>GIGABYTE GA-Z77-D3H    GA-H77-D3H    BIOS</p>
	<p><a href="#">Legrand P31+ Cable Tray System: UL Assembly Instructions and Certificate</a></p> <p>Comprehensive guide to the Legrand P31+ cable tray system, covering UL assembly instructions, installation procedures, safety rules, and electrical continuity requirements for optimal cable management solutions.</p>

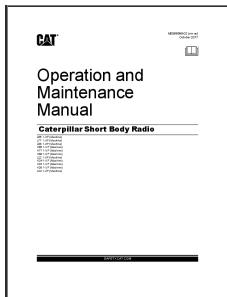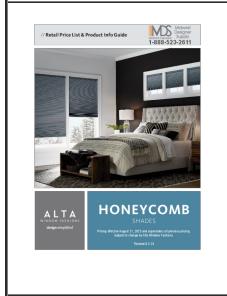	<p><b><a href="#">Caterpillar Short Body Radio Operation and Maintenance Manual</a></b></p> <p>This Operation and Maintenance Manual provides detailed information for the Caterpillar Short Body Radio, covering safety, operation, and maintenance procedures. Essential for proper use and care of your Caterpillar radio system.</p>
	<p><b><a href="#">Alta Honeycomb Shades: Price List &amp; Product Guide</a></b></p> <p>This comprehensive guide from Midwest Designer Supply presents Alta Honeycomb Shades, detailing pricing, fabric and rail color options, and stacking specifications. Discover a wide range of patterns and configurations for beautiful, energy-efficient window treatments.</p>
	<p><b><a href="#">TRUX ACCESSORIES LED Headlights Troubleshooting Guide</a></b></p> <p>Comprehensive troubleshooting guide for TRUX ACCESSORIES LED headlights, covering common issues like high beam/low beam problems, flickering, wiring, and installation. Find solutions for various TRUX LED headlight models.</p>