

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Severin](#) /

› [Severin FR2440 Air Fryer Instruction Manual](#)

## Severin FR2440

# Severin FR2440 Air Fryer Instruction Manual

Model: FR2440 | Capacity: 3.2L | Power: 1500W

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact authorized service personnel.
- Ensure adequate ventilation around the appliance during use. Do not block air vents.
- Do not place the appliance near flammable materials or heat sources.
- Always unplug the appliance after use, before cleaning, and before moving it.
- The appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Do not overfill the frying basket.
- Exercise caution when handling hot surfaces and components. Use oven mitts if necessary.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Severin FR2440 Air Fryer before first use.

### Components:

1. Main Unit Housing
2. Control Panel (LCD Touch Screen)
3. Air Inlet
4. Frying Basket Handle
5. Removable Frying Basket

6. Non-stick Pan/Drawer

7. Air Outlet Vents

8. Power Cord



*Image 1: Front view of the Severin FR2440 Air Fryer, showing the main unit and control panel.*

### **3. BEFORE FIRST USE**

---

Before using your air fryer for the first time, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the appliance with a damp cloth.
3. Clean the frying basket and non-stick pan thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
4. Place the appliance on a stable, heat-resistant surface, ensuring at least 10 cm of free space around it for proper air circulation.
5. It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) to burn off any manufacturing residues. A slight odor may be present; this is normal. Ensure the area is well-ventilated.
6. Allow the appliance to cool down completely before cleaning it again.

## 4. SETUP

---

Setting up your Severin FR2440 Air Fryer is quick and easy.

1. Ensure the appliance is placed on a flat, stable, and heat-resistant surface.
2. Insert the non-stick pan into the main unit.
3. Place the frying basket securely into the non-stick pan. Ensure it clicks into place.
4. Plug the power cord into a grounded wall outlet. The appliance is now in standby mode.



*Image 2: Severin FR2440 Air Fryer with the frying basket fully inserted into the main unit.*

## **5. OPERATING INSTRUCTIONS**

---

Your Severin FR2440 Air Fryer uses hot air circulation to cook food, requiring little to no oil.

### **Basic Operation:**

1. Gently pull the handle to slide the frying basket out of the air fryer.
2. Place your ingredients into the frying basket. Do not exceed the MAX fill line.

3. Slide the frying basket back into the air fryer until it locks into place.
4. Press the power button on the LCD touch screen to turn on the appliance.
5. Use the temperature control buttons (+ / -) to set the desired cooking temperature (80°C to 200°C).
6. Use the time control buttons (+ / -) to set the desired cooking time.
7. Press the start button to begin the cooking process.
8. Some foods may require shaking halfway through the cooking time. To do this, pull out the basket, shake it gently, and then slide it back in. The appliance will resume cooking automatically.
9. When the cooking time is complete, the appliance will beep. Carefully pull out the basket and empty the cooked food.
10. Unplug the appliance after use.



*Image 3: The Severin FR2440 Air Fryer with the frying basket partially removed, showing food inside.*

### **Cooking Guide (Approximate):**

<b>Food Item</b>	<b>Quantity</b>	<b>Temperature</b>	<b>Time</b>	<b>Notes</b>
Frozen Fries	300-500g	200°C (392°F)	15-25 min	Shake halfway

Food Item	Quantity	Temperature	Time	Notes
Chicken Drumsticks	2-4 pcs	180°C (356°F)	20-30 min	Flip halfway
Vegetables (e.g., Broccoli)	200-300g	160°C (320°F)	10-15 min	Toss halfway

*Note: Cooking times and temperatures are approximate and may vary based on food quantity, size, and desired crispness. Always ensure food is cooked thoroughly.*

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. Always unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
3. Remove the frying basket and non-stick pan. Wash them in hot soapy water using a non-abrasive sponge. They are also dishwasher safe.
4. Clean the interior of the appliance with a damp cloth. For stubborn food residues, use a mild detergent.
5. Clean the heating element with a cleaning brush to remove any food residues.
6. Ensure all parts are completely dry before reassembling and storing the appliance.

## 7. TROUBLESHOOTING

If you encounter any issues with your Severin FR2440 Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Check if the power cord is securely plugged in. Try a different outlet.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly. For fatty foods, drain excess oil.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before cooking. Increase cooking time or temperature slightly. A light coating of oil can help.

## 8. SPECIFICATIONS

Technical details for the Severin FR2440 Air Fryer.

Model Number	FR2440
Brand	Severin

<b>Capacity</b>	3.2 Litres
<b>Power</b>	1500 Watts
<b>Voltage</b>	220-240V ~ 50/60Hz (Typical for EU market)
<b>Temperature Range</b>	80°C - 200°C (176°F - 392°F)
<b>Control Method</b>	LCD Touch Screen
<b>Material</b>	Stainless Steel, Plastic
<b>Dimensions (L x W x H)</b>	36 x 38 x 36 cm (Approximate)
<b>Weight</b>	4.5 Kilograms
<b>Color</b>	White

## 9. DISPOSAL

Do not dispose of this appliance with household waste. It contains electrical and electronic components that should be recycled. Please take it to a designated collection point for the recycling of electrical and electronic equipment. This helps protect the environment and human health.

## 10. WARRANTY AND SUPPORT

Severin products are manufactured to high-quality standards. In the unlikely event of a defect, please contact your retailer or the Severin customer service department. Keep your proof of purchase for warranty claims.

For further assistance, product registration, or to find authorized service centers, please visit the official Severin website:

[www.severin.com](http://www.severin.com)