

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Meister](#) /
- › [Meister Athlete XL Wash Bag - Instruction Manual](#)

Meister 1180AWBXL

Meister Athlete XL Wash Bag

Model: 1180AWBXL

INTRODUCTION

The Meister Athlete XL Wash Bag is designed to simplify the washing and drying of athletic gear. Its durable mesh construction allows for thorough cleaning and quick drying, while the secure zipper closure protects contents during laundry cycles. An integrated athlete info tag assists with personal organization.

PRODUCT FEATURES

- **Athlete-Specific Design:** Engineered for the rigorous demands of athletic gear, offering durability and effectiveness.
- **Tangle-Free Washing:** Allows machine washing and drying of uniforms, pads, and wraps without tangling or loss of small items.
- **Advanced Mesh Material:** Super-strong porous diamond mesh ensures optimal water and air flow for a complete clean and rapid drying. Features reinforced seams for extended lifespan.
- **Secure Zipper System:** Equipped with a quick zipper design for easy access and a reinforced elastic band to keep the zipper pull secure, preventing accidental opening during wash cycles.
- **Personalized Organization:** Includes an embroidered athlete info tag for easy identification, useful for team washing scenarios.
- **Generous Capacity:** Measures 24 inches (61 cm) tall by 18 inches (46 cm) wide, providing a 27-liter capacity suitable for a full uniform, pads, and wraps.

SETUP

1. **Unpack:** Carefully remove the Meister Athlete XL Wash Bag from its packaging.
2. **Inspect:** Examine the bag for any signs of damage or manufacturing defects.
3. **Identify Components:** Locate the main zipper closure and the 'Athlete Contact' tag for personal identification.



Image: Meister Athlete XL Wash Bag, laid flat, showing mesh material and 'Athlete Contact' tag.

OPERATING INSTRUCTIONS

1. **Load Gear:** Open the zipper and place your athletic gear (uniforms, pads, wraps, etc.) inside the wash bag. Avoid overfilling to ensure proper cleaning and water circulation.
2. **Secure Closure:** Close the zipper completely. Ensure the reinforced elastic band is tucked over the zipper pull to prevent it from opening during the wash cycle.



Image: Meister Athlete XL Wash Bag, open, illustrating its capacity and mesh interior.

3. **Washing:** Place the loaded wash bag into your washing machine. You may wash it with other laundry or separately, depending on your garment care instructions. The bag is compatible with standard machine wash cycles.
4. **Drying:** The wash bag is suitable for machine drying. For best results and to prolong the life of your gear, follow the drying instructions for the items inside the bag. The mesh design facilitates quick drying.



Image: Close-up view of the Meister Athlete XL Wash Bag's zipper and reinforced elastic zipper-stopper.

MAINTENANCE

- **Cleaning the Bag:** The wash bag can be cleaned by simply running it through a regular laundry cycle, either empty or with other items.
- **Regular Inspection:** Periodically inspect the mesh material, seams, and zipper for any signs of wear, tear, or damage. Addressing minor issues early can extend the product's lifespan.
- **Storage:** Store the wash bag in a clean, dry place when not in use.



Image: Detail of the Meister brand tag on the wash bag, highlighting reinforced stitching.

TROUBLESHOOTING

- **Zipper Issues:** If the zipper becomes difficult to move, check for any fabric caught in the teeth. Gently remove any obstructions. Avoid forcing the zipper.
- **Ineffective Cleaning:** If items inside the bag are not cleaning effectively, ensure the bag is not overfilled. Overfilling can restrict water and detergent circulation.
- **Mesh Damage:** While durable, sharp objects can damage the mesh. Avoid placing items with sharp edges or hooks directly into the bag without protection.

SPECIFICATIONS

Brand	Meister
Material	Mesh
Color	Black
Product Dimensions	24"L x 18"W x 1"H (XL Wash Bag / 24" Tall x 18" Wide)
Closure Type	Zipper

Shape	Rectangular
Number of Items	1
Item Weight	2.82 ounces (0.08 Kilograms)
Model Number	1180AWBXL
UPC	797435698680

WARRANTY INFORMATION

Meister is committed to customer satisfaction. If you are not 100% satisfied with your Meister Athlete XL Wash Bag, or if it does not perform as expected, please contact us. We aim to resolve any issues and make things right. When possible, we request that products be returned in new, resellable condition.

SUPPORT

For further assistance, product inquiries, or to explore other Meister products, please visit the official Meister Store:

[Meister Store on Amazon](#)