



Manuals.plus /

› TEOAYEAH /

› TEOAYEAH 24V 6-Wheel UTV Ride-On Toy Instruction Manual

TEOAYEAH X Pro Pink

TEOAYEAH 24V 6-Wheel UTV Ride-On Toy Instruction Manual

Model: X Pro Pink

INTRODUCTION

This manual provides essential information for the safe and effective operation, assembly, and maintenance of your TEOAYEAH 24V 6-Wheel UTV Ride-On Toy. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: TEOAYEAH 24V 6-Wheel UTV Ride-On Toy.

SAFETY INFORMATION

WARNING: Adult supervision is required at all times. Always ensure the child wears appropriate safety gear, including a helmet.

- Recommended Age: 3 - 8 years.
- Maximum Load Capacity: 110 lbs.
- Do not operate near stairs, hills, roads, or swimming pools.
- Ensure all connections are secure before each use.
- Only use the provided charger and battery.

WHAT'S IN THE BOX

Verify all components are present before beginning assembly:

- 1x TEOAYEAH 24V 6x6 Electric UTV for Kids 4WD
- 1x Parental Remote Control
- 1x Charger

- Assembly Hardware (nuts, bolts, pins)
- Instruction Manual

SETUP & ASSEMBLY

Follow these steps for proper assembly of your UTV. Refer to the assembly video for visual guidance.

Video 1: Teoayeah 24V 4WD 6x6 Electric Car Assembly Guide. This video provides a step-by-step visual guide for assembling the ride-on UTV.

Step 1: Battery Connection

Locate the battery compartment. Connect the red terminal to the red wire and the black terminal to the black wire. Ensure a secure connection. The power light on the dashboard will illuminate if connected correctly.

Step 2: Front Axle & Rear Axle Assembly

Insert the front axle into its designated slots, ensuring it rotates freely. Secure with the provided nuts and washers. Repeat for the rear axle, ensuring proper alignment for wheel attachment.

Step 3: Wheels and Wheel Covers Assembly

Attach the EVA tires to the axles. Secure each wheel with its corresponding nut and then snap on the wheel covers. Ensure all wheels spin freely and are securely fastened.

GOOD SHOCK ABSORPTION PERFORMANCE



6 High-Quality
EVA Tires



4 Damping
Springs



Figure 2: The UTV features 6 high-quality EVA tires and 4 damping springs for superior shock absorption across various terrains.

Step 4: Front Guard & Steering Wheel Assembly

Install the front guard by aligning it with the designated slots and securing it. Attach the steering wheel to the steering column, ensuring it clicks into place. Connect any necessary wiring for horn and music functions. The steering wheel requires 4*AA batteries (not included).

Step 5: Seat Assembly

Place the seat onto the UTV frame, aligning the mounting points. Secure the seat with the provided screws. Ensure the 5-point safety belt is properly installed and adjustable.

HAPPY DRIVING WITH ENLARGED SEAT



MAX 110 Lbs



No More Than 55Inch



3+ Years



5-Point Safety Belt

Model Age: 7
Model Height: 49 inch

Figure 3: The enlarged seat provides ample space and comfort for children up to 5.2ft tall and 110 lbs, secured by a 5-point safety belt.

OPERATING INSTRUCTIONS

Your TEOAYEAH UTV offers both manual and parental remote control modes.

Video 2: TEOAYEAH 24V 4x75W Powerful Ride on Toys for Kids. This video highlights the powerful features and control options of the UTV.

Manual Control

The child can operate the UTV using the steering wheel and foot pedal. Ensure the power button is on and the forward/backward switch is set to the desired direction.

Parental Remote Control

The 2.4G remote control allows parents to supervise and control the vehicle. It features 3-gear speed adjustment and a 'P'

gear stop button for immediate halting in emergencies. The remote control requires 2*AAA batteries (not included).



Figure 4: The UTV offers dual control modes: manual operation by the child or parental control via the 2.4G remote.

Driving Modes

The UTV features a 4WD/2WD switch. 2WD (rear-wheel drive) is an energy-saving mode for longer playtime. Switching to 4WD activates all motors for maximum power and traction on rugged terrain.



Figure 5: Easily switch between 2WD for energy efficiency and 4WD for powerful performance on challenging surfaces.

Charging

Connect the charger to the charging port located at the rear of the UTV. The charger indicator light will show charging status. A full charge typically takes 8-12 hours. Do not overcharge.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your UTV.

- Keep the UTV clean by wiping it with a damp cloth. Avoid using harsh chemicals.
- Store the UTV in a dry, cool place away from direct sunlight when not in use.
- Charge the battery fully after each use and at least once a month during storage to prolong battery life.
- Regularly check all screws, nuts, and connections to ensure they are tight and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
UTV does not move	Battery not connected or low charge	Check battery connections; charge battery fully.
Remote control not working	Batteries low or not paired	Replace remote batteries; re-pair remote with UTV (refer to remote pairing instructions).
Reduced speed/power	Low battery charge or operating on rough terrain in 2WD	Charge battery; switch to 4WD mode for challenging terrain.

SPECIFICATIONS

Feature	Detail
Product Dimensions	38.18 x 27.95 x 16.34 inches
Item Weight	58.3 pounds
Recommended Age	3 - 8 years
Battery	24V (1 Product Specific battery included)
Motors	4 x 75W
Max Speed	5.9 mph
Max Load	110 lbs
Tires	6 EVA Wheels
Frame Material	Metal Steel Frame

WARRANTY & SUPPORT

For warranty information or technical support, please contact TEOAYEAH customer service directly. Refer to the product packaging or the official TEOAYEAH website for contact details.