

Jectse Jectse47ot56mxqs-11

Wireless TV Headphones

USER MANUAL

Model: Jectse47ot56mxqs-11 | Brand: Jectse

1. INTRODUCTION

Thank you for choosing the Jectse Wireless TV Headphones. This product is designed to provide a clear and comfortable audio experience for television viewing, especially beneficial for seniors and individuals with hearing impairments. Featuring 2.4GHz wireless technology, these headphones offer a stable connection up to 100 feet, eliminating the need for long cables. They provide clear, HiFi sound with adjustable left/right channel balance and tone controls, ensuring a personalized listening experience. The integrated microphone allows for an ear return function, facilitating communication while wearing the headphones. With versatile 3.5mm auxiliary and RCA connectivity, these headphones are compatible with a wide range of devices.



Wireless Connection

Adopts 2.4GHz wireless technology with strong anti-interference ability

Working range up to 100 feet, effectively avoiding the entanglement of long wires, making use more convenient

Figure 1.1: Jectse Wireless TV Headphones in use, demonstrating wireless connectivity to a television.

2. PRODUCT OVERVIEW

2.1 Package Contents

Please ensure all items are present in your package:

- Wireless TV Headphones
- Transmitter Base Station
- 3.5mm Audio Cable
- RCA Audio Cable
- Power Adapter
- Additional Earbuds (if included)



Figure 2.1: Complete package contents of the Jectse Wireless TV Headphones.

2.2 Headphone and Transmitter Features



Figure 2.2: The Jectse Wireless TV Headphones and Transmitter.

The Jectse Wireless TV Headphones are designed for comfort and ease of use. Key features include:

- **Streamlined Design:** Ergonomically shaped for comfortable wear.
- **Soft Earbuds:** Provide stable wearing and help to keep noise out.
- **Anti-breaking Handle:** Features wide adjustment for various head sizes.
- **Integrated Microphone (MIC button):** For the ear return function, allowing communication without removing headphones.
- **Left/Right Channel Adjustment:** Fine-tune audio balance.
- **Tone Adjustment:** Customize sound profile (bass/treble).
- **Volume Control:** Independent volume adjustment.

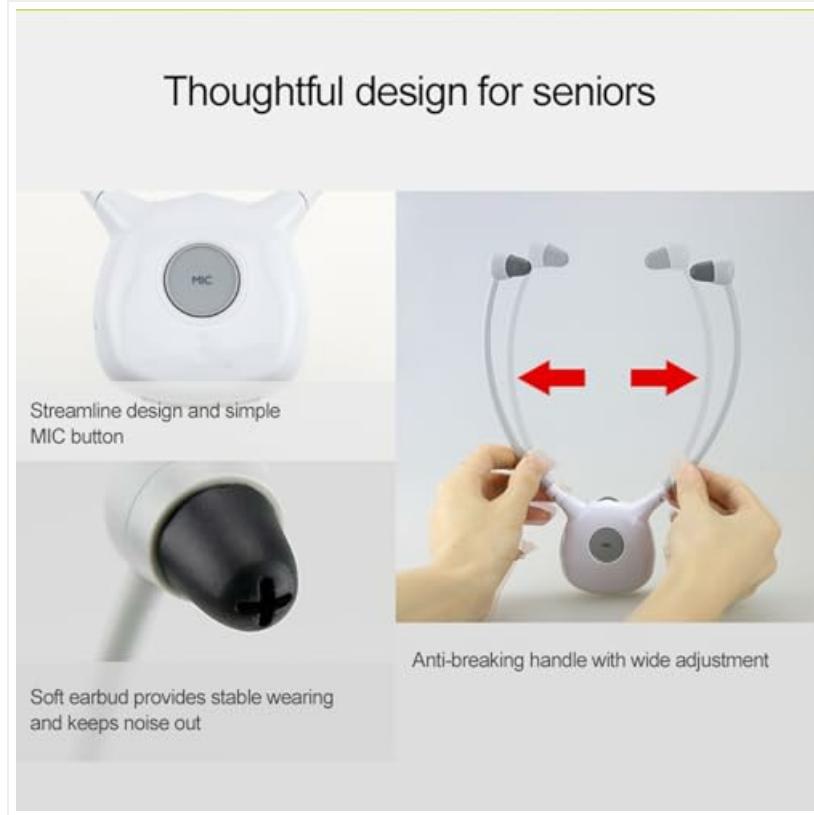


Figure 2.3: Detailed view of headphone design features.

3. SETUP

3.1 Charging the Headphones

Before first use, fully charge the headphones. Place the headphones onto the transmitter base station. The charging status is indicated by the LEDs on the transmitter.

- **Red LED:** Indicates charging in progress.
- **Green LED:** Indicates fully charged.

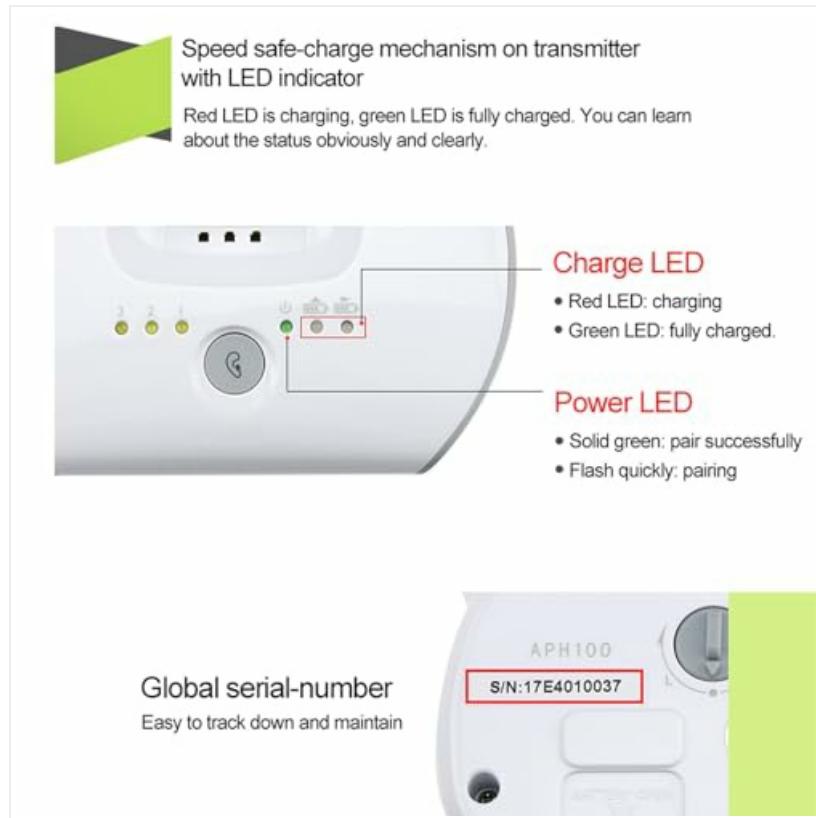


Figure 3.1: Transmitter LEDs indicating charging and power status.

3.2 Connecting the Transmitter to Your Audio Source

The transmitter supports both 3.5mm auxiliary and RCA audio connections. Choose the appropriate cable for your device (TV, DVD player, computer, etc.).

1. Connect one end of the audio cable (3.5mm or RCA) to the corresponding audio output port on your TV or audio source.
2. Connect the other end of the audio cable to the input port on the Jectse transmitter base station.
3. Connect the power adapter to the transmitter and plug it into a power outlet.
4. Ensure the transmitter's power LED is solid green, indicating successful pairing with the headphones. If it flashes quickly, it is in pairing mode.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Volume Control

To power on the headphones, simply take them off the charging base. They will automatically connect to the transmitter. To power off, place them back on the charging base. Adjust the volume using the dedicated volume controls on the headphones.

4.2 Adjusting Left/Right Channel Balance

The headphones feature a control to adjust the balance between the left and right audio channels. This allows users to fine-tune the sound distribution to their preference, which can be particularly helpful for individuals with varying hearing levels in each ear.

Adjustment the left channel or right channel to get the balanced sound experience



Figure 4.1: Adjusting the left or right channel for balanced sound.

4.3 Tone Adjustment

The headphones offer various tone adjustment modes to enhance your listening experience. Use the tone adjustment buttons on the headphones to cycle through the modes. The corresponding LEDs will indicate the active mode.

- Press the button to enhance bass only (LED 3 solid green).
- Press the button to enhance treble only (LED 2 solid green).
- Press the button to enhance treble and bass (LED 1 solid green).
- All LEDs OFF indicates no adjustment mode (Normal flat).



Figure 4.2: Tone adjustment controls and modes.

Table 4.1: Tone Adjustment Modes (70Hz-16kHz)

Model	Low frequency	High frequency	Tone adjustment
Model1	-2dB	6dB	Normal flat
Model2	4dB	15dB	enhances treble and bass
-5dB	15dB	enhances treble only	
Model4	7dB	-2dB	enhances bass only

4.4 Ear Return Function

The built-in microphone on the headphones enables an ear return function. Press the MIC button to activate this feature, allowing you to hear your own voice and surroundings through the headphones. This is useful for communicating with others without removing the headphones.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Jectse Wireless TV Headphones.

- Cleaning:** Use a soft, dry cloth to clean the headphones and transmitter. Do not use abrasive cleaners or immerse in water.
- Storage:** When not in use, store the headphones on the transmitter base station to keep them charged and ready. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not used for extended periods.

6. TROUBLESHOOTING

If you encounter any issues with your Jectse Wireless TV Headphones, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from headphones.	Headphones not powered on or not paired. Audio cable not connected correctly. TV/audio source volume too low or muted.	Ensure headphones are on the charging base to power on and pair. Check all cable connections. Increase volume on TV/audio source and headphones.
Poor sound quality or static.	Interference from other wireless devices. Out of range. Low battery.	Move away from other 2.4GHz devices. Ensure you are within 100 feet of the transmitter. Recharge the headphones.
Headphones not charging.	Headphones not properly seated on base. Power adapter not connected.	Ensure headphones are correctly placed on the charging pins. Check power adapter connection to transmitter and outlet. Verify red charging LED is on.
Ear return function not working.	MIC button not pressed. Microphone obstructed.	Press the MIC button to activate. Ensure the microphone opening is clear.

7. SPECIFICATIONS

- **Model Number:** Jectse47ot56mxqs-11
- **Brand:** Jectse
- **Wireless Technology:** 2.4 GHz
- **Wireless Range:** Up to 100 feet (approx. 30 meters)
- **Signal-to-Noise Ratio (SNR):** 75 dB
- **Distortion:** Less than 0.5%
- **Frequency Response:** 70Hz-16kHz
- **Connectivity:** 3.5mm Auxiliary, RCA
- **Material:** Plastic
- **Rechargeable Battery:** Yes
- **Package Dimensions:** 24.7 x 18 x 5.7 cm (9.7 x 7.1 x 2.2 inches)
- **Product Weight:** 430 grams (0.95 lbs)



Figure 7.1: Product dimensions of the headphones and transmitter.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Jectse customer service directly. Details regarding warranty periods and service procedures are typically outlined in a separate warranty card or on the manufacturer's official website. For further assistance or technical inquiries, please visit the official Jectse store page on Amazon or contact their support channels.

Note: Product specifications and features are subject to change without prior notice.