

[Manuals.plus](#) /

> [COLAMY](#) /

> COLAMY 60399C Power Swivel Glider Recliner Chair Instruction Manual

COLAMY 60399C-001

COLAMY 60399C Power Swivel Glider Recliner Chair Instruction Manual

Model: 60399C-001

1. INTRODUCTION

Thank you for choosing the COLAMY 60399C Power Swivel Glider Recliner Chair. This chair is designed to provide comfort and functionality with its 270° swivel, gliding motion, power recline up to 145°, and integrated USB and Type-C charging ports. It also includes removable holders for mobile devices and iPads, making it a versatile addition to any nursery, living room, or office space. Please read this manual thoroughly before assembly and use to ensure proper operation and safety.

2. SAFETY INFORMATION

- Always ensure the chair is placed on a stable, level surface.
- Keep hands and feet clear of the reclining mechanism during operation to prevent injury.
- Do not allow children or pets to play on or around the reclining mechanism.
- Avoid placing heavy objects on the footrest when it is extended.
- Ensure the power cord is not pinched or damaged. Disconnect from power outlet before cleaning or moving the chair.
- Do not attempt to disassemble or repair the electrical components yourself. Contact qualified personnel for service.
- The removable device holders have weight limits: iPad clip holds up to 1.33 pounds, phone clip holds up to 0.88 pounds. Do not exceed these limits.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Recliner Base (A)
- Backrest (B)
- Power Cable (G)
- Power Supply (H)

- Support Frame (C) for device holder
- Mobile Frame (D)
- iPad Frame (E)
- Frame Nut (F)
- User Manual

4. SETUP INSTRUCTIONS

Follow these steps to assemble your COLAMY Power Swivel Glider Recliner Chair:

1. **Connect Sofa Back to Seat Cushion:** Align the backrest (B) with the seat cushion (A) and slide it into place until the connection is secure. Ensure the Velcro on the sofa back cover is attached to the bottom of the seat cushion.
2. **Connect Power:** Connect the power cable (G) to the power supply (H). Then, plug the power supply into a standard electrical outlet.
3. **Attach Device Holder Support Frame:** Locate the frame nut (F) on the right side of the sofa. Position the support frame (C) against the bottom of the frame nut and rotate it until the connection is secure.
4. **Attach Device Holder:** Connect either the iPad frame (E) or the mobile frame (D) to the top of the support frame (C) until the connection is secure.

Your browser does not support the video tag.

Video: Product Installation Steps

This video demonstrates the step-by-step assembly process for the COLAMY 60399C recliner chair, including connecting the backrest, power, and device holder.

5. OPERATING INSTRUCTIONS

Your COLAMY recliner offers multiple features for enhanced comfort and convenience:

- **Power Recline:** Use the two easy-touch buttons located on the side of the chair to recline the backrest and extend the footrest. The chair can recline up to 145 degrees. Press the buttons continuously to adjust to your desired position.
- **Swivel and Gliding:** The chair features a 270° swivel mechanism and a smooth gliding motion, allowing for flexible movement and gentle rocking.
- **Device Holders:** The removable device holders can be adjusted to position your phone or iPad for optimal viewing. Ensure devices are within the specified weight limits (iPad: 1.33 lbs, Phone: 0.88 lbs).
- **Charging Ports:** Utilize the built-in USB and Type-C charging ports on the side panel to conveniently charge your electronic devices while relaxing.
- **Side Storage Pocket:** A convenient side pocket is available for storing magazines, remote controls, or other small items.



Image: Electric Power Glider Recliner

This image illustrates the electric power glider recliner in various recline positions, highlighting the 110-145 degree recline range and the control buttons.

Your browser does not support the video tag.


Video: COLAMY Electric Power Swivel Glider Rocker Recliner Chair

This video showcases the chair's electric power recline, swivel, and gliding functions, along with the integrated device holders and charging ports.

◆ Product Details ◆




360° Cell Phone
& Ipad Holders

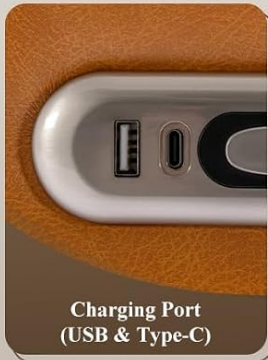

Charging Port
(USB & Type-C)



Convenient Storage Pocket

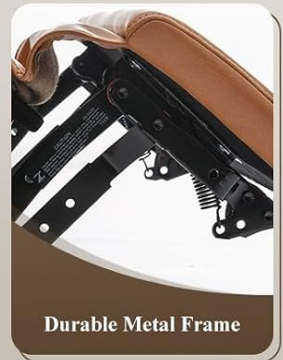

Durable Metal Frame

Image: Product Details

A close-up view of the chair's features, including the 360° adjustable phone and iPad holders, USB and Type-C charging ports, a side storage pocket, and the durable metal frame.

6. MAINTENANCE

To maintain the appearance and longevity of your COLAMY recliner:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the PU leather.
- **Regular Inspection:** Periodically check all connections and moving parts to ensure they are secure and functioning correctly.

7. TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner not operating (no power)	Power cable disconnected or damaged; power outlet issue.	Check all power connections. Ensure the power cable is securely plugged into the chair and the wall outlet. Test the outlet with another device.
Reclining mechanism is noisy or stuck	Obstruction in mechanism; loose components.	Inspect for any objects obstructing the mechanism. Ensure all bolts and screws are tightened.
Device holder not holding position	Loose connection or worn components.	Ensure the frame nut and device holder connections are tightened. Avoid excessive force or weight on the holder.
Power cord damaged by swivel action	Improper cable routing.	Ensure the power cord is routed away from the swivel mechanism to prevent pinching or damage.

If the problem persists, please contact COLAMY Customer Support.

8. SPECIFICATIONS

Feature	Detail
Brand	COLAMY
Model Name	60399C-001
Color	Brown-11
Product Dimensions	35.83"D x 30.51"W x 39.76"H
Maximum Weight Recommendation	300 Pounds
Material	PU Leather, Foam Fill
Special Features	Adjustable Lumbar, Arm Rest, Cushion Availability, Ergonomic, Upholstered Leather
Reclining Position	Up to 145°
Swivel	270°
Charging Ports	USB, Type-C
Device Holder Weight Limit (iPad)	1.33 pounds
Device Holder Weight Limit (Phone)	0.88 pounds
Item Weight	38.9 pounds

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your COLAMY 60399C Power Swivel Glider Recliner Chair, please contact COLAMY Customer Support. Refer to your purchase documentation for specific warranty terms and contact details.

You can often find support contact information on the manufacturer's website or through your retailer.