

[Manuals.plus](#) /

› [COLAMY](#) /

› COLAMY 270 Power Swivel Glider Recliner Chair Instruction Manual

COLAMY 60399

COLAMY 270 Power Swivel Glider Recliner Chair

INSTRUCTION MANUAL

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight recommendation of 300 pounds (136 kg).
- **Stability:** Ensure the chair is placed on a flat, stable surface. Do not stand on the chair or use it as a step stool.
- **Children and Pets:** Keep children and pets away from the moving parts of the recliner mechanism. Supervise children when they are near the chair.
- **Power Cord:** Position the power cord to avoid tripping hazards. Do not place heavy objects on the cord or run it under carpets.
- **Cleaning:** Disconnect the power supply before cleaning the chair.
- **Assembly:** Ensure all components are securely fastened according to the assembly instructions before use.

For additional safety information, refer to the official user manual PDF: [COLAMY User Manual \(PDF\)](#)

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- Recliner Base
- Backrest
- Power Adapter
- Mobile Device Holder
- iPad Holder
- User Manual



Image: Overview of the recliner chair's main components and accessories as they appear when unboxed.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your COLAMY recliner chair.

1. **Unpack Components:** Carefully remove all parts from the packaging and place them on a clean, soft surface to prevent scratches.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the recliner base. Slide the backrest down firmly until it clicks into place. Ensure it is securely seated.
3. **Connect Power:** Locate the power cord from the recliner base and connect it to the power adapter. Plug the

adapter into a standard electrical outlet.

4. **Install Device Holders:** The mobile and iPad holders can be attached to the designated slots on the chair's headrest or armrest as desired. Secure them by tightening the clamps.



Image: A visual representation of the recliner chair's main parts laid out, indicating how they connect during assembly.

4. OPERATING INSTRUCTIONS

4.1 Power Recline Function


The chair features an electric recline mechanism. Use the control panel located on the side of the chair to adjust the recline angle.

- Press the forward button to recline the chair and extend the footrest.
- Press the backward button to bring the chair back to an upright position and retract the footrest.
- The chair can recline up to 145 degrees, allowing for various comfortable positions.

◆◆ Product Details ◆◆



360° Cell Phone
& Ipad Holders

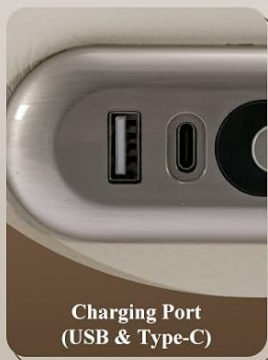

Charging Port
(USB & Type-C)



Convenient Storage Pocket



Durable Metal Frame

Image: The control panel on the side of the chair, showing the recline buttons and integrated charging ports.

4.2 Swivel and Gliding Function

The chair offers a 270-degree swivel and a smooth gliding motion for enhanced comfort and flexibility.

- **Swivel:** Gently rotate the chair to the desired direction. The swivel mechanism allows for a 270-degree rotation.
- **Gliding:** The chair provides a gentle back-and-forth gliding motion, ideal for relaxation or nursing.



Image: The recliner chair in a room, with arrows illustrating its 270-degree swivel and gliding capabilities.

4.3 USB and Type-C Charging Ports

Conveniently charge your electronic devices using the built-in USB and Type-C ports.

- Locate the USB and Type-C ports on the side control panel.
- Plug your device's charging cable into the appropriate port.
- Ensure the chair is connected to a power source for the charging ports to function.

4.4 Removable Device Holders

The chair includes adjustable holders for smartphones and iPads.

- Attach the desired holder to the designated slot on the chair.
- Adjust the clamp to securely hold your device.
- The holders are removable and can be positioned for optimal viewing.

◆◆ Product Display ◆◆



Front View



Side View



Look Down



Back View

Image: Detailed view of the adjustable mobile phone and iPad holders, showing their attachment points and flexibility.

5. MAINTENANCE AND CARE

5.1 Cleaning

To maintain the appearance and longevity of your recliner, follow these cleaning guidelines:

- **PU Leather:** Wipe clean with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the material.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Dusting:** Regularly dust the chair with a soft, dry cloth.



Image: A hand demonstrating the recommended method for cleaning the chair's surface using a soft, damp cloth.

5.2 General Care

- Avoid direct sunlight exposure to prevent fading of the upholstery.
- Keep the chair away from heat sources like radiators or fireplaces.
- Periodically check all bolts and screws to ensure they are tight. Retighten if necessary.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Chair does not recline.	Power cord not connected or loose.	Ensure the power cord is securely plugged into the chair and the wall outlet. Check the power adapter connection.
Charging ports are not working.	Chair not powered or device cable faulty.	Verify the chair is connected to power. Try a different charging cable or device to rule out cable/device issues.
Chair feels unstable or wobbly.	Loose assembly bolts.	Check all assembly points and tighten any loose bolts or screws. Ensure the backrest is fully engaged.
Unusual noise during operation.	Obstruction in mechanism or loose parts.	Inspect the reclining and swivel mechanisms for any obstructions. Ensure all parts are properly secured.

7. SPECIFICATIONS

Key technical details for the COLAMY 270 Power Swivel Glider Recliner Chair.

- **Model Name:** 60399
- **Brand:** COLAMY
- **Color:** Beige-01
- **Product Dimensions (D x W x H):** 35.83" x 30.51" x 39.76"
- **Seat Depth:** 20.87 inches
- **Arm Height:** 25.59 inches
- **Chair Backrest Width:** 29.92 inches
- **Maximum Weight Recommendation:** 300 Pounds
- **Material:** PU Leather, Foam Fill, Metal Frame

- **Reclining Angle:** Up to 145 degrees
- **Swivel Range:** 270 degrees
- **Charging Ports:** USB, Type-C
- **Included Components:** Upholstered leather chair, user manual, mobile device holder, iPad holder



Image: A diagram illustrating the various dimensions of the recliner chair, including height, width, depth, and seat measurements.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact COLAMY customer service. Details are typically provided with your purchase documentation or on the official COLAMY website.

When contacting support, please have your model number (60399) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLD51Z1L>

More documents and user manuals: <https://manuals.plus/>