

Manuals.plus /

› Gavigain /

› Gavigain Powerful Milk Frother EW-071 Instruction Manual

Gavigain EW-071

Gavigain Powerful Milk Frother

Model: **EW-071**

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Gavigain Powerful Milk Frother EW-071. This handheld foam maker is designed for efficient frothing and mixing of various beverages and ingredients. Please read this manual carefully before use to ensure proper operation and maintenance.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Electric Milk Frother (Main Unit)
- 1 x Double Layer Milk Frother Head
- 1 x Egg Beater Head
- 1 x Mixing Head
- 1 x USB Cable
- 1 x Charging Base
- 1 x English Manual



Image: All components of the Gavigain Milk Frother, including the main unit, charging base, double-layer frother head, egg beater head, and mixing head. Below are three small images demonstrating the frother mixing eggs, a dark beverage, and milk.

3. PRODUCT FEATURES

- **Durable Construction:** Made from high-quality ABS and stainless steel for long-lasting performance.
- **Three Speed Settings:** Features intelligent three-speed adjustment (3500RPM, 8500RPM, 13500RPM) to suit various mixing needs.
- **Convenient USB Charging:** Easily rechargeable via USB, compatible with mobile power banks and computer equipment.
- **Easy to Clean and Store:** Whisk attachments are simple to clean under running water. The compact design allows for convenient storage.
- **Versatile Use:** Suitable for frothing various types of milk (dairy and non-dairy), and mixing other liquids like eggs, butter, and cream.

4. SETUP

4.1 Charging the Frother

1. Connect the provided USB cable to the charging port located at the bottom of the frother unit.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter, power bank).
3. The indicator light will illuminate during charging. A full charge typically takes approximately 3 hours.
4. Once fully charged, the indicator light may change color or turn off, depending on the unit. Disconnect the frother from the charging cable.



Image: A close-up view of the bottom of the Gavigain milk frother, clearly showing the USB charging port and regulatory markings like ROHS, CE, FCC, and the model number EW-071.

4.2 Attaching the Whisk Head

1. Select the desired whisk head (double-layer frother, egg beater, or mixing head) for your task.
2. Align the whisk head with the connector on the main frother unit.
3. Gently push the whisk head into the connector until it clicks securely into place.
4. To remove, pull the whisk head firmly away from the main unit.



Image: A close-up of the three distinct interchangeable whisk attachments for the Gavigain milk frother: a large balloon whisk, a double-layer frothing whisk, and a spiral mixing whisk.


5. OPERATING INSTRUCTIONS

5.1 Powering On/Off and Speed Adjustment

1. Ensure a whisk head is securely attached.
2. Press the power button once to turn on the frother at the lowest speed (3500RPM).
3. Press the power button again to cycle through the speeds: medium (8500RPM), then high (13500RPM).
4. Press the power button a fourth time to turn the frother off.

5.2 Frothing Milk

1. Pour cold or warm milk into a cup or pitcher. For best results, use milk that is at least 1/3 full in the container.
2. Insert the double-layer frother head into the milk, ensuring it is submerged but not touching the bottom.
3. Turn on the frother and select your desired speed. Move the frother gently up and down to create foam.
4. Continue frothing until the desired consistency is achieved. This typically takes 15-30 seconds.
5. Turn off the frother before removing it from the milk.

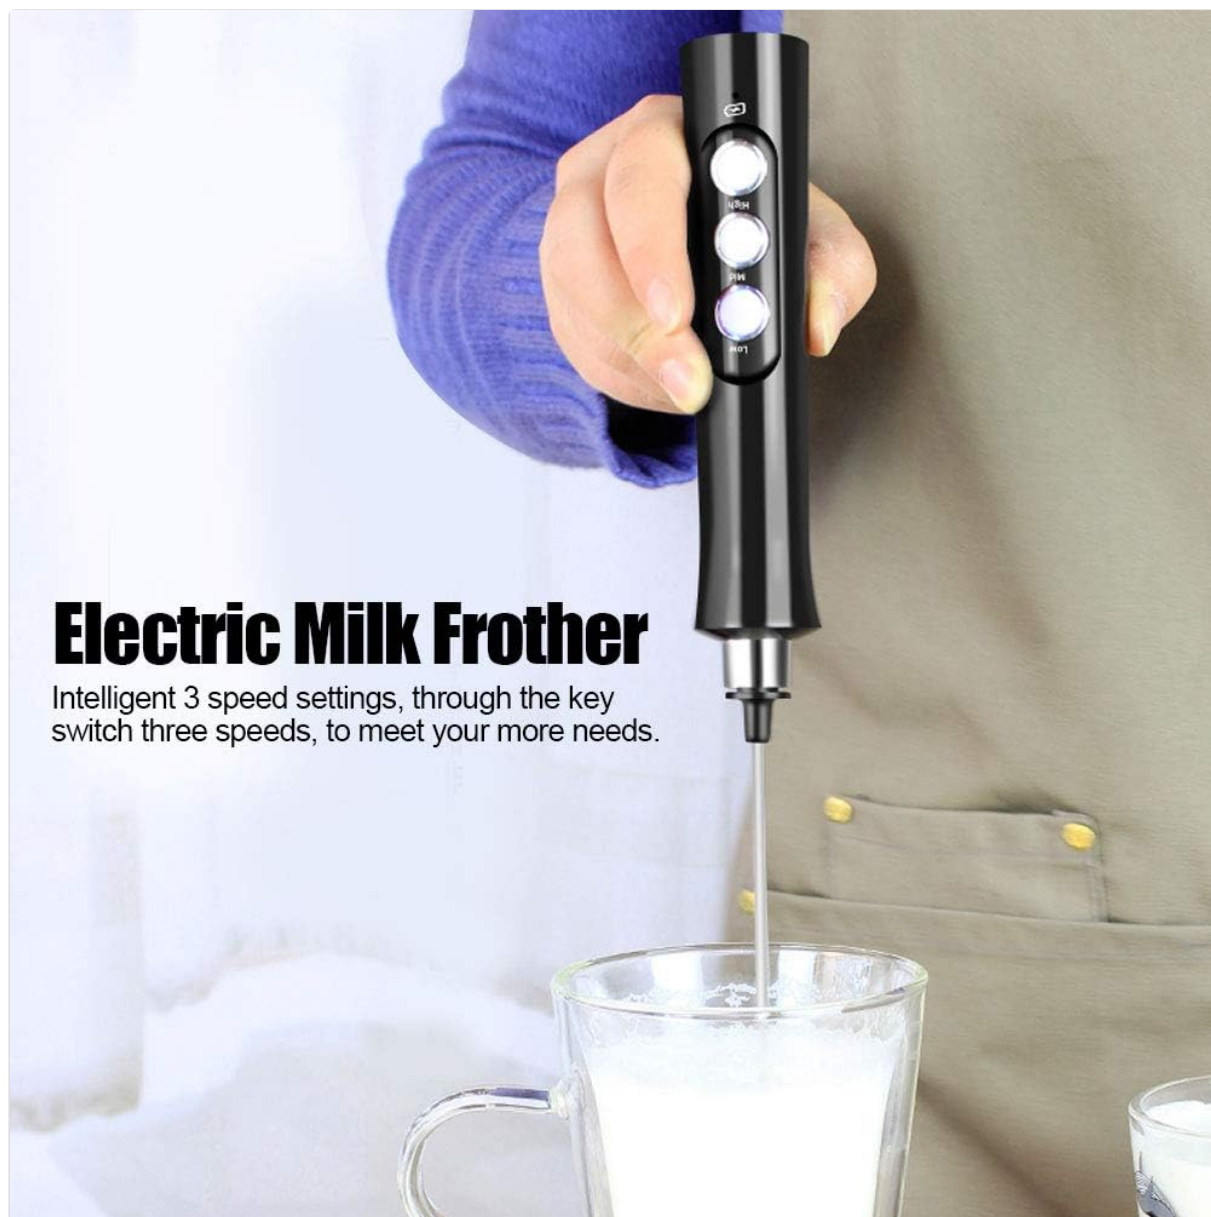

Electric Milk Frother

Intelligent 3 speed settings, through the key switch three speeds, to meet your more needs.

Image: A person's hand holding the black Gavigain milk frother, which is actively frothing milk in a clear glass. The frother features three illuminated white buttons on its body.

5.3 Mixing Other Liquids

1. Attach the appropriate whisk head (egg beater or mixing head) for your task.
2. Submerge the whisk head into the liquid you wish to mix (e.g., eggs, protein powder, hot chocolate).
3. Turn on the frother and select the desired speed.
4. Mix until the ingredients are thoroughly combined.
5. Turn off the frother before removing it from the liquid.



Image: The Gavigain milk frother, with a whisk attachment, mixing eggs in a clear glass bowl on a wooden cutting board. Several raw eggs are visible in the background.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Whisk Heads

1. After each use, remove the whisk head from the main unit.
2. Rinse the whisk head under running hot water. For quick cleaning, you can place the whisk head in a glass of hot water and briefly turn on the frother.
3. For thorough cleaning, use a mild dish soap and a soft brush if necessary.
4. Rinse thoroughly and allow to air dry completely before storing.

6.2 Cleaning the Main Unit

- The main unit is **not waterproof**. Do not submerge it in water.
- Wipe the main unit with a damp cloth to remove any spills or residue.
- Ensure the unit is completely dry before charging or storing.

6.3 Storage

- Store the frother and its attachments in a clean, dry place.
- The charging base can be used to store the frother upright on a countertop.



Image: The black Gavigain milk frother, equipped with the large balloon whisk attachment, standing upright on its dedicated charging base.

7. TROUBLESHOOTING

If you encounter issues with your frother, please refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery or no charge.	Charge the frother using the provided USB cable and charging base.
Weak frothing or mixing.	Low battery, incorrect whisk head, or whisk head not properly attached.	Ensure the frother is fully charged. Use the appropriate whisk head for the task. Re-attach the whisk head securely.
Frother stops unexpectedly.	Low battery or motor overload.	Charge the frother. Avoid using the frother with excessively thick liquids or for prolonged periods without rest.
Whisk head detaches during use.	Whisk head not securely attached.	Ensure the whisk head is pushed firmly into the main unit until it clicks.

8. SPECIFICATIONS

Item Type	Electric Milk Frother
Model	EW-071
Material	ABS + Stainless Steel
Color	Black
Weight	Approx. 235g / 8.3oz
Built-in Battery	1200mAh 18650 Lithium Battery
Speed Settings	3 Speeds: 3500RPM, 8500RPM, 13500RPM
Power	2.5 W
Current	0.5 A
Voltage	4.5 V - 5.5 V

9. SAFETY INFORMATION

- Keep out of reach of children.
- Do not immerse the main frother unit in water or other liquids.
- Use only the provided USB cable and charging base for charging.
- Avoid touching the whisk head while the frother is operating.
- Do not use the frother if any part is damaged.
- Do not attempt to repair or disassemble the frother yourself. Contact customer support if issues arise.
- Ensure the frother is turned off before attaching or removing whisk heads.

