



Manuals.plus /

› Aiwa /

› Aiwa AGT-23 Android Console System User Manual

## Aiwa AGT-23

# Aiwa AGT-23 Android Console System User Manual

Model: AGT-23

## INTRODUCTION

---

The Aiwa AGT-23 Android Console System is designed to transform your television into an interactive entertainment hub. This system integrates a quad-core Android platform, providing a seamless experience for interactive TV games, online movies, web browsing, and a variety of Android controller games. It offers a versatile entertainment solution for all users.

This manual provides essential instructions for setting up, operating, and maintaining your AGT-23 console system. Please read it thoroughly before use to ensure proper functionality and to maximize your entertainment experience.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Aiwa AGT-23 Android Console Unit
- G Sensor Controller
- HDMI Cable
- Power Adapter
- User Manual (this document)



**Figure 1:** Contents of the Aiwa AGT-23 package, including the console unit, G Sensor Controller, HDMI cable, and power adapter.

## SETUP GUIDE

1. **Connect to TV:** Insert one end of the provided HDMI cable into the HDMI OUT port on the Aiwa AGT-23 console and the other end into an available HDMI IN port on your television.
2. **Connect Power:** Plug the power adapter into the DC IN port on the console, then plug the adapter into a standard electrical outlet.
3. **Power On:** Turn on your television and select the correct HDMI input source using your TV remote. Press the Power button on the Aiwa AGT-23 console. The system will boot up, and the Android interface will appear on your screen.
4. **Controller Pairing:** The G Sensor Controller should automatically pair with the console upon initial power-up. If it does not, refer to the controller's specific instructions for pairing. Ensure the controller has fresh batteries.
5. **Connect to Wi-Fi:** Once the system is booted, navigate to the Settings menu on the Android interface. Select "Wi-Fi" and choose your home network. Enter the password if prompted to connect to the internet.

## OPERATING INSTRUCTIONS

### Navigating the Interface

Use the G Sensor Controller to navigate the Android interface. The controller functions as a motion-sensing device, allowing you to point and click on screen elements. Buttons on the controller provide functions such as selection (OK), back, home, and volume control.

### Accessing Applications and Games

From the home screen, you can access pre-installed applications and games. Additional applications can be downloaded from the pre-installed app store, provided you have an active internet connection.

## Interactive and Body Motion Games

The G Sensor Controller enables interactive and body motion games. Follow the on-screen instructions within specific games to utilize the motion-sensing capabilities for an immersive gaming experience.

## Online Content and Web Browsing

With a Wi-Fi connection, you can stream online movies, browse the web, and access various online services directly from your TV using the console.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console and controller. Do not use liquid cleaners or abrasive materials, as they may damage the surfaces.
- **Storage:** When not in use for extended periods, store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the console's ventilation openings are not blocked to prevent overheating. Do not place the console on soft surfaces like carpets or blankets during operation.
- **Battery Replacement:** Replace the batteries in the G Sensor Controller when performance degrades. Refer to the controller's specific instructions for battery type and replacement procedure.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the console and a working electrical outlet. Try a different outlet.
No signal on TV	Incorrect HDMI input selected or loose HDMI cable.	Verify the TV is set to the correct HDMI input. Check that the HDMI cable is securely connected at both ends. Try a different HDMI port on the TV or a different HDMI cable.
Controller not responding	Low batteries or pairing issue.	Replace controller batteries. Refer to the controller's manual for re-pairing instructions if necessary.
Cannot connect to Wi-Fi	Incorrect password, out of range, or router issue.	Double-check the Wi-Fi password. Ensure the console is within range of your Wi-Fi router. Restart your router and try again.

## SPECIFICATIONS

<b>Model Number</b>	AGT-23
<b>System</b>	Quad-core Android System
<b>Connectivity</b>	HDMI, Built-in Wi-Fi
<b>Controller</b>	G Sensor Controller
<b>Package Dimensions</b>	26.4 x 18.4 x 11.4 cm
<b>Package Weight</b>	1.4 kg
<b>Language</b>	English
<b>Release Date</b>	19 October 2023

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Aiwa website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact Aiwa customer service through the channels provided on their official support page.