

[Manuals.plus](#) /

› [Goldair](#) /

› Goldair Slim 7 Oil Heater (Model GSOR-700) Instruction Manual

Goldair GSOR-700

Goldair Slim 7 Oil Heater (Model GSOR-700) Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Goldair Slim 7 Oil Heater. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The Goldair Slim 7 Oil Heater is a portable oil-filled radiator designed to provide silent and even heat distribution. It features multiple heat settings and integrated safety mechanisms for reliable indoor use.



Image 1.1: Goldair Slim 7 Oil Heater. This image displays the heater's slim profile, control panel, and castor wheels for portability.

2. SAFETY INFORMATION

Important: Always read all instructions before using this appliance to prevent injury or damage.

- Ensure the heater is placed on a stable, level, and heat-resistant surface.
- Do not cover the heater. Covering the heater can lead to overheating and fire hazards.
- Maintain a safe distance of at least 1 meter (3 feet) from flammable materials such as curtains, furniture, bedding, and paper.
- This appliance is equipped with a safety tip-over switch, which automatically turns off the unit if it is accidentally knocked over. If this occurs, place the heater upright on a stable surface, and it will resume operation.
- The cool touch housing helps prevent burns during operation, but caution should still be exercised, especially around children and pets.
- Do not use the heater in bathrooms, laundry areas, or other locations where it may come into contact with water or high humidity.
- Unplug the heater from the electrical outlet when not in use or before cleaning.
- Do not operate the heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Goldair Slim 7 Oil Heater
- Castor wheels (if not pre-assembled)
- Instruction Manual

4. SETUP

1. **Unpacking:** Carefully remove the heater and all components from the packaging. Retain packaging for storage if desired.
2. **Attaching Castor Wheels:** If the castor wheels are not pre-assembled, turn the heater upside down. Insert the U-shaped bolts into the holes on the base of the heater, then attach the castor wheel assemblies to the bolts. Secure them firmly with the provided wing nuts. Ensure all four wheels are securely attached and the heater is stable.
3. **Placement:** Place the heater on a firm, level, and stable floor surface. Ensure it is positioned away from walls, furniture, and any combustible materials. Allow adequate clearance around the heater for proper air circulation.
4. **Power Connection:** Plug the heater into a suitable 220-240V AC, 50Hz electrical outlet. Ensure the outlet is in good condition and not overloaded.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before operating the heater.

1. **Power On/Off:** Once plugged in, locate the main power switch (usually a rocker switch) on the control panel. Flip it to the 'ON' position to power the unit.
2. **Selecting Heat Settings:** The Goldair Slim 7 Oil Heater offers three heat settings. Use the control dial or buttons on the panel to select your desired heat output:

- **Low (1000W):** For gentle, continuous heat.
 - **Medium (1500W):** For moderate heating.
 - **High (2500W):** For rapid heating of small to medium-sized rooms.
3. **Thermostat Control:** Adjust the thermostat dial to your desired room temperature. The heater will cycle on and off automatically to maintain the set temperature, conserving energy once the room reaches the desired warmth. Turn the dial clockwise for a higher temperature and counter-clockwise for a lower temperature.
4. **Safety Tip-Over Switch:** In the event the heater is accidentally knocked over, the integrated safety tip-over switch will automatically shut off the power. To resume operation, simply place the heater upright on a stable surface.
5. **Power Off:** To turn off the heater, set the heat setting to 'OFF' or turn the main power switch to the 'OFF' position. Unplug the heater from the wall outlet when not in use.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Before cleaning, always unplug the heater from the power outlet and allow it to cool completely. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish. Ensure no water enters the internal components.
- **Storage:** When the heater is not in use for extended periods, unplug it and allow it to cool. Store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. Do not wrap the cord tightly around the heater when storing, as this can cause damage.

7. TROUBLESHOOTING

If you encounter issues with your Goldair Slim 7 Oil Heater, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Heater does not turn on.	• Power cord not securely plugged in. • Power outlet is not functional. • Main power switch is off. • Tip-over switch activated.	• Ensure the power cord is fully inserted into a working outlet. • Test the outlet with another appliance. • Flip the main power switch to the 'ON' position. • Place the heater upright on a stable surface.
Heater is not heating effectively.	• Incorrect heat setting selected. • Thermostat set too low. • Room is too large for the heater's capacity. • Drafts or open windows/doors.	• Select a higher heat setting (e.g., 2500W). • Adjust the thermostat dial to a higher temperature. • Ensure the heater is used in an appropriately sized room. • Close windows and doors to minimize heat loss.

Problem	Possible Cause	Solution
Heater emits unusual noise or smell.	- Internal malfunction. - Dust accumulation.	Unplug the heater immediately. Do not attempt to repair. Contact customer support. - Clean the exterior of the heater as per maintenance instructions.

If the problem persists after attempting these solutions, please contact Goldair customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Goldair
Model Number	GSOR-700
Power Source	Corded Electric
Heating Method	Convection (Oil-filled)
Heat Settings	1000W, 1500W, 2500W
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Color	White
Product Dimensions (D x W x H)	36 cm x 13 cm x 65 cm
Special Features	Safety Tip-Over Switch, Cool Touch Housing, Portable with Multi-directional Castors

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your Goldair Slim 7 Oil Heater. This document outlines the terms and conditions of your product's warranty.

Should you require technical assistance, have questions about operation, or need to report a fault, please contact Goldair customer service. Contact details can typically be found on the product packaging, the Goldair official website, or the warranty card.