

Pomya Pomyabsh56qm9u2

Pomya Automatic 4-Deck Card Shuffler Instruction Manual

Model: Pomyabsh56qm9u2

INTRODUCTION

The Pomya Automatic Card Shuffler is designed to provide a quick and efficient way to shuffle 1 to 4 decks of standard-sized playing cards. Its lightweight and portable design makes it suitable for various settings, from home game nights to outdoor activities. Powered by AA batteries, it offers convenient, cord-free operation and a long battery life for extended use, ensuring a smooth and fair game experience.

SETUP

1. **Unpack the Shuffler:** Carefully remove the automatic card shuffler and any accessories from its packaging.
2. **Install Batteries:** Locate the battery compartment on the underside of the shuffler. Open the compartment and insert 4 AA batteries (not included), ensuring correct polarity. Close the battery compartment securely.
3. **Placement:** Place the shuffler on a stable, flat surface.

Simply flick the switch at the bottom to effectively shuffle the cards, easy to operate.



Image: Underside of the shuffler, highlighting the battery compartment and power switch.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch on the bottom of the shuffler and turn it to the 'ON' position.
2. **Load Cards:** Divide your playing cards into two equal or near-equal stacks. Place one stack into each of the two card trays on either side of the shuffler. The shuffler can accommodate 1 to 4 standard decks.
3. **Initiate Shuffling:** Press the 'PRESS DOWN TO OPERATE' button located at the front of the shuffler. The internal mechanism will begin to shuffle the cards from both trays into the central collection area.
4. **Retrieve Cards:** Once the shuffling process is complete, the shuffled deck will be available in the central tray. Remove the cards to begin your game.



Suitable for all standard size playing cards, great for professionals and beginners.

Light weight and easy to carry.

Image: Automatic card shuffler with two decks of cards placed in the input trays.

Video: Demonstration of the automatic card shuffler in action, showing card loading and shuffling.

MAINTENANCE

- **Cleaning:** To maintain optimal performance, regularly clean the card trays and the internal shuffling mechanism. Use a soft, dry cloth to wipe away any dust or debris. Avoid using abrasive cleaners or liquids directly on the device.
- **Battery Replacement:** When the shuffling speed decreases or the device stops functioning, it's time to replace the batteries. Follow the battery installation steps in the Setup section.
- **Storage:** When not in use, store the card shuffler in a dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Shuffler not turning on:**
 - Ensure the power switch on the bottom is in the 'ON' position.
 - Check if the batteries are correctly installed with the right polarity.
 - Replace old batteries with new ones.
- **Cards not shuffling smoothly:**
 - Ensure the cards are standard size and not bent or damaged.
 - Verify that the card trays are not overloaded.
 - Clean the internal mechanism and card pathways to remove any obstructions.
- **Unusual noise during operation:**
 - Check for any foreign objects or debris inside the shuffler.
 - Ensure cards are properly aligned in the trays.

SPECIFICATIONS

Feature	Detail
Model Number	Pomyabsh56qm9u2
Material	Plastic
Dimensions	21.5 x 15.8 x 11.9 cm
Weight	Approx. 582 g (20.5 oz)
Power Source	4 AA Batteries (not included)
Card Capacity	1 to 4 standard decks

WARRANTY AND SUPPORT

This product is eligible for a 30-day free return policy. For any issues or inquiries regarding your Pomya Automatic Card Shuffler, please refer to the retailer's customer service or visit the official Pomya brand store for further assistance.

Pomya Brand Store: [Visit the Pomya Store](#)

