

[Manuals.plus](#) /

› [HHH](#) /

› HHH ATV 125cc Quad CT125-8 Instruction Manual

HHH CT125-8

HHH ATV 125cc Quad CT125-8 Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective operation, assembly, and maintenance of your HHH ATV 125cc Quad, model CT125-8. This utility-style ATV features a 125cc engine with automatic transmission and reverse, designed for youth and adults. It comes equipped with strong 19/18 inch tires, LED lights, and safety features like a stop switch and speed limiter. Please read this manual thoroughly before operating the ATV.

SETUP

Unboxing and Initial Assembly

Your HHH ATV 125cc Quad is shipped in a protective metal crate. Carefully remove the outer cardboard packaging and then proceed to dismantle the metal frame. Ensure all components are accounted for before beginning assembly.



HHH 125cc ATV Quad securely packaged in its shipping crate.

This video demonstrates the unboxing process and initial assembly steps for the 125cc ATV, including removing the outer packaging and metal frame.

Handlebar Installation

Attach the handlebars to the steering column using the provided clamps and bolts. Ensure they are centered and tightened securely to prevent movement during operation.

Detailed steps for installing and securing the handlebars onto the ATV.

Front Wheel Assembly

Mount the front wheels onto the axles. Secure them with the appropriate washers, nuts, and cotter pins.

Ensure the cotter pins are bent to prevent the nuts from loosening.

Instructions for mounting the front wheels, including securing nuts and cotter pins.

Rear Wheel Assembly

Install the rear wheels onto the rear axle. Use the provided hardware, including washers, nuts, and cotter pins, ensuring they are securely fastened and the cotter pins are properly bent.

Instructions for mounting the rear wheels, including securing nuts and cotter pins.

Front Bumper Installation

Attach the front bumper to the designated mounting points on the ATV frame. Use the provided bolts and tighten them firmly.



Front view of the HHH 125cc ATV, highlighting the installed front bumper.

Guide to installing the front bumper onto the ATV frame.

Rear Rack Installation

Mount the rear utility rack to the rear of the ATV using the provided brackets and hardware. Ensure all connections are tight.



Rear view of the HHH 125cc ATV, showing the installed rear utility rack.

Steps for attaching the rear utility rack to the ATV.

Battery Connection

Locate the battery compartment, typically under the seat. Connect the positive (+) terminal (red cable) and then the negative (-) terminal (black cable). Ensure connections are secure.

Demonstration of connecting the battery terminals for initial power-up.

Safety Flag Installation

Insert the safety flag pole into its designated holder, usually at the rear of the ATV. This enhances visibility for other riders.

Instructions for installing the safety flag for increased visibility.

OPERATING THE ATV

Ignition and Kill Switch

To start the ATV, ensure the kill switch (red button on the left handlebar) is in the 'run' position (pushed down). Insert the key into the ignition and turn it to the 'ON' position. The neutral (N) light on the dash should illuminate.

This video demonstrates the proper procedure for starting the 125cc Gas ATV, including ignition and safety switch usage.

Throttle and Brakes

The ATV features a thumb throttle on the right handlebar. Gently press it to accelerate. For braking, use the hand brake lever on the left handlebar or the foot brake pedal on the right footrest. Always apply brakes smoothly.

Demonstration of throttle control and effective use of hand and foot brakes.

Gear Shifting

The ATV has an automatic transmission with reverse. Use the foot shifter located on the left side. Push forward for drive, center for neutral, and push back for reverse. The corresponding indicator light (N or R) will illuminate on the dash.

Guide on how to use the foot shifter to engage drive, neutral, and reverse gears.

Adjustable Speed Limiter

The ATV is equipped with an adjustable speed limiter for safety. This allows you to control the maximum speed, which is particularly useful for new or younger riders. Adjust the limiter using the bolt located near the throttle assembly.

This video illustrates how to adjust the speed limiter on the ATV for varying rider experience levels.

MAINTENANCE

Tire Pressure

Regularly check and maintain the correct tire pressure for optimal performance and safety. Refer to the tire sidewall for recommended PSI. Proper tire pressure ensures stability and extends tire life.

Demonstration of checking and adjusting tire pressure for optimal performance and safety.

General Care

Perform regular oil changes, use correct gasoline, and ensure the ATV is well-maintained. This includes checking all bolts and connections for tightness before each ride. Keep the ATV clean and stored in a dry place.

TROUBLESHOOTING

If the ATV does not start, check the kill switch position, ensure the key is in the 'ON' position, and confirm the battery connections are secure. Verify that there is fuel in the tank and the fuel valve is open. If issues persist, consult a qualified technician.

SPECIFICATIONS

- **Product Dimensions:** 58.3 x 38.2 x 36.6 inches
- **Item Weight:** 300 pounds
- **Item Model Number:** CT125-8
- **Manufacturer Recommended Age:** 16 years and up
- **Max Load:** 166 lbs
- **Min Ground Clearance:** 4.3 inches
- **Wheels (Front/Rear):** 19x7-8 / 18x9.5-8 inches
- **Transmission:** Automatic with Reverse
- **Shift Gear:** Foot Shift

- **Starting System:** Electric
- **Brakes (Front/Rear):** Drum / Hydraulic Disc

WHAT'S IN THE BOX

- 125cc ATV with Double headlights, safety Stop switch and speed limiter
- Matching Rims
- Reverse
- Strong Big Tires
- LED Lights

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact the seller directly. Ensure you retain your proof of purchase for any warranty claims.