

[Manuals.plus](#) /

> [Roku](#) /

> Roku 40" Select Series 1080p Full HD Smart RokuTV Instruction Manual

## Roku 40R2A5R

# Roku 40" Select Series 1080p Full HD Smart RokuTV Instruction Manual

Model: 40R2A5R

## 1. PRODUCT OVERVIEW

---

The Roku 40" Select Series 1080p Full HD Smart RokuTV offers a seamless entertainment experience with its integrated Roku platform. Enjoy bright, full HD picture quality and clear audio. The customizable home screen provides quick access to streaming apps, inputs, and free live TV. This model features a bezel-less design and comes with a voice remote for easy navigation.

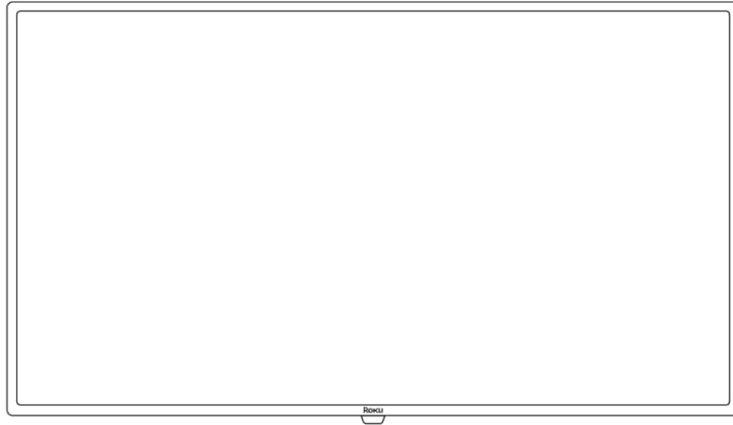 


Image: Front view of the Roku 40" Select Series Full HD Smart TV.


## 2. WHAT'S IN THE BOX

 - Roku 40" Select Series Full HD Smart TV
- Roku voice remote with batteries
- TV Stands (2)
- Stand screws (4)
- User Manual (this document)


# What's in the box




Roku Select Series TV

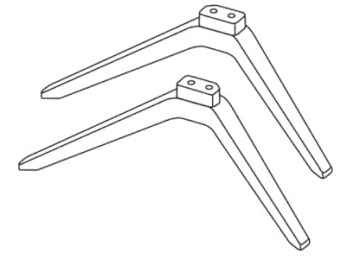

TV stands

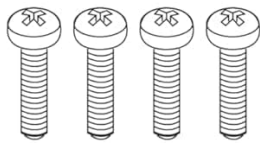 

Stand screws  
x 4

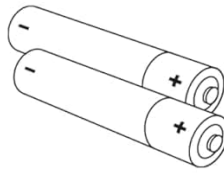 

Pre-installed  
AAA batteries  
x 2



Roku  
Voice Remote

Image: Diagram illustrating the components included in the Roku TV package.

## 3. SETUP GUIDE

### 3.1 Attaching the TV Stands

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each TV stand with the corresponding screw holes on the bottom of the TV.
3. Insert the provided screws into the holes and tighten them securely with a screwdriver.
4. Ensure both stands are firmly attached before proceeding.

### 3.2 Connecting Power and Initial Setup

1. Connect the power cord to the TV and then to a standard electrical outlet (100-240 VAC, 50-60 Hz).
2. Insert the AAA batteries into the Roku voice remote.
3. Press the power button on the remote to turn on the TV.
4. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account.
5. The TV will guide you through adding your preferred streaming apps and setting up any connected devices.




Image: Close-up view of the TV's side panel, showing various input ports like HDMI, USB, and antenna connection.

## 4. OPERATING YOUR ROKU TV

### 4.1 Home Screen Navigation

The Roku home screen provides a centralized hub for all your entertainment. Easily access streaming apps, connected devices (like game consoles or cable boxes), and free live TV channels. The interface is designed for quick and intuitive navigation using your Roku voice remote.
 
## Roku Select Series HD TVs

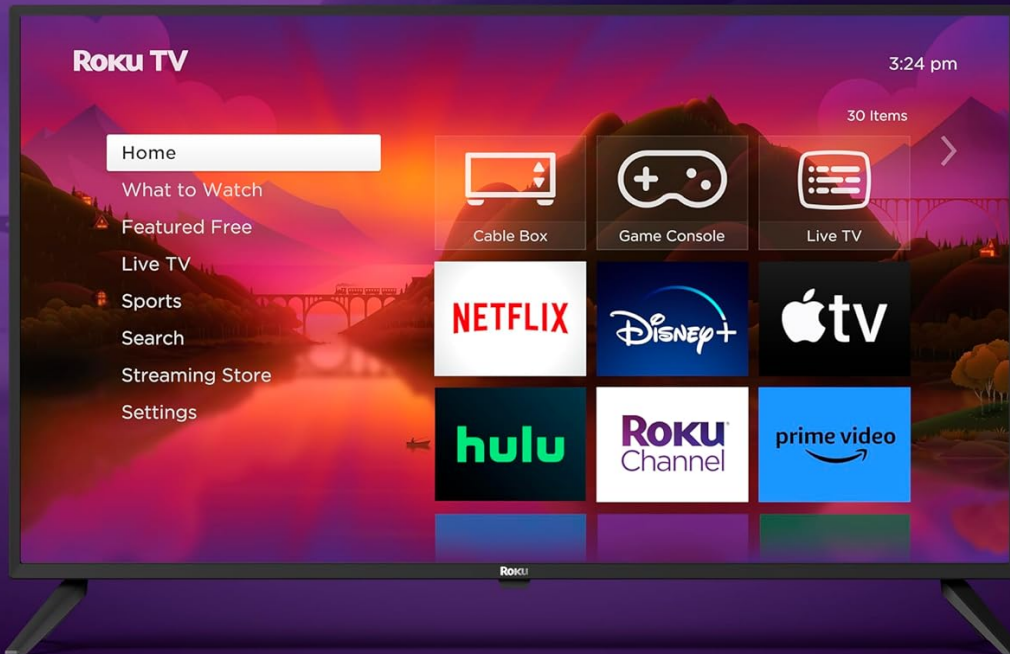

# The smart TV that makes sense

Image: The Roku TV home screen, showing a grid of streaming applications and input selections.

### 4.2 Using the Voice Remote

The included voice remote simplifies your TV experience. Use voice commands to search for movies, shows, or songs across thousands of streaming apps. Dedicated shortcut buttons provide instant access to popular services like Netflix, Disney+, and Apple TV. Volume controls are conveniently located on the side of the remote.



## No-nonsense voice remote

Quickly search across thousands of TV streaming apps, play entertainment, control your streaming, and more.

Image: Close-up of the Roku voice remote, highlighting the voice command button and dedicated app shortcuts.

### 4.3 Picture and Sound Settings

The Roku TV delivers a bright, full HD picture with exceptional clarity. It features direct LED backlighting for better brightness and uniformity. Enhanced audio output is provided by built-in speakers. You can adjust picture modes, screen brightness, and other advanced settings through the TV's menu to optimize your viewing experience.

### 4.4 Smart Home Integration

The Roku TV is compatible with various smart home ecosystems, including Apple AirPlay 2, Apple Home, Alexa, and Google Home. This allows for integrated control and seamless interaction with your existing smart devices.

# A perfect fit for any smart home



Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries and regions. The Works with Apple Home badge is a trademark of Apple Inc. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa. Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice. Only supports English language.

Image: Icons representing compatibility with various smart home platforms.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your Roku TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics. Gently wipe the screen to remove dust and smudges. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Exterior:** Wipe the TV's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the TV.
- **Ventilation:** Ensure the TV's ventilation openings are not blocked to prevent overheating. Maintain adequate space around the TV for air circulation.
- **Power Management:** Unplug the TV from the power outlet during electrical storms or when it will be left unattended for long periods.

## 6. TROUBLESHOOTING

If you encounter issues with your Roku TV, try the following basic troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into both the TV and the electrical outlet. Check if the outlet is

functioning by plugging in another device.

- **No Picture/Sound:** Verify that the correct input source is selected on the TV. Check all cable connections (HDMI, AV, etc.) for looseness.
- **Remote Not Responding:** Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV. Re-pair the remote if necessary (refer to the on-screen instructions during initial setup or the Roku support site).
- **Network Connection Issues:** Restart your Wi-Fi router and modem. Go to the TV's network settings to reconnect to your Wi-Fi network.
- **App Freezing/Crashing:** Restart the specific app. If the issue persists, restart the TV by unplugging it from the power outlet for 30 seconds and then plugging it back in.

For more detailed troubleshooting or persistent issues, visit the official Roku support website.

## 7. SPECIFICATIONS

Feature	Detail
Screen Size	40 Inches
Brand	Roku
Model Number	40R2A5R
Display Technology	LED
Resolution	1080p Full HD
Refresh Rate	60 Hz
Operating System	Roku OS
Special Features	Bezel-Less Design, Voice Remote
Connectivity Technology	HDMI, USB, Wi-Fi
Total HDMI Ports	3
Total USB 3.0 Ports	1
Audio Output Mode	Enhanced
Control Method	App Control, Remote Control, Voice Control
Screen Mirroring Technology	AirPlay 2, Miracast
Product Dimensions (D x W x H)	8.7"D x 35.5"W x 22.6"H
Item Weight Without Stand	11.2 Pounds
VESA Mount Standard	200 x 100 mm

## 8. WARRANTY AND SUPPORT

### 8.1 Limited Warranty

Roku warrants the hardware of this device against defects in materials and workmanship under normal use for a period of

one (1) year from the date of purchase ("Warranty Period"), provided it is used in accordance with the provided documentation. If a hardware defect is determined during the Warranty Period, Roku's sole obligation and your exclusive remedy will be to either repair or replace the unit with a new or rebuilt device, at Roku's option.

Important information about warranty returns and replacements is available on the Roku support site.

## **8.2 Product Returns**

You may return a device for any reason, subject to the terms of the applicable return policy:

- Within thirty (30) days from the date of purchase from Roku.
- Within the applicable return period if purchased from an authorized reseller or distributor.

Additional details regarding product returns can be found on the Roku support site.