

TOUCHBeauty TB-1459

TOUCHBeauty Electric Shaver for Women Model TB-1459 Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your TOUCHBeauty Electric Shaver for Women, Model TB-1459. Please read these instructions thoroughly before first use and retain for future reference. This cordless, wet/dry shaver is designed for convenient hair removal, offering a smooth and comfortable experience.

2. SAFETY INFORMATION

For safe and optimal use of the TOUCHBeauty Upgrade Electric Shaver for Women, please follow these guidelines:

- Always ensure the razor blades are dry after use to prevent skin irritation and bacterial growth.
- Clean the device by removing and rinsing the waterproof ports with water, then wiping dry.
- Be cautious when using the shaver near water, and do not immerse it in water.
- Use the shaver only with the recommended AAA batteries and ensure it is turned off when not in use.
- Do not use the shaver while charging, and store it in a cool, dry place.
- If you experience any skin irritation or discomfort during use, discontinue use immediately.

3. PACKAGE CONTENTS

Verify that all items are present in your product package:

- TOUCHBeauty Electric Shaver (Model TB-1459)
- 2 x AAA Batteries
- Cleaning Brush
- Travel Pouch
- User Manual



Image: The complete TOUCHBeauty Electric Shaver package, including the shaver, batteries, cleaning brush, and travel pouch.

4. SETUP: BATTERY INSTALLATION

Your TOUCHBeauty Electric Shaver operates on 2 AAA batteries. Follow these steps to install them:

1. Ensure the shaver is turned off.
2. Locate the battery cover at the bottom of the shaver.
3. Gently twist or slide the battery cover to open it.
4. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
5. Replace the battery cover, ensuring it is securely closed to maintain water resistance.



Image: A diagram illustrating the various parts of the shaver, including the battery cover and on/off switch.

5. OPERATING INSTRUCTIONS

The TOUCHBeauty Electric Shaver is designed for efficient and comfortable hair removal on various body parts.

5.1 Turning On/Off

To turn the shaver on, slide the power switch located on the front of the device upwards. To turn it off, slide the switch downwards.

5.2 Shaving Techniques

This shaver can be used for both wet and dry shaving. For optimal results:

- **Dry Shaving:** Ensure your skin is clean and completely dry. Hold the shaver at a 90-degree angle to the skin and move it gently against the direction of hair growth.
- **Wet Shaving:** Apply shaving cream or gel to your skin. Hold the shaver at a 90-degree angle and glide it smoothly over the skin. Rinse the shaver head frequently during use to prevent clogging.

The shaver features a combination of 2 straight trim blades and foil blades for effective hair removal without pulling. The ultra-thin blade and smooth swivel head protect sensitive skin.



Image: A woman demonstrating the safe and gentle use of the shaver on her arm.

5.3 Using the Efficiency Comb

An efficiency comb attachment is included to help adjust the length of hair, particularly useful for trimming longer hair or for specific areas like the bikini line.

1. Ensure the shaver is turned off.
2. Align the efficiency comb with the shaver head and gently snap it into place.
3. Turn on the shaver and use it as desired.
4. After use, turn off the shaver and remove the comb by gently pulling it off.

Efficiency Comb

The comb could adjust the length of the hair



Image: The electric shaver shown with its efficiency comb attachment, designed for precise trimming.

5.4 Recommended Usage Areas

The shaver is suitable for various body areas, including:

- Arms
- Legs
- Underarms
- Bikini Lines

Flawless and Painless Hair Remover

Wet&Dry Safe to Use



Image: Visual guide demonstrating the shaver's application on arms, legs, underarms, and bikini lines.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your shaver.

- 1. Turn Off:** Always ensure the shaver is turned off before cleaning.
- 2. Remove Shaver Head:** Press the blade release button (refer to the parts diagram in Section 4) to detach the shaver head.
- 3. Clean Blades:** Use the provided cleaning brush to remove any trapped hair from the blades and foil.
- 4. Rinse:** The shaver head is waterproof. You can rinse it directly under running water. Do not immerse the entire shaver body in water.
- 5. Dry:** After rinsing, shake off excess water and allow the shaver head to air dry completely before reattaching it to the shaver body. Ensure all parts are dry before storage.
- 6. Reassemble:** Once dry, align the shaver head with the body and snap it back into place.

IPX5 Waterproof



Image: The shaver head is shown being rinsed under water, highlighting its IPX5 waterproof rating for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your TOUCHBeauty Electric Shaver, try the following solutions:

- **Shaver not turning on:** Check if the batteries are inserted correctly with the correct polarity. Replace old batteries with new AAA batteries.
- **Reduced performance or pulling hair:** The blades may be clogged with hair. Clean the shaver head thoroughly as described in the Maintenance section.
- **Irritation after shaving:** Ensure your skin is clean before shaving. If wet shaving, use a suitable shaving cream or gel. Always clean and dry the shaver after use. If irritation persists, discontinue use.
- **Shaver head not attaching securely:** Ensure the shaver head is aligned correctly with the body and pressed firmly until it clicks into place.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Product Dimensions	1 x 1 x 1 inches; 4.97 ounces
Item Model Number	TB-1459
Batteries	2 AAA batteries required (included)
Manufacturer	TOUCHBeauty
Recommended Uses	Arms, Armpit, Leg
Special Features	Waterproof, Cordless, Ergonomic Design, Hypoallergenic, Dry / Wet Shave
Power Source	Battery Powered

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the product packaging or visit the official TOUCHBeauty website. Contact details for customer service can typically be found on the manufacturer's website or within the product documentation.