

Crivit PASL 4000 B2

Crivit Parkside PASL 4000 B2 LED Work Light with Charging Station

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, setup, and maintenance of your Crivit Parkside PASL 4000 B2 LED Work Light with Charging Station. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not expose the device to rain or moisture. Use only in dry environments.
- Avoid looking directly into the LED light.
- Do not attempt to open or modify the device or battery.
- Keep out of reach of children.
- Ensure the charging station is connected to a suitable power outlet (100-240V ~ 50/60 Hz).
- The LEDs are not replaceable.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure all components are present and undamaged. If any parts are missing or damaged, contact customer support.

- Crivit Parkside PASL 4000 B2 LED Work Light

- Charging Station
- USB Cable (approx. 150 cm)
- Power Adapter
- Mounting Material
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

The Crivit Parkside PASL 4000 B2 is a versatile LED work light designed for various tasks, featuring multiple lighting modes and convenient mounting options. It includes a powerful lithium-ion battery and a dedicated charging station.



Figure 1: Crivit Parkside PASL 4000 B2 LED Work Light and its charging station.

Key Features:

- **Three Lighting Functions:** Side lamp, spotlight, and UV light.
- **Integrated USB Port:** For charging external devices.
- **4-Level Charge Indicator:** Displays current battery status.
- **Magnetic Base and Hook:** For flexible positioning.
- **Adjustable Stand:** Allows for precise light angle adjustment.
- **Wall-Mountable Charging Station:** Convenient storage and charging.

5. SETUP

5.1 Initial Charging

1. Connect the USB cable to the charging station and the power adapter.
2. Plug the power adapter into a suitable electrical outlet (100-240V ~ 50/60 Hz).
3. Place the LED work light into the charging station. Ensure proper contact.
4. The 4-level charge indicator on the lamp will illuminate to show charging progress. Allow the lamp to fully charge before first use.



Figure 2: Work light in charging station, showing charge indicators.

5.2 Mounting the Charging Station

The charging station can be wall-mounted using the provided mounting material. Choose a dry, stable location near a power outlet.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Light Mode Selection

Press the red power button on the front of the work light to cycle through the different lighting modes:

1. **First Press:** Activates the side lamp (main work light).
2. **Second Press:** Switches to the spotlight (top light).
3. **Third Press:** Activates the UV light (for detecting coolants, greases, or dirt).
4. **Fourth Press:** Turns the light off.



Figure 3: Close-up of the LED panel and power button.

6.2 Battery Level Indicator

The 4-level LED indicator on the lamp displays the remaining battery charge. Each illuminated LED represents approximately 25% of the battery capacity.

6.3 Using the Integrated USB Port (Power Bank Function)

The work light features an integrated USB port, allowing you to use its internal battery to charge small external devices such as smartphones. Connect your device's USB charging cable to the port on the work light.

6.4 Positioning the Work Light

The PASL 4000 B2 offers several options for hands-free use:

- **Magnetic Attachment:** The rear of the lamp has strong magnets for attaching to metallic surfaces.
- **Folding Hook:** An integrated folding hook allows you to hang the lamp.
- **Adjustable Stand:** The lamp includes a stand with a powerful magnet and adjustable angle for directing light precisely.



Figure 4: Work light magnetically attached under a car hood.



Figure 5: Rear view showing hook and magnets.

7. MAINTENANCE

7.1 Cleaning

Wipe the work light and charging station with a dry, soft cloth. Do not use abrasive cleaners or solvents. Ensure the device is dry before charging or use.

7.2 Battery Care

To prolong battery life, avoid completely discharging the battery. Recharge the lamp regularly, even if not in frequent use. Store the device in a cool, dry place when not in use for extended periods.

7.3 LED Replacement

The LEDs in this work light are not replaceable. If the LEDs fail, the entire unit must be replaced.

8. TROUBLESHOOTING

If you encounter issues with your Crivit Parkside PASL 4000 B2, refer to the following common problems and solutions:

- **Light does not turn on:**
 - Check if the battery is charged. Place the lamp in the charging station.
 - Ensure the power button is pressed correctly.
- **Lamp is not charging:**
 - Verify that the charging station is properly connected to a power source.
 - Ensure the lamp is correctly seated in the charging station, making good contact with the charging pins.
 - Check the USB cable and power adapter for any damage.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Crivit / Parkside
Model Number	PASL 4000 B2
Product Dimensions (Lamp)	Approx. 5.8 x 23 cm (W x H)
Product Dimensions (Charging Station)	Approx. 87.5 x 8.6 x 6.8 cm (W x D x H)
Weight (Lamp)	Approx. 270 g
Material	Plastic
Power Source	Battery powered
Battery Type	Lithium-ion (3.7 V / 4000 mAh)
Power Adapter Input Voltage	100-240 V ~ 50/60 Hz



Feature	Specification
Light Source Type	LED
Luminous Flux (Side Lamp)	Approx. 360 lumen
Luminous Flux (Spotlight)	Approx. 100 lumen
Operating Time (Side Lamp)	Approx. 3.5 hours (at full charge)
Operating Time (Spotlight)	Approx. 8 hours (at full charge)
Color Temperature	Approx. 6000 K
Features	Multifunction, UV light, Integrated USB port, Magnetic base, Folding hook, Adjustable stand

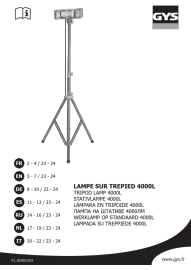



10. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contacts is not available in the provided product data. Please refer to the documentation included with your purchase or contact the retailer for details on warranty coverage and technical assistance.



Related Documents - PASL 4000 B2

	<p>PARKSIDE PASL 4000 B2 Rechargeable LED Light - User Manual and Safety Instructions</p> <p>User manual and safety instructions for the PARKSIDE PASL 4000 B2 rechargeable LED light. Covers operation, charging, maintenance, disposal, and warranty information.</p>
	<p>PARKSIDE PASL 4000 B3 Rechargeable Light User Manual and Safety Instructions</p> <p>Detailed user manual and safety instructions for the PARKSIDE PASL 4000 B3 rechargeable light. Includes operation, maintenance, disposal, and warranty information.</p>

	<p>GYS Tripod Lamp 4000L: Features, Safety, and Maintenance</p> <p>Comprehensive guide to the GYS Tripod Lamp 4000L, covering its features, technical specifications, safety precautions, and maintenance instructions. Learn how to safely operate and care for your work light.</p>
	<p>Sonora Isabella Rechargeable LED Table Lamp User Manual</p> <p>User manual for the Sonora Isabella rechargeable LED table lamp with wireless charging. Includes safety instructions, operation guide, charging, cleaning, storage, and disposal information.</p>
	<p>NEBO 4000 Lumen Rechargeable Tripod Light User Guide</p> <p>User guide and specifications for the NEBO 4000 Lumen Rechargeable Tripod Light, covering charging, setup, operation, and safety.</p>
	<p>Dakota Alert DCPAS-4000 Kit User Guide: Wireless Security System Setup and Operation</p> <p>Comprehensive user guide for the Dakota Alert DCPAS-4000 Kit, covering setup, operation, and troubleshooting of the wireless security equipment, including the DCR-4000 receiver and DCPT-4000 probe transmitter.</p>