

JVC XS-N1123PB

JVC XS-N1123PB Party Bluetooth Speaker User Manual

Model: XS-N1123PB

1. INTRODUCTION

Thank you for purchasing the JVC XS-N1123PB Party Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your speaker. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids to prevent electric shock or damage.
- Use only the specified charging voltage (5 Volts) and compatible charger.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- JVC XS-N1123PB Party Bluetooth Speaker
- USB Charging Cable
- User Manual

4. PRODUCT OVERVIEW

4.1 Front View



JVC

15
Watts
Power

XS-N1123PB

UNLEASH THE PARTY ANYWHERE

Take the beats on the go with our lightweight, yet robust 15W speaker.

The image shows a group of four people dancing in a field. In the foreground, a black JVC speaker is shown with a colorful, glowing frog-like pattern on its grille. Red arrows point to the top and sides of the speaker, highlighting its features. The JVC logo is visible on the speaker's grille.

The front of the speaker features the main speaker grille with integrated RGB lighting, displaying various color patterns.

4.2 Side View

JVC



1500 mAh
Dual Battery



LONG-LASTING DUAL BATTERY SYSTEM

Enjoy your music without the hassle of frequent charging.

The side view shows the compact and portable design of the speaker, suitable for easy transport.

4.3 Top Panel Controls and Ports



This image displays the top control panel, including buttons for power, mode selection, volume, track control, and recording. It also shows the USB, AUX IN, TF Card, and MIC IN ports.

4.4 Rear View

JVC

4" MIDI PARTY SPEAKER



XS-N1123PB

UNIVERSAL CONNECTIVITY

Bluetooth, AUX, USB, FM Radio - All the connections you need.



Bluetooth



USB



FM Radio



Aux In

The rear view of the speaker, highlighting its robust enclosure and design.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port.

- The charging indicator light will illuminate during charging.
- The light will turn off or change color when charging is complete.

JVC

USER-FRIENDLY INTERFACE

Effortlessly control your music with our simple and smart design.



TWS



Rec



EQ



Echo

The speaker features a 1500 mAh dual battery system for extended playback.

5.2 Powering On/Off

To power on the speaker, press and hold the Power button located on the top panel. To power off, press and hold the Power button again.

5.3 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices and select "JVC XS-N1123PB" from the list.
4. Once paired, the speaker will emit a confirmation sound, and the LED light will stop flashing.

5.4 True Wireless Stereo (TWS) Pairing

TWS allows you to connect two JVC XS-N1123PB speakers for a stereo sound experience.

JVC

TRUE WIRELESS STEREO TECHNOLOGY

Pair two speakers for a dynamic stereo sound experience.



Pair two speakers wirelessly for a dynamic stereo sound experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (if available, or a designated pairing button) until you hear a pairing tone.
3. The two speakers will automatically connect to each other. A confirmation tone will sound once TWS pairing is successful.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in section 5.3. Both speakers will play audio in stereo.

6. OPERATING INSTRUCTIONS

6.1 Mode Selection

Press the 'MODE' button on the top panel to switch between different input modes: Bluetooth, USB, TF Card, AUX, and FM Radio.

6.2 Audio Playback

- **Bluetooth Mode:** After successful pairing, play audio from your connected device.
- **USB/TF Card Mode:** Insert a USB drive or TF card into the respective port. The speaker will

automatically detect and play audio files.

- **AUX Mode:** Connect an external audio device using a 3.5mm audio cable to the AUX IN port.
- **FM Radio Mode:** In FM mode, press the Play/Pause button to auto-scan and save available radio stations. Use the Previous/Next buttons to navigate between saved stations.

6.3 Volume Control

Use the 'VOL-' and 'VOL+' buttons on the top panel to decrease or increase the volume.

6.4 Track Control

- Press the 'Previous Track' button to go to the beginning of the current track or the previous track.
- Press the 'Next Track' button to skip to the next track.
- Press the 'Play/Pause' button to play or pause audio.

6.5 Light Show Control

The speaker features built-in RGB lights. Specific controls for the light show (e.g., changing patterns, turning on/off) may be integrated with the 'MODE' button or a dedicated light button if available. Refer to the quick start guide for specific light control functions.

6.6 Microphone and Guitar Input (Karaoke Function)

JVC 4" MIDI PARTY SPEAKER

Mic Input

Guitar Input

XS-N1123PB

ELEVATE YOUR SINGING EXPERIENCE

Be the star of your party with our on-the-go karaoke system.

JVC

Connect a microphone or guitar to the respective input ports for karaoke or live performance. Adjust microphone volume using the MIC VOL+/- buttons.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery periodically to maintain its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power button not pressed correctly	Charge the speaker; Press and hold the Power button for a few seconds
No sound	Volume too low; Incorrect input mode; Device not connected	Increase volume; Select correct input mode; Reconnect Bluetooth device or AUX cable
Bluetooth pairing fails	Speaker not in pairing mode; Device too far; Interference	Ensure speaker is in pairing mode; Move device closer; Turn off other Bluetooth devices
TWS pairing fails	Speakers too far apart; One speaker already connected to a device	Ensure speakers are within range; Disconnect any Bluetooth devices from both speakers before TWS pairing
FM radio reception is poor	Weak signal; Interference	Relocate the speaker; Extend the antenna (if applicable)

9. SPECIFICATIONS

Feature	Specification
Model Number	XS-N1123PB (AP-W113Y)
Output Power	15W RMS (40 Watts Peak)
Speaker Size	4 Inches
Connectivity	Bluetooth, USB, TF Card, AUX-in, FM Radio
Audio Output Mode	Stereo
Input Voltage	5 Volts
Battery	1 Lithium Ion battery (included)

Feature	Specification
Material	Plastic
Dimensions (D x W x H)	15.7D x 13.3W x 21.8H cm
Special Features	Bass Boost, RGB Light Show, TWS Function, Microphone Input
Country of Origin	China

JVC 4" MIDI PARTY SPEAKER

PRODUCT DIMENSION



4" Speaker



Warranty

25 cm



18.5 cm

16.5 cm

SPEAKER

Product dimensions for the JVC XS-N1123PB speaker.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This JVC XS-N1123PB Party Bluetooth Speaker comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

10.2 Customer Support

For technical assistance, warranty claims, or further information, please contact JVC customer support through their official website or the retailer where the product was purchased. Please have your model number (XS-N1123PB) and proof of purchase ready when contacting support.