

JVC XS-N318B

JVC XS-N318B Portable Bluetooth Speaker User Manual

Model: XS-N318B | Brand: JVC

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your JVC XS-N318B Portable Bluetooth Speaker. Please read it thoroughly before use and retain it for future reference. Your speaker features Bluetooth and Wi-Fi connectivity, integrated Alexa voice control, 360-degree omnidirectional audio with Dolby technology, and a long-lasting battery for extended playtime. It is also designed with IPX4 splash resistance for outdoor use.

2. PRODUCT OVERVIEW

2.1 Package Contents

- JVC XS-N318B Portable Bluetooth Speaker
- Charging Cable
- Remote Control
- User Manual

2.2 Speaker Components and Controls

The JVC XS-N318B speaker features an intuitive control panel located on the top surface, along with indicator lights for connectivity status. A remote control is also included for convenient operation from a distance.

- **Power Button:** Press and hold to turn the speaker On or Off.
- **Volume + Button:** Increases the playback volume.
- **Volume - Button:** Decreases the playback volume.

- **Play/Pause Button:** Controls audio playback (play/pause).
- **Tap Button (Alexa):** Activates the Alexa voice assistant.
- **Bluetooth Indicator:** Illuminates when connected via Bluetooth.
- **Wi-Fi Indicator:** Illuminates when connected to a Wi-Fi network.
- **Aux Indicator:** Illuminates when an auxiliary device is connected.

JVC BLUETOOTH/WIFI SPEAKER + ALEXA

alex

XS-N318B

HANDS-FREE WITH ALEXA

Control your music and more using just your voice, powered by Alexa.

Figure 1: Front view of the JVC XS-N318B Portable Bluetooth Speaker, showcasing its sleek design.

JVC



2500 mAh
Rechargeable
Battery



UPTO
PLAYTIME

5
HOURS

ALL-DAY MUSIC

Keep the party going with long-lasting battery life.

Figure 2: Side view of the JVC XS-N318B Portable Bluetooth Speaker, highlighting its compact form factor.

JVC

20
Watts
Output

CRYSTAL-CLEAR AUDIO ANYWHERE

With 20W of audio power, our MUZO Player brings the concert to you.

Figure 3: Back view of the JVC XS-N318B Portable Bluetooth Speaker, showing the rear panel.

3. SETUP

3.1 Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and a compatible 5V USB power adapter (not included). The charging indicator will show the charging status and turn off when fully charged. A full charge provides up to 9 hours of playtime.

JVC

BLUETOOTH/WIFI SPEAKER + ALEXA

READY FOR SPLASHES

Enjoy your favourite tunes by the poolside, worry-free.

XS-N318B



Figure 4: The JVC XS-N318B speaker is equipped with a built-in 7.4V 6600mAh lithium battery, offering extended playtime.

3.2 Powering On/Off

To power on the speaker, press and hold the Power button until the indicator lights illuminate. To power off, press and hold the Power button again until the lights turn off.

3.3 Bluetooth Pairing

1. Ensure the speaker is powered on and the Bluetooth indicator is blinking, indicating it is in pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "JVC XS-N318B" from the list of devices.
4. Once paired, the Bluetooth indicator on the speaker will glow steadily.

3.4 Wi-Fi Connection

For Wi-Fi streaming and Alexa functionality, connect your speaker to a Wi-Fi network. Refer to the JVC Connect app (if applicable, or general Wi-Fi setup instructions) for detailed steps on connecting your speaker to your home network. The Wi-Fi indicator will illuminate steadily once connected.

3.5 Auxiliary Input

To connect an external audio device via the auxiliary input, use a 3.5mm audio cable (not included).

Plug one end into the speaker's Aux-In port and the other into your device's headphone jack. The Aux indicator will illuminate.



Figure 5: The JVC XS-N318B offers seamless connectivity options including Bluetooth, Wi-Fi, and Aux In.

4. OPERATING INSTRUCTIONS

4.1 Audio Playback

Once connected via Bluetooth, Wi-Fi, or Aux-In, begin playing audio from your source device. Use the Play/Pause button on the speaker or remote to control playback. The speaker delivers 20 Watts RMS output for clear audio.



Figure 6: Experience crystal-clear audio with 20 Watts of output power from your JVC XS-N318B speaker.

4.2 Volume and Track Control

Adjust the volume using the Volume + and Volume - buttons on the speaker's top panel or the dedicated buttons on the remote control. For track selection, use the remote control's track navigation buttons.

4.3 Using Alexa Voice Control

With Wi-Fi connected and Alexa configured (via the JVC Connect app or Amazon Alexa app), tap the Tap Button (Alexa icon) on the speaker to activate Alexa. You can then issue voice commands for music playback, information, smart home control, and more.



Figure 7: Control your music and more using just your voice with built-in Alexa support on the JVC XS-N318B speaker.

4.4 360-Degree Omnidirectional Audio and Dolby

The JVC XS-N318B is engineered with 360-degree omnidirectional audio and dual stereo speakers powered by Dolby technology, providing immersive sound that fills your space evenly.

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, use a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquids enter the speaker openings.

5.2 Battery Care

To prolong battery life, avoid fully discharging the speaker frequently. Recharge the battery regularly, even if the speaker is not in use for extended periods. Store the speaker in a cool, dry place.

5.3 Water Resistance (IPX4)

The JVC XS-N318B speaker has an IPX4 rating, meaning it is resistant to splashes of water from any

direction. It is suitable for outdoor use and can withstand light rain or splashes. Do not submerge the speaker in water or expose it to pressurized water jets.

JVC

BLUETOOTH/WIFI SPEAKER + ALEXA

PRODUCT DIMENSION



Warranty



SPEAKER

Figure 8: The JVC XS-N318B speaker is IPX4 waterproof, making it suitable for use in splash-prone environments.

6. TROUBLESHOOTING

- **No Power:** Ensure the speaker is charged. Connect the charging cable and allow it to charge for a few minutes before attempting to power on again.
- **No Sound:** Check the volume level on both the speaker and your connected device. Ensure the correct input source (Bluetooth, Wi-Fi, Aux) is selected and active.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode (blinking Bluetooth indicator). Turn off and on Bluetooth on your device, and try pairing again. Ensure no other devices are currently connected to the speaker.

- **Wi-Fi Connection Problems:** Verify your Wi-Fi network is active and within range. Re-attempt the Wi-Fi setup process via the JVC Connect app.
- **Alexa Not Responding:** Ensure the speaker is connected to Wi-Fi and your Alexa account is properly linked. Tap the Alexa button to activate it before speaking your command.
- **Remote Control Not Working:** Check the battery in the remote control. Ensure there are no obstructions between the remote and the speaker.

7. SPECIFICATIONS

Brand	JVC
Model Number	XS-N318B
Speaker Maximum Output Power	20 Watts RMS
Connectivity Technology	Bluetooth, Wi-Fi, Aux
Audio Output Mode	Stereo (Dual Stereo Speakers)
Input Voltage	5 Volts
Material	Plastic
Speaker Type	Outdoor
Color	Black
Maximum Range (Bluetooth)	10 Meters
Signal-to-Noise Ratio	70 dB
Power Source	Battery Powered
Battery Type	1 Lithium Ion (7.4V 6600mAh)
Approximate Playtime	Up to 9 hours
Water Resistance Rating	IPX4 (Splash Resistant)
Dimensions (W x H)	Approximately 12.7 cm x 17.2 cm
Country of Origin	China

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your JVC XS-N318B Portable Bluetooth Speaker comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of

purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty inquiries, or further information, please refer to the official JVC website or contact your local JVC customer support. Contact details can typically be found on the product packaging or the official brand website.