

## JVC XS-N4110PB

# JVC 30W 12-Inch Woofer Trolley Speaker XS-N4110PB User Manual

Model: XS-N4110PB

## 1. INTRODUCTION

Thank you for choosing the JVC 30W 12-Inch Woofer Trolley Speaker. This manual provides essential information for the safe and efficient operation of your new speaker. Please read it thoroughly before use and retain it for future reference. This speaker features a powerful 30W output, a 12-inch woofer for deep bass, True Wireless Stereo (TWS) functionality, Bluetooth connectivity, USB and SD card playback, and includes a wireless microphone for versatile audio experiences.

## 2. SAFETY INSTRUCTIONS

- Do not expose the speaker to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not open the speaker casing; refer all servicing to qualified personnel.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Avoid placing heavy objects on the speaker.
- Disconnect the power plug during lightning storms or when unused for long periods.

## 3. PACKAGE CONTENTS

Please check that all items listed below are present in your package:

- JVC 30W 12-Inch Woofer Trolley Speaker (XS-N4110PB)
- Wireless Microphone
- Remote Control
- Power Cable
- User Manual (this document)

## 4. COMPONENT IDENTIFICATION

Familiarize yourself with the various parts of your speaker:



An image showing the JVC 30W 12-Inch Woofer Trolley Speaker from the front-right angle, displaying its two large speaker grilles with illuminated rings. To the right of the speaker are a black wireless microphone and a black remote control.

#### 4.1 Front Panel

- **12-inch Woofer:** Delivers powerful bass.
- **Tweeter:** Provides clear high-frequency sound.
- **LED Lights:** Visual effects (if applicable).

#### 4.2 Top Control Panel

- **Power Button:** Turns the speaker on or off.
- **Mode Button:** Switches between Bluetooth, USB, SD, and AUX input modes.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Navigates through tracks.
- **Volume Control:** Adjusts the master volume.
- **USB Port:** For USB flash drive playback.
- **SD Card Slot:** For SD card playback.
- **AUX Input:** 3.5mm jack for external audio devices.
- **Microphone Input:** For wired microphones (if applicable).

#### 4.3 Rear Panel

- **AC Power Input:** Connects the power cable for charging and operation.
- **Trolley Handle:** Extendable handle for easy transport.
- **Wheels:** For convenient mobility.

#### 4.4 Wireless Microphone

- **Power Switch:** Turns the microphone on or off.
- **Battery Compartment:** For inserting batteries.

#### 4.5 Remote Control

- Provides remote access to speaker functions.

### 5. SETUP

---

#### 5.1 Unpacking

1. Carefully remove the speaker and all accessories from the packaging.
2. Retain the packaging for future transport or storage.

## 5.2 Initial Charging

1. Before first use, fully charge the speaker for approximately 6-8 hours.
2. Connect the power cable to the AC power input on the rear panel and plug it into a wall outlet.
3. The charging indicator light will illuminate (refer to Section 7 for details).

## 5.3 Positioning

Place the speaker on a stable, flat surface. For optimal sound, position it in an open area, away from walls or corners that might muffle the sound.

# 6. OPERATING INSTRUCTIONS

---

## 6.1 Power On/Off

Press and hold the **Power Button** on the top control panel for a few seconds to turn the speaker on or off.

## 6.2 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon or voice prompt.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "JVC XS-N4110PB" (or similar name) from the list.
4. Once paired, the speaker will confirm with an audible tone or a solid Bluetooth indicator.

## 6.3 TWS (True Wireless Stereo) Function

To connect two JVC XS-N4110PB speakers for a stereo experience:

1. Ensure both speakers are powered on and in Bluetooth mode, but not yet paired to any device.
2. On one of the speakers (this will be the primary speaker), press and hold the **TWS button** (if available, or a specific button indicated in the speaker's quick start guide, otherwise try the Mode button briefly).
3. The speakers will attempt to connect to each other. A successful connection will be indicated by an audible tone.
4. Once connected, pair your mobile device to the primary speaker via Bluetooth as described in Section 6.2. Audio will now play in stereo through both speakers.

## 6.4 USB/SD Card Playback

1. Insert a USB flash drive or SD card into the respective port/slot.
2. The speaker will automatically switch to USB/SD mode and begin playing audio files. If not, press the **Mode Button** to select the correct input.
3. Use the **Play/Pause** and **Previous/Next Track Buttons** to control playback.

## 6.5 Wireless Microphone Usage

1. Insert batteries into the wireless microphone.
2. Turn on the microphone using its power switch.
3. The microphone should automatically connect to the speaker. Speak into the microphone to test.
4. Adjust the microphone volume using the dedicated control on the speaker (if available) or the master volume.

## 6.6 AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the **AUX Input** using a 3.5mm audio cable (not included).
2. Press the **Mode Button** to select AUX input.
3. Control playback and volume from your connected device.

## 7. CHARGING

---

The speaker is powered by a built-in rechargeable battery. When the battery is low, the speaker may indicate this with a voice prompt or a flashing indicator light.

- Connect the power cable to the AC power input and a wall outlet.
- The charging indicator light will be red while charging and turn off or change color (e.g., blue/green) when fully charged.
- Charging time is approximately 6-8 hours for a full charge.
- The speaker can be used while charging.

## 8. MAINTENANCE

---

### 8.1 Cleaning

- Wipe the speaker with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting moisture into any openings.

### 8.2 Storage

- Store the speaker in a cool, dry place when not in use for extended periods.
- For optimal battery life, charge the speaker to about 50% before storing and recharge every 3-6 months.

## 9. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power cable not connected; Power button not pressed correctly.	Charge the speaker; Ensure power cable is securely connected; Press and hold the Power button.
No sound	Volume too low; Incorrect mode selected; Device not connected properly.	Increase volume; Press Mode button to select correct input (Bluetooth, USB, SD, AUX); Reconnect device.
Bluetooth not connecting	Speaker not in pairing mode; Device Bluetooth off; Speaker already connected to another device.	Ensure speaker is in pairing mode; Turn on device Bluetooth; Disconnect from other devices and try again.
Wireless microphone not working	Microphone off; Low microphone battery.	Turn on microphone; Replace microphone batteries.
TWS pairing fails	Speakers too far apart; One speaker already paired to a device.	Ensure speakers are within close proximity; Disconnect both speakers from any Bluetooth devices before TWS pairing.

## 10. SPECIFICATIONS

---

- **Model:** XS-N4110PB
- **Output Power:** 30W
- **Woofer Size:** 12-inch
- **Connectivity:** Bluetooth, USB, SD Card, AUX Input
- **Special Features:** TWS (True Wireless Stereo), Wireless Microphone
- **Power Source:** Battery Powered (Rechargeable)

- **Dimensions (D x W x H):** 34.3 x 32.5 x 65 cm
- **Weight:** Approximately 12 kg
- **Color:** Black

## 11. WARRANTY AND SUPPORT

---

### 11.1 Warranty Information

This JVC speaker comes with a **1 Year Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

### 11.2 Customer Support

For technical assistance, warranty claims, or product inquiries, please contact JVC customer support through their official website or the retailer where the product was purchased. Please have your model number (XS-N4110PB) and proof of purchase ready when contacting support.