

RadioShack 100124369

RadioShack Wireless Bluetooth Speaker Y370 (Model 100124369) User Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the RadioShack Wireless Bluetooth Speaker Y370. This compact and elegant speaker is designed to deliver clear, immersive sound with the convenience of Bluetooth 5.0 connectivity. Featuring dynamic RGB LED lights and a powerful 3600mAh battery, it's your ideal companion for music at home, parties, or outdoors. This manual will guide you through the features, setup, and operation to ensure you get the best experience from your device.



Image: Front view of the RadioShack Wireless Bluetooth Speaker Y370, showcasing its sleek black design with yellow volume controls.

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- RadioShack Wireless Bluetooth Speaker Y370
- USB Charging Cable
- Auxiliary Audio Cable
- User Manual (this document)



Image: The RadioShack Wireless Bluetooth Speaker Y370 shown with its included USB charging cable and auxiliary audio cable.

3. PRODUCT FEATURES

- **Superior and Compact Sound:** Designed with dimensions of 10.1 x 10.1 x 22 cm, this portable speaker delivers high-quality music anywhere.
- **Bluetooth 5.0 Connectivity:** Enjoy fast and stable wireless pairing with your devices, ensuring uninterrupted audio and optimal range.
- **Powerful and Durable Battery:** Equipped with a 3600mAh battery, providing up to 6 hours of continuous playback.

Fully charges in approximately 5 hours.

- **Dynamic RGB LED Lights:** Enhance your music experience with integrated LED lights that create a unique atmosphere.
- **Versatile Connectivity:** Includes USB and auxiliary ports for various connection modes.



Image: Side view of the speaker demonstrating its active RGB LED lighting around the speaker grille.

4. CONTROLS AND PORTS

Familiarize yourself with the speaker's controls and connection ports:

4.1 Top Panel Controls



Image: Detailed view of the speaker's top control panel, showing buttons for light mode, power, and playback.

1. **Light Mode Button (Sun/X icon):** Press to cycle through LED light modes or turn them off.
2. **Power Button (Power icon):** Press and hold to power on/off. Short press to play/pause in Bluetooth mode.
3. **Mode Button (M icon):** Press to switch between Bluetooth, AUX, USB, and TF card modes.
4. **Volume Up / Next Track (+ icon):** Short press for next track, long press to increase volume.
5. **Volume Down / Previous Track (- icon):** Short press for previous track, long press to decrease volume.

4.2 Rear Connection Ports

® RadioShack

BOCINA **INALÁMBRICA**



Conexión BT



Luz LED RGB



6 horas de reproducción

Image: Detailed view of the speaker's rear panel, showing the AUX, USB, TF card, and Type-C charging ports.

- 1. AUX Port:** For connecting external audio devices via the auxiliary cable.
- 2. USB Port:** For playing audio from a USB flash drive.
- 3. TF Card Slot:** For playing audio from a TF (MicroSD) card.

4. Type-C Charging Port: For charging the speaker using the provided USB cable.

5. SETUP

5.1 Initial Charge

Before first use, fully charge the speaker. Connect the provided USB charging cable to the Type-C port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate. A full charge takes approximately 5 hours.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button (Power icon) for 2-3 seconds until you hear an audible prompt and the LED lights activate.
- **To Power Off:** Press and hold the Power button (Power icon) for 2-3 seconds until you hear an audible prompt and the LED lights turn off.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED or audible prompt). If not, press the Mode button (M icon) to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "**RadioShack Y370**" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the blue LED will stop flashing and remain solid.
5. You can now play audio from your device through the speaker.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

6.2 Audio Playback

- **Bluetooth Mode:** After successful pairing, control playback (play/pause, next/previous track, volume) directly from your connected device or using the speaker's controls.
- **AUX Mode:** Connect an external audio device (e.g., MP3 player, computer) to the AUX port using the provided auxiliary cable. Press the Mode button (M icon) to switch to AUX mode. Audio will play directly from the connected device.
- **USB/TF Card Mode:** Insert a USB flash drive or TF (MicroSD) card into the respective port. The speaker will automatically switch to the corresponding mode and begin playing audio files. Press the Mode button (M icon) if it doesn't switch automatically.

6.3 Volume Control

- **Increase Volume:** Long press the Volume Up button (+ icon).
- **Decrease Volume:** Long press the Volume Down button (- icon).

6.4 LED Light Control

Press the Light Mode button (Sun/X icon) to cycle through different RGB LED light modes or to turn the lights off.

7. SPECIFICATIONS

Feature	Specification
Model Number	100124369
Brand	RadioShack
Connectivity Technology	Bluetooth 5.0, USB, AUX
Battery Capacity	3600mAh
Playback Time	Up to 6 hours
Charging Time	Approximately 5 hours
Special Features	RGB LED Lights
Dimensions (L x W x H)	10.1 x 10.1 x 22 cm (4 x 4 x 8.7 inches)
Power Source	Battery
Included Components	USB Charging Cable, Auxiliary Cable

8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

9. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the speaker is in Bluetooth pairing mode (flashing blue LED).◦ Make sure Bluetooth is enabled on your device.◦ Move the speaker closer to your device.◦ Forget "RadioShack Y370" from your device's Bluetooth list and try pairing again.
No sound.	<ul style="list-style-type: none">◦ Check the volume level on both the speaker and your connected device.◦ Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected.◦ If using AUX, ensure the cable is fully inserted and functional.

Problem	Solution
LED lights are not working.	Press the Light Mode button (Sun/X icon) to cycle through modes or turn them on.

10. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the speaker yourself. This will void the warranty.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep out of reach of children.

11. WARRANTY AND SUPPORT



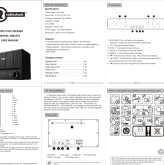
RadioShack products are designed to provide reliable performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official RadioShack website. Please retain your proof of purchase for warranty claims.


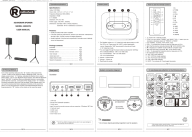

For further assistance, you may contact RadioShack customer service through their official channels.



© 2023 RadioShack. All rights reserved. Model: 100124369.

Related Documents - 100124369

	RadioShack 4001942 & 4001944 Dual PA Speaker User Manual User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.
	RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.
	Radioshack 4001974 Retro Style Speaker User Manual Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.

 <p>RadioShack 2607147 Wireless Keyboard</p>	<p>RadioShack 2607147 Wireless Keyboard User Manual</p> <p>User manual for the RadioShack 2607147 Wireless Keyboard, detailing specifications, features, and FCC compliance information.</p>
 <p>RadioShack 4001976 Soundbar Speaker</p>	<p>RadioShack 4001976 Soundbar Speaker User Manual</p> <p>User manual for the RadioShack 4001976 Soundbar Speaker, providing operating instructions, specifications, and connection diagrams.</p>
 <p>RadioShack Cell Phone Stand with Wireless Charger</p>	<p>Radioshack Cell Phone Stand with Wireless Charger User Manual</p> <p>User manual for the Radioshack Cell Phone Stand with Wireless Charger, model 2733350. Includes instructions for use, indicator descriptions, precautions, product parameters, and FCC statement in English and Spanish.</p>