

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Melisa Dressing Table 120cm with LED Lighting and Stool - User Manual

Vicco 15901

Vicco Melisa Dressing Table with LED Lighting and Stool

Model: 15901

Brand: Vicco

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Vicco Melisa Dressing Table. Please read these instructions carefully before beginning assembly or use to ensure safe and correct operation.

SAFETY INFORMATION

- Keep all small parts and packaging materials away from children.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload drawers or place excessively heavy items on the table surface.
- Use the product on a flat, stable surface to prevent tipping.
- For LED lighting, ensure the power source is appropriate and avoid exposing electrical components to moisture.
- Assembly requires two people for safety and ease.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dressing Table components (engineered wood panels)
- LED Mirror unit
- Stool components (seat, base, hydraulic lift)
- Mounting hardware (screws, dowels, brackets, etc.)
- Detailed Assembly Instructions (separate document)



Image: Overview of the Vicco Melisa Dressing Table, including the main table unit, mirror, and adjustable stool.

SETUP (ASSEMBLY)

Assembly of the Vicco Melisa Dressing Table requires careful attention to detail. Please follow the separate, detailed assembly instructions provided in your package. It is recommended to have two people for assembly.

1. **Preparation:** Clear a spacious area for assembly. Lay out all components and hardware.
2. **Table Assembly:** Assemble the main dressing table unit according to the step-by-step guide. Ensure all connections are secure.
3. **Mirror Installation:** Attach the LED mirror unit to the dressing table. Pay close attention to electrical connections for the LED lighting.
4. **Stool Assembly:** Assemble the stool, ensuring the hydraulic lift mechanism is correctly installed for height adjustment.
5. **Final Checks:** Verify that all parts are correctly assembled and tightened. Test the stability of the table and stool.



Image: Detailed dimensions of the dressing table and stool, useful for planning placement and assembly.

OPERATING INSTRUCTIONS

LED Lighting

The mirror features integrated LED lighting. Connect the power cable from the mirror to a suitable power outlet. The lighting is typically controlled by a touch sensor on the mirror surface or an inline switch on the cable. Refer to the specific assembly instructions for detailed operation of the LED light.



Image: The Vicco Melisa Dressing Table with its LED mirror illuminated, showcasing the integrated lighting feature.

Drawers

The dressing table includes two drawers for storage. To open, gently pull the drawer front. To close, push until it is flush with the table surface. Avoid forcing drawers if they feel stiff; check for obstructions.



Image: A drawer of the dressing table shown open, revealing internal storage space, possibly with an organizer.

Stool Height Adjustment

The included stool features a hydraulic lift for height adjustment. To raise the seat, lift the lever while standing. To lower the seat, sit on the stool and lift the lever. Release the lever to lock the height.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Mirror Care:** Clean the mirror with a glass cleaner and a lint-free cloth. Do not spray cleaner directly onto the mirror, especially near electrical components.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.
- **LEDs:** LED lights are generally long-lasting and do not require regular maintenance. If a light fails, consult the manufacturer for replacement options.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on.	Power cable disconnected, power outlet not working, touch sensor malfunction.	Check power cable connection. Test outlet with another device. Ensure touch sensor area is clean and dry.
Drawers are stiff or do not close properly.	Obstruction in the drawer slide, misaligned runners, loose screws.	Remove items from the drawer and check for obstructions. Verify drawer runners are correctly aligned and screws are tight.
Stool does not adjust height.	Hydraulic lift mechanism jammed or faulty.	Ensure the lever is fully engaged. If the issue persists, contact customer support.
Table feels wobbly.	Loose assembly screws, uneven floor.	Re-tighten all assembly screws. Place shims under the base if the floor is uneven.

SPECIFICATIONS

Feature	Detail
Brand	Vicco
Model Number	15901
Color	Oak White
Material (Table)	Engineered Wood (16 mm particle board)
Furniture Finish	Melamine resin coating
Mirror Material	3 mm thick glass
Table Dimensions (W x H x D)	120 x 161.1 x 40 cm
Number of Drawers	2
Stool Dimensions (W x H)	38.5 x 52-67 cm (adjustable height)
Stool Seat Material	Faux leather
Total Product Weight	36.8 kg
Assembly Required	Yes
LED Energy Label	View Energy Label (EPREL Database)

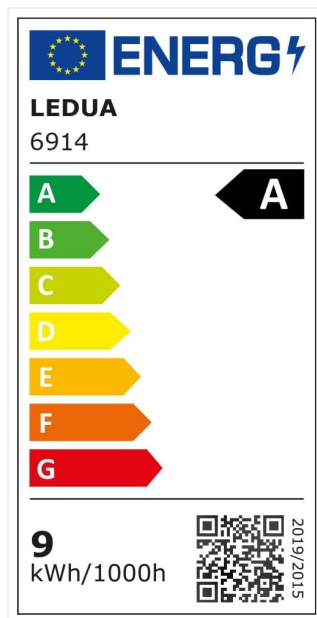


Image: EU Energy Label for the integrated LED lighting, indicating energy efficiency class A.

WARRANTY AND SUPPORT

Information regarding specific warranty terms is typically provided with your purchase documentation. Please refer to the packaging or contact your retailer for details.

For technical support, missing parts, or any inquiries regarding your Vicco Melisa Dressing Table, please contact the manufacturer or your point of purchase. Spare parts availability information is currently unavailable.

Manufacturer: Oskar

© 2023 Vicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLHHRR7>

More documents and user manuals: <https://manuals.plus/>