

[Manuals.plus](#) /

> [RadioShack](#) /

> RadioShack Y665 Wireless Bluetooth Speaker (Model 100124414) User Manual

## RadioShack 100124414

# RadioShack Y665 Wireless Bluetooth Speaker User Manual

Model: 100124414

## INTRODUCTION

This manual provides instructions for the safe and efficient use of your RadioShack Y665 Wireless Bluetooth Speaker. Please read this manual thoroughly before using the product and retain it for future reference. This compact and portable speaker features Bluetooth 5.0 connectivity, a 5W audio output, and an 800mAh rechargeable battery, offering 5 to 6 hours of continuous playback.

## PRODUCT OVERVIEW

### Package Contents

- RadioShack Y665 Wireless Bluetooth Speaker
- USB Charging Cable
- 3.5mm Auxiliary Cable

### Component Identification



This image displays the top panel of the speaker, highlighting the control buttons. From left to right, these include the Power button, Play/Pause button, Volume Down button, Volume Up button, and Mode (M) button.



This image shows the speaker alongside its USB charging cable. The charging port is typically located on the side or back of the speaker.

- **Power Button:** Press and hold to turn the speaker ON or OFF.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Down (-):** Press to decrease volume.
- **Volume Up (+):** Press to increase volume.
- **Mode (M) Button:** Press to switch between Bluetooth and Auxiliary input modes.
- **Charging Port:** Micro USB port for charging the speaker.
- **Auxiliary Input:** 3.5mm jack for wired audio connection.

## SETUP

### Charging the Speaker

Before first use, fully charge the speaker to ensure optimal battery performance.

1. Connect the small end of the included USB charging cable to the charging port on the speaker.
2. Connect the large end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) during charging and turn off or change color when fully charged.
4. Charging typically takes 2 to 3 hours.

### Powering On/Off

To turn the speaker ON, press and hold the **Power Button** until you hear an audible prompt or see an indicator light.

To turn the speaker OFF, press and hold the **Power Button** again until you hear an audible prompt or the indicator light turns off.

## OPERATING INSTRUCTIONS

---

### Bluetooth Pairing

1. Ensure the speaker is charged and powered ON. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "RadioShack Y665" (or similar name) from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will stop flashing and remain solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

### Auxiliary (AUX) Mode

1. Connect one end of the 3.5mm auxiliary cable to the AUX input port on the speaker.
2. Connect the other end of the auxiliary cable to the headphone jack of your audio source device.
3. Press the **Mode (M) Button** on the speaker to switch to AUX mode.
4. Play audio from your connected device. Volume can be controlled via both the speaker and the source device.

### Music Playback

- **Play/Pause:** Press the **Play/Pause Button** to start or pause music.
- **Volume Adjustment:** Press the **Volume Up (+)** or **Volume Down (-)** buttons to adjust the speaker's volume.

## MAINTENANCE

---

### Cleaning

- Disconnect the speaker from all power sources before cleaning.
- Use a soft, dry cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting moisture into any openings.

### Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its lifespan.

## TROUBLESHOOTING

---

### Common Issues and Solutions

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable.

Problem	Solution
No sound.	Check the volume level on both the speaker and your connected device. Ensure the speaker is in the correct mode (Bluetooth or AUX).
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing LED). Turn off Bluetooth on your device and turn it back on. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
Poor sound quality.	Ensure the speaker and connected device are within Bluetooth range (10m). Check for interference from other wireless devices. Try a different audio source or cable (for AUX mode).

## SPECIFICATIONS

### Technical Specifications

Feature	Specification
Model	100124414 (Y665)
Power Output	5W
Bluetooth Version	5.0
Wireless Range	Up to 10 meters (33 feet)
Battery Capacity	800mAh
Playback Time	5 to 6 hours
Charging Time	2 to 3 hours
Input Power	5V DC, 1A
Frequency Band	2400 MHz - 2483.5 MHz
Color	Black
UPC/GTIN	793945379804
Included Accessories	USB Charging Cable, 3.5mm Auxiliary Cable

### WARRANTY INFORMATION

This product is covered by a warranty of 1 month from the date of purchase. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to your retailer or the official RadioShack website.

### CUSTOMER SUPPORT

For technical assistance or further information, please visit the official RadioShack website:

[www.radioshack.com.mx](http://www.radioshack.com.mx)

You may also contact customer service at: 55 2582 0999.