

[Manuals.plus](#) /

› [Speed Queen](#) /

› Speed Queen SF7007WE Stacked Washer/Dryer Laundry Center User Manual

Speed Queen SF7007WE

Speed Queen SF7007WE Stacked Washer/Dryer Laundry Center User Manual

Model: SF7007WE

Brand: Speed Queen

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Speed Queen SF7007WE Stacked Washer/Dryer Laundry Center. Please read this manual thoroughly before using the appliance and keep it for future reference. This appliance combines a high-performance washer and dryer into a single, space-saving unit, designed for durability and efficiency.





Figure 1.1: Speed Queen SF7007WE Stacked Washer/Dryer Laundry Center (White)

2. SAFETY INFORMATION

Your safety and the safety of others are very important. This manual contains important safety messages. Always read and obey all safety messages.

- **Electrical Safety:** This appliance requires a 240V electrical supply. Ensure proper grounding and do not use extension cords. Disconnect power before servicing.
- **Fire Hazard:** Do not dry items that have been soiled with cooking oils, flammable chemicals, or other combustible substances. Clean the lint filter before or after each load.
- **Child Safety:** Keep children away from the appliance during operation. Do not allow children to play on or in the appliance.
- **Ventilation:** Ensure adequate ventilation for the dryer exhaust. Blocked vents can cause fire or carbon monoxide

poisoning.

- **Proposition 65 Warning:** This product can expose you to chemicals including [specific chemicals if known, otherwise general statement], which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your laundry center. It is highly recommended that installation be performed by a qualified professional.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any shipping damage. Report any damage immediately to your dealer.

3.2 Location Requirements

Choose a location with a solid, level floor capable of supporting the appliance's weight (approximately 417 pounds). Ensure there is adequate space for the unit's dimensions (27.75"D x 26.87"W x 78.12"H) and for opening the doors. The location must have access to a 240V electrical outlet, cold water supply, and a dryer exhaust vent.

3.3 Electrical Connection

This is an electric laundry center. Connect the appliance to a dedicated 240V, 30-amp fused electrical circuit. Consult a qualified electrician if you are unsure about your home's electrical system.

3.4 Water and Drain Connections (Washer)

Connect the cold water supply hose to the washer's inlet valve. Ensure all connections are tight to prevent leaks. Position the drain hose securely into a standpipe or laundry tub.

3.5 Dryer Venting

Connect the dryer exhaust duct to an external vent. Use rigid metal ducting for best performance and safety. Avoid flexible plastic or foil ducts.



Figure 3.1: Side view of the Laundry Center

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available cycles for both the washer and dryer sections of your laundry center.

4.1 Washer Operation

- **Loading:** Load laundry into the 3.5 cu. ft. stainless steel washer drum. Do not overload.
- **Detergent Dispenser:** Use the 4-compartment solution dispenser for detergent, bleach, and fabric softener.
- **Cycle Selection:** Choose from 11 preset washer cycles, including Delicates, Quick Wash, Heavy Duty, and Normal. The washer also features an Oxi Cycle for enhanced cleaning.
- **Dynamic Balancing:** The washer is equipped with Dynamic Balancing technology to ensure smooth and quiet operation, even with unbalanced loads.
- **Spin Speed:** The washer can reach a maximum rotational speed of 1200 RPM for efficient water extraction.
- **Control Lock:** Activate the control lock feature to prevent unintended changes to settings during a cycle.

4.2 Dryer Operation

- **Loading:** Load laundry into the 7.0 cu. ft. dryer drum.
- **Cycle Selection:** Select from 10 preset dryer cycles, including options for various fabric types. There are 8 drying cycles available.
- **Moisture Sensor:** The integrated moisture sensor automatically detects when clothes are dry, preventing over-drying and saving energy.
- **End-of-Cycle Signal:** An audible signal will sound when the drying cycle is complete.
- **Time Remaining Display:** Monitor the progress of your cycle with the time remaining display.
- **Special Feature:** This dryer includes a Hygiene Steam feature for sanitizing and refreshing items.



Figure 4.1: Control Panel and Front View (Black Model)

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Speed Queen laundry center.

5.1 Cleaning the Lint Filter

Clean the dryer's lint filter before or after every load. A clogged lint filter reduces drying efficiency and poses a fire hazard.

5.2 Cleaning the Washer Dispenser

Periodically clean the 4-compartment solution dispenser to prevent residue buildup. Remove the dispenser drawer and rinse it under warm water.

5.3 Cleaning the Exterior

Wipe down the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners that could damage the glossy finish.

5.4 Drum Care

The washer features a durable stainless steel drum. To keep it clean, occasionally run an empty cycle with a washer cleaner or a cup of white vinegar.

6. TROUBLESHOOTING

Before calling for service, refer to the following common issues and their solutions.

- **Appliance Does Not Start:** Ensure the power cord is securely plugged in and the circuit breaker has not tripped. Check if the control lock is activated.
- **Washer Not Filling/Draining:** Check that the water supply is turned on and hoses are not kinked. Ensure the drain hose is not clogged.
- **Dryer Not Heating:** Verify the lint filter is clean and the dryer vent is not obstructed. Ensure the correct cycle is selected.
- **Excessive Noise:** Ensure the appliance is level. For the washer, check for unbalanced loads.
- **Clothes Not Drying Properly:** Clean the lint filter. Check the dryer vent for obstructions. Do not overload the dryer.

If the problem persists after attempting these solutions, contact Speed Queen customer support or a qualified service technician.

7. SPECIFICATIONS

Feature	Specification
Model Number	SF7007WE
Brand	Speed Queen
Product Dimensions (DxWxH)	27.75"D x 26.87"W x 78.12"H
Item Weight	417 Pounds
Color	White
Fuel Type	Electric
Voltage	240V

Washer Capacity	3.5 Cubic Feet
Dryer Capacity	7.0 Cubic Feet
Washer Cycles	11 Preset (e.g., Delicates, Quick Wash, Heavy Duty, Normal)
Dryer Cycles	10 Preset (8 Drying Cycles)
Maximum Washer RPM	1200 RPM
Drum Material	Stainless Steel
Controller Type	Fully Automatic (Knob or Push Button)
Special Features	Dynamic Balancing, Oxi Cycle, Moisture Sensor, Hygiene Steam, Control Lock
Noise Level	50 dB
Energy Efficiency	Energy Star Certified
UPC	810084500675

8. WARRANTY AND SUPPORT

Speed Queen stands behind the quality of its products. For detailed warranty information, including coverage periods and terms, please refer to the warranty card included with your appliance or visit the official Speed Queen website.

For technical assistance, troubleshooting beyond this manual, or to schedule service, please contact Speed Queen customer support. Have your model number (SF7007WE) and serial number ready when you call.

Speed Queen Customer Support: Please refer to the contact information provided in your purchase documentation or on the official Speed Queen website.

© 2023 Speed Queen. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question