

[Manuals.plus](#) /

› [Omethey](#) /

› Omethey Biometric Fingerprint Rifle Safe User Manual

Omethey G2S-138-B

Omethey Biometric Fingerprint Rifle Safe User Manual

MODEL: G2S-138-B

Brand: Omethey

1. Introduction

This user manual provides essential information for the safe and effective operation of your Omethey Biometric Fingerprint Rifle Safe. Please read this manual thoroughly before installation and use to ensure proper functionality and security.

The Omethey Biometric Fingerprint Rifle Safe is designed for secure storage of firearms and valuables, featuring multiple access options including biometric fingerprint, digital keypad, and emergency keys. It incorporates robust steel construction and an advanced alarm system for enhanced protection.

2. Safety Information

- Always store firearms unloaded and locked away from ammunition.
- Keep the safe locked and keys/codes/fingerprints secure and out of reach of children and unauthorized individuals.
- Do not store the safe in areas prone to extreme temperatures or humidity.
- Ensure the safe is properly mounted to prevent tipping or unauthorized removal.
- Never leave the safe door open and unattended.

3. Package Contents

Verify that all components are present in your package:

- Instruction Manual x1
- Emergency Key x2
- Handle Spokes x3
- Emergency Battery Box x1
- Expansion Screws x5



RIFLE GUN SAFE

PRODUCT DIMENSIONS:
11.81 IN X 11.02 IN X 54.33 IN

NET WEIGHT:
63.71 LBS.

PACKAGE SIZE:
15.35 IN X 14.17 IN X 57.48 IN

GROSS WEIGHT:
76.81 LBS.



Instruction Manual*1



Emergency key*2



Handle Spokes*3



Emergency battery box*1



Expansion screws*5

Image: All components included in the safe package.

Your browser does not support the video tag.

Video: Overview of the safe and its components, including handle installation and initial opening. (Source: Seller)

4. Setup

4.1. Install Handle Spokes

Locate the three handle spokes in the package. Insert each spoke into the designated slots on the safe's handle knob and tighten securely. Refer to the video in Section 3 for a visual guide (0:11-0:19).

4.2. First Opening / Emergency Opening

For the first time opening the safe, or in case of forgotten password/dead battery, use the emergency key. Lift the cover on the keypad panel to reveal the emergency keyhole. Insert the emergency key and turn it while simultaneously turning the handle to open the safe. Refer to the video in Section 3 for a visual guide (0:20-0:27).

4.3. Battery Installation

Once the safe is open, locate the battery compartment inside the door. Insert 4 'AA' batteries, ensuring correct polarity. Close the battery compartment cover. Refer to the video in Section 3 for a visual guide (0:28-0:33).

4.4. Mounting the Safe

The safe features 5 pre-drilled holes on the back and bottom for secure mounting. Use the included expansion screws to fix the safe to a wall, floor, or both. This prevents unauthorized removal and tipping. Choose a discreet and secure location for mounting.



54.33"

11.02"

11.81"

RIFLE GUN SAFE

PRODUCT DIMENSIONS:
11.81 IN X 11.02 IN X 54.33 IN

NET WEIGHT:
63.71 LBS.

PACKAGE SIZE:
15.35 IN X 14.17 IN X 57.48 IN

GROSS WEIGHT:
76.81 LBS.



 
Instruction Manual*1



Emergency key*2



Handle Spokes*3

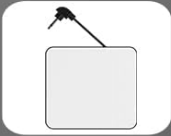

Emergency battery box*1



Expansion screws*5

Image: Safe dimensions and locations of pre-drilled mounting holes.

5. Operating Instructions

5.1. Unlocking Methods

Your Omethey safe offers four convenient unlocking methods:

1. **Fingerprint + Turn Handle:** For fast access.
2. **Password + Turn Handle:** For fast access.
3. **Emergency Key + Turn Handle:** Used for first-time opening, forgotten password, or dead battery.
4. **Emergency Battery Box + Password/Fingerprint + Turn Handle:** Used when the internal batteries are dead. Connect the emergency battery box to the port on the keypad, then use your fingerprint or password.



Image: Visual representation of the four unlocking methods.

5.2. Setting Fingerprint

To set a fingerprint, press the setting button located inside the safe door for one second. Then, place your finger on the fingerprint scanner and lift it four times until the system confirms successful registration. The safe can store up to 20 fingerprints.

Your browser does not support the video tag.

Video: Detailed instructions on how to set up a fingerprint for the safe. (Source: Seller)

5.3. Setting User Code

To set a user code, press #00, then press the setting button inside the safe door for one second. Enter your desired new code twice, confirming each entry with the '#' key. Your new user code is now set.

5.4. Silent Mode

The safe features a silent mode to avoid disturbing others. To activate silent mode, press '*' then '1' on the keypad. To deactivate, press '*' then '1' again.

Your browser does not support the video tag.

Video: Demonstrates the silent mode and dual alarm system features of the safe. (Source: Seller)

5.5. Dual Alarm System

The safe is equipped with a dual alarm system for enhanced security:

- **Vibration Alarm:** Triggered by shaking or moving the safe. To activate, press '*' then '9'.
- **Incorrect Input Alarm:** Activated after 5 consecutive wrong fingerprint attempts or 3 wrong password attempts.

When an alarm is activated, the buzzer will sound for 1 minute. To stop the alarm, enter the correct code or fingerprint.

INTELLIGENT ALARM SYSTEM

After 5 consecutive times wrong fingerprint or 3 consecutive times wrong code , the cabinet will activate the alarm system .



Dual Alarm

For stealthier home defense , just activate silent mode



Silent Mode



Image: Details on the intelligent alarm system, including silent mode and dual alarm.

6. Maintenance

- **Cleaning:** Wipe the safe exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery alert is indicated on the keypad. Use 4 new 'AA' alkaline batteries.
- **Key Storage:** Store emergency keys in a secure location away from the safe.
- **Interior Care:** The soft velvet interior protects your guns from scratches. Periodically inspect for any wear or damage.


7. Troubleshooting

- **Safe not opening with fingerprint/password:** Ensure batteries are not depleted. Try using the emergency battery box or emergency key. Re-register fingerprints if issues persist.

- **Alarm sounds unexpectedly:** Check if the vibration alarm is active. Ensure the safe is stable and not being disturbed. Enter the correct code to disarm.
- **Keypad unresponsive:** Replace batteries. If using the emergency battery box, ensure it is properly connected and has fresh batteries.
- **Difficulty setting code/fingerprint:** Follow the instructions precisely. Ensure the setting button is pressed for the correct duration.

8. Specifications

Feature	Specification
Brand	Omethey
Model Number	G2S-138-B
Product Dimensions	11.02"D x 11.81"W x 54.33"H
Lock Type	Biometric, Electronic Combination Lock, Key
Color	Black
Capacity	4 Cubic Feet
Material	Low Carbon Steel
Special Features	Alarm System, Biometric Fingerprint, Anti-Theft, Removable Shelf
Mounting Type	Floor Mount
Control Type	Touchpad Control
Alarm Type	Vibration, Audible
Water Resistance Level	Not Water Resistant

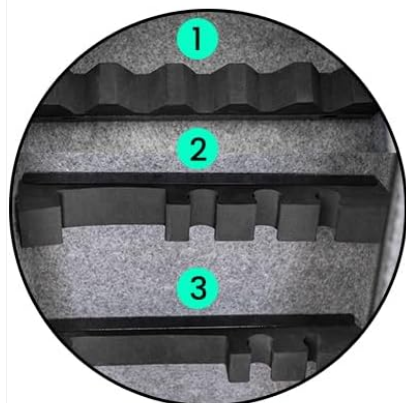

Adjustable gun slots



 
Pistol pouches



Solid locking bolts



LED light

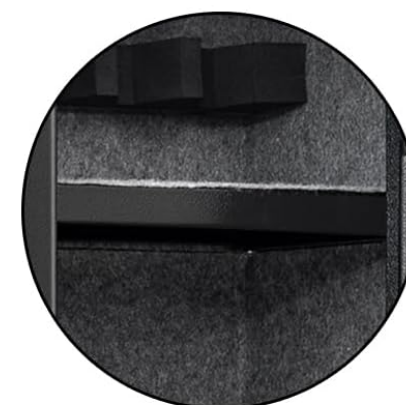

Removable shelf



Door side metal storage box

Image: Interior features including adjustable gun slots, pistol pouches, LED light, removable shelf, door side metal storage box, and solid locking bolts.

9. Warranty and Support

Omethey provides a lifetime after-sales service and key-matching service for this product. If you have any questions, require assistance, or need to utilize the key-matching service, please contact Omethey customer support through the retailer's platform or the official Omethey website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLHVXZMJ>

More documents and user manuals: **<https://manuals.plus/>**