

[Manuals.plus](#) /

› [Delmodes](#) /

› Delmodes 4K Video Camera V827 User Manual

## Delmodes V827

# Delmodes 4K Video Camera V827 User Manual

Model: V827

## INTRODUCTION

---

Welcome to the user manual for your new Delmodes 4K Video Camera V827. This manual provides comprehensive instructions on how to set up, operate, and maintain your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and keep it for future reference.

## WHAT'S IN THE BOX

---

Please check the contents of your package to ensure all items are present:

- 1 x Delmodes 4K Video Camera
- 1 x USB cable
- 2 x Rechargeable Batteries
- 1 x Lens cover
- 1 x User Manual
- 1 x Camera Bag
- 1 x Remote controller
- 1 x 32GB SD Card

## PRODUCT OVERVIEW

---



This image displays the Delmodes 4K Video Camera, showcasing its main body with the lens, flip-out LCD screen, and control buttons. Alongside the camera are its essential accessories: two rechargeable batteries, a 32GB Ultra High Speed memory card, and a compact remote control for convenient operation.

### Camera Front (Lens)



A detailed view of the camera's front lens, highlighting its 18X Powerful Zoom capability and F/3.2f=7.36mm aperture. The lens is designed for capturing high-quality video and still images.

## LCD Screen



This image shows the camera's 3.0-inch LCD touchscreen, which can be rotated for various viewing angles. The screen serves as a live view monitor and interface for navigating camera settings and playback.

## Rechargeable Batteries



Two rechargeable Li-ion batteries (model NP-40, 3.7V 1500mAh) are included, providing power for extended recording sessions. It is recommended to use the specified charger only.

## Remote Control



The compact remote control allows for convenient operation of the camcorder from a distance, featuring buttons for power, zoom, mode selection, menu navigation, and recording control.

## SD Memory Card



A 32GB Ultra High Speed SD memory card is provided for storing your 4K videos and high-resolution photos. Ensure the card is inserted correctly into the camera's SD card slot.

## SETUP

### 1. Charging the Batteries

1. Insert the provided batteries into the charger (not included, use specified charger only).
2. Connect the charger to a power source.
3. Allow the batteries to fully charge before first use. The charging indicator will typically change color or turn off when charging is complete.

### 2. Inserting the SD Card

1. Locate the SD card slot on the camera (usually on the side or bottom).
2. Ensure the camera is powered off.
3. Insert the 32GB SD card into the slot with the metal contacts facing down (or as indicated by the diagram near the slot) until it clicks into place.
4. To remove, gently push the card in until it springs out.

### 3. Powering On/Off

- To power on, open the LCD screen or press the Power button.
- To power off, close the LCD screen or press and hold the Power button until the camera shuts down.

## OPERATING INSTRUCTIONS

---

### 1. Recording Video

1. Turn on the camera.
2. Press the 'MODE' button to select video recording mode (indicated by a video camera icon on the screen).
3. Press the 'RECORD' button (usually a red circle) to start recording. Press it again to stop.

### 2. Taking Photos

1. Turn on the camera.
2. Press the 'MODE' button to select photo mode (indicated by a camera icon).
3. Press the 'SHUTTER' button (often the same as 'RECORD' or a dedicated button) to take a photo.

### 3. Using Night Vision (IR)

- In low-light conditions, activate the IR Night Vision feature via the camera's menu or a dedicated button. This will allow the camera to capture clear footage in near-dark environments.

### 4. Zoom Function

- Use the zoom rocker switch (T/W or +/-, usually near the top of the camera) to zoom in (T) or zoom out (W). The camera features 18X digital zoom.

### 5. Playback

- Press the 'PLAYBACK' button (often an arrow icon) to review recorded videos and photos.
- Use the navigation buttons to browse through your media.

### 6. Connecting to a Computer

- Connect the camera to your computer using the provided USB cable.
- The camera will typically appear as a removable disk drive, allowing you to transfer files.

## MAINTENANCE

---

### 1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens surface with your fingers.
- Do not use strong detergents or solvents.

### 2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- If not using the camera for an extended period, remove the batteries.

### 3. Storage

- Store the camera in a dry, dust-free environment, ideally in its protective bag.
- Avoid extreme temperatures and high humidity.

## TROUBLESHOOTING

---

If you encounter issues with your camera, please refer to the following common problems and solutions:

- **Camera does not power on:** Ensure batteries are fully charged and correctly inserted. Try using the second battery.
- **Cannot record:** Check if the SD card is inserted correctly and has sufficient free space. Ensure the camera is in video recording mode.
- **Poor image/video quality:** Clean the lens. Ensure adequate lighting. Check camera settings for resolution.
- **Remote control not working:** Ensure the remote's battery is functional and there are no obstructions between the remote and the camera's IR receiver.
- **Camera freezes:** Remove and reinsert the battery to reset the camera.

If the problem persists, please contact customer support.

## SPECIFICATIONS

---

Feature	Specification
Brand	Delmodes
Model	V827
Item Weight	1 pounds
Package Dimensions	6 x 6 x 3 inches
Special Features	Face Detection, Infrared, Night Vision, Remote Control, Slow Motion
ASIN	B0CLJ1GFB4
Date First Available	October 21, 2023
Photo Sensor Technology	CMOS
Video Capture Resolution	4K
Maximum Focal Length	7.36 Millimeters
Flash Memory Type	SD
Screen Size	3 Inches
Connectivity Technology	USB
Camcorder type	Video Camera

## WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact Delmodes customer support.

For technical support, troubleshooting assistance, or any inquiries regarding your Delmodes 4K Video Camera V827, please visit the official Delmodes brand page on Amazon or contact their customer service directly.

You can find more information and support at: [Delmodes Brand Store on Amazon](#)