

SHIHOT 42 inch Ceiling Fan with Lights and Remote Control

SHIHOT 42-inch Ceiling Fan with Lights and Remote Control Instruction Manual

Model: 42 inch Ceiling Fan with Lights and Remote Control

Brand: SHIHOT

1. INTRODUCTION

Thank you for purchasing the SHIHOT 42-inch Ceiling Fan with Lights and Remote Control. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read this manual thoroughly before installation and keep it for future reference.

This ceiling fan features a 42-inch span, integrated LED lighting with dimmable and color temperature adjustment, a quiet DC motor, 6-speed settings, and reversible blades for all-season use. It is designed for indoor use in various rooms such as living rooms, bedrooms, offices, kitchens, and dining rooms.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these safety guidelines:

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All electrical wiring must be performed by a qualified electrician and comply with local codes and regulations.
- The mounting structure must be capable of supporting the weight of the fan (at least 35 lbs).
- Do not bend the blade holders during installation, balancing, or cleaning.
- Keep hands, tools, and other objects away from the fan blades when the fan is operating.
- Ensure all connections are secure and properly insulated.
- This fan is for indoor use only.

3. PACKAGE CONTENTS

Carefully unpack your ceiling fan and inspect the contents to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer support before proceeding with installation.



Figure 1: Overview of all included components for the SHIHOT 42-inch Ceiling Fan.

Typical package contents include:

- Fan Motor Housing with Integrated Light
- Fan Blades (4 pieces, reversible colors)
- Remote Control
- Receiver for Remote Control
- Mounting Bracket
- Downrods (12.5cm and 20cm options)
- Canopy and Cover
- Hardware Pack (screws, wire nuts, etc.)
- Instruction Manual

4. ASSEMBLY AND INSTALLATION

Follow these steps carefully for proper assembly and installation. It is recommended to have a second person assist during

installation.

4.1 Attaching the Fan Blades

Attach the fan blades to the motor housing using the provided screws. Ensure they are securely fastened. The blades are reversible, offering two different color options (white and wood grain) to match your decor.



Figure 2: Reversible fan blade colors (White and Wood Grain).


4.2 Assembling the Downrod and Canopy

Feed the electrical wires from the fan motor through the chosen downrod. Secure the downrod to the motor housing with the provided pin and screws. Slide the canopy over the downrod.

4.3 Mounting the Bracket to the Ceiling

Secure the mounting bracket to the ceiling junction box. Ensure the bracket is firmly attached to a structural ceiling beam or a fan-rated outlet box. This fan supports both downrod mount and sloped ceiling mount options.

DIMENSION

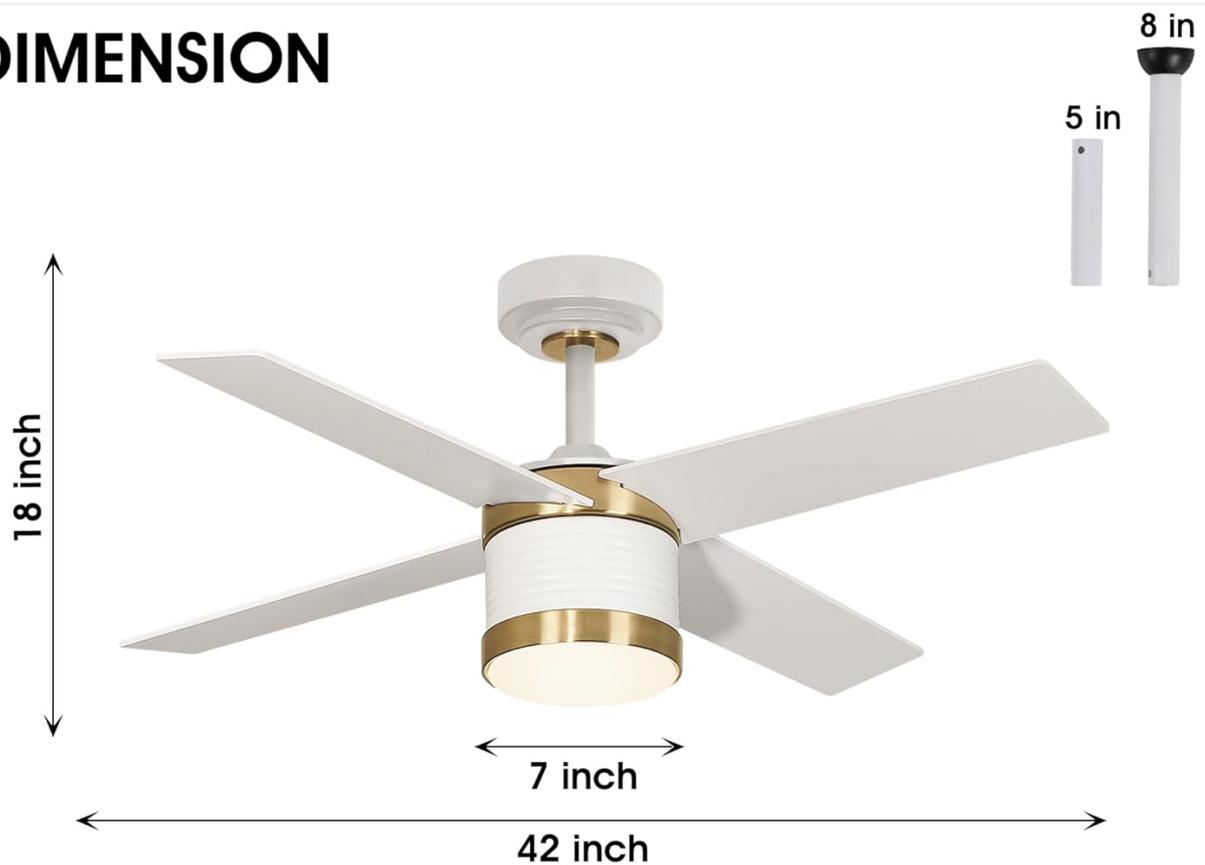

2 MOUNT OPTIONS



Up to 15 degrees

Recommended Room Size:
paces around
10 ft. x 10 ft. in size

Figure 3: Fan dimensions and available mounting options.

4.4 Electrical Wiring

Connect the fan's electrical wires to the household wiring according to the wiring diagram in the full manual and local electrical codes. Typically, this involves connecting live, neutral, and ground wires. Ensure the receiver for the remote control is properly wired between the fan and the power supply.

4.5 Securing the Fan to the Mounting Bracket

Carefully lift the fan assembly and hang it onto the mounting bracket. Secure the canopy to the mounting bracket with the provided screws, ensuring all wires are tucked neatly inside.

4.6 Installation Video Guide

For a visual guide on the installation process, please watch the video below:

Your browser does not support the video tag. Please download the video to view it.

Video 1: Step-by-step installation guide for the SHIHOT Ceiling Fan.

5. OPERATING INSTRUCTIONS

Your SHIHOT ceiling fan is operated via the included remote control or a compatible APP.

DIMMABLE LIGHT WITH MEMORY FUNCTION



Figure 4: Remote control and APP interface for fan operation.

5.1 Fan Speed Control

The fan offers 6 adjustable wind speeds. Use the speed buttons on the remote control to select your desired airflow:

- **1-2 Gear:** Gentle breeze, suitable for sleep.
- **3-4 Gear:** Comfortable, ideal for leisure.
- **5-6 Gear:** Strong airflow, suitable for exercise or rapid cooling.

ADJUSTABLE 6 RD GEAR WIND SPEEDS

Meet all your daily needs



1 GEAR ➤	2 GEAR ➤	3 GEAR ➤	4 GEAR ➤	5 GEAR ➤	6 GEAR ➤
Gentle	Comfortable	Leisure	Air circulation	Cool	Strong

Figure 5: 6-speed settings for varied comfort.

5.2 Light Control and Dimmable Function

The integrated LED light can be turned on/off, and its color temperature can be adjusted from 3000K (Warm Light) to 6000K (White Light). The brightness is also dimmable from 0% to 100%. The light features a memory function, retaining your last setting.

DIMMABLE LIGHT WITH MEMORY FUNCTION



Figure 6: Dimmable light with adjustable color temperature and memory function.

5.3 Reversible Blade Function

The fan features a reversible motor for all-season comfort. In summer, the fan operates in a forward (downward) mode to create a cooling breeze. In winter, it operates in a reverse (upward) mode to circulate warm air trapped near the ceiling, helping to distribute heat more evenly.

- **Summer Downdraft Mode:** Blades rotate counter-clockwise, pushing air downwards for a cooling effect.
- **Winter Updraft Mode:** Blades rotate clockwise, drawing air upwards to circulate warm air.

To activate the reverse function, press the 'R' key on the remote control. The fan will stop completely and then automatically reverse direction after 5-8 seconds.

FORWARD AND REVERSE MOTOR

The fan light reverses with the air conditioner, circulating to adjust the room temperature, always enjoy the cool and comfortable

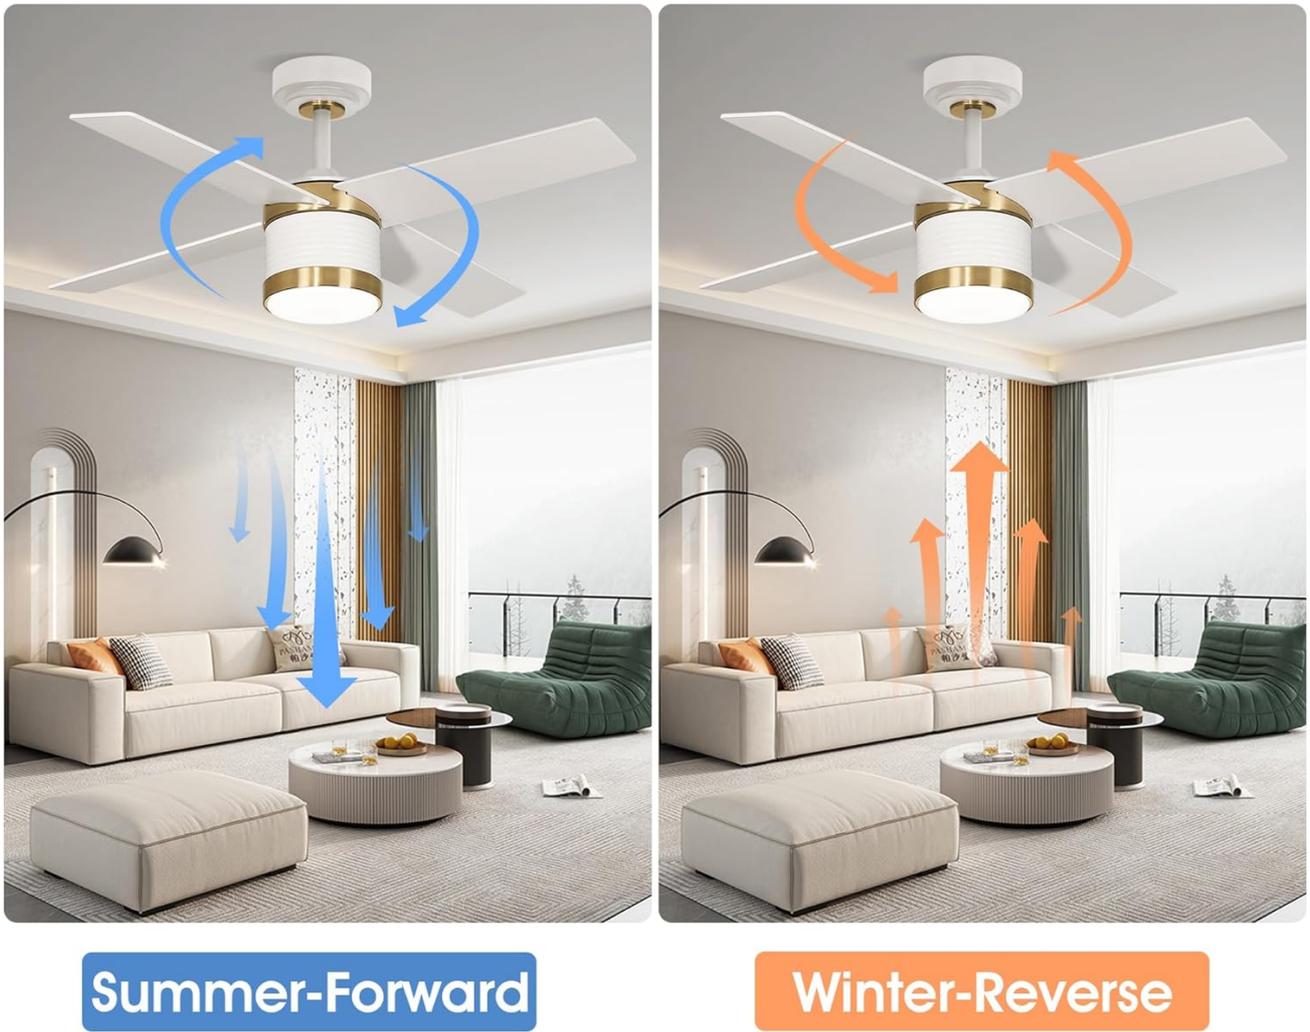


Figure 7: Forward and Reverse motor operation for seasonal comfort.

5.4 Timer Setting

Use the timer function on the remote control to set the fan to turn off automatically after a specified period (e.g., 2 hours).

5.5 Operating Features Video Guide

For a demonstration of the fan's operating features, please watch the video below:

Your browser does not support the video tag. Please download the video to view it.

Video 2: Demonstration of SHIHOT Ceiling Fan operating features, including speed, light, and reverse function.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Blade Screws:** Periodically check all blade screws for tightness. Due to natural movement, they may loosen over time.

- **Light Cover:** The light cover can be removed for cleaning if necessary. Ensure the power is off before removing.

Note: No lubrication is needed for the motor. The sealed bearings are permanently lubricated.

7. TROUBLESHOOTING

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wire connections are secure; Replace remote battery or re-pair remote.
Fan makes noise	Loose screws on motor housing or blades; Fan not properly balanced; Canopy touching the ceiling.	Tighten all screws; Use balancing kit (if included) to balance blades; Adjust canopy position.
Light does not work	Loose wire connection to light kit; LED driver issue; Remote control issue.	Check light kit wiring; Contact customer support if LED driver is suspected; Check remote battery/pairing.
Remote control not working	Battery depleted; Remote not paired with receiver; Obstruction between remote and receiver.	Replace battery; Follow pairing instructions in the full manual; Ensure clear line of sight.

If the problem persists after attempting these solutions, please contact SHIHOT customer support for further assistance.

8. SPECIFICATIONS

- **Brand:** SHIHOT
- **Model:** 42 inch Ceiling Fan with Lights and Remote Control
- **Color:** White
- **Material:** Acrylic
- **Style:** Fine
- **Room Type:** Living Room, Bedroom, Office, Kitchen, Dining Room
- **Indoor/Outdoor Usage:** Indoor
- **Power Source:** DC
- **Installation Type:** Flush Mount
- **Included Components:** Remote Control
- **Finish Types:** Painted

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SHIHOT website. Keep your purchase receipt as proof of purchase for any warranty claims.