

FREDI HD PLUS FHP-05

FREDI HD PLUS FHP-05 1080P HD Body Camera

Instruction Manual

		Introduction	Safety Information	Package Contents	Product	
Overview	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

The FREDI HD PLUS FHP-05 1080P HD Body Camera is a portable recording device designed for personal safety, outdoor activities, and documentation. It features 1080P video resolution, a 180-degree rotatable lens, night vision capabilities, and a long-lasting battery. This manual provides detailed instructions for the proper use and maintenance of your body camera.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Failure to follow these instructions may result in damage to the device or personal injury.

- Do not expose the camera to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and liquids, as it is not water-resistant.
- Do not attempt to disassemble or modify the camera. This will void the warranty.
- Use only the provided charging cable and accessories.
- Ensure the device is fully charged before initial use.

Important Legal Notice for Hidden Products

Hidden Camera Products are strictly prohibited for use in any kind of illegal activity. The manufacturer shall not be held responsible for any crimes committed by using products purchased from us. Users are requested to kindly respect the country's laws and regulations. Do not break any rules and laws. Some countries have banned the use of hidden cameras unless consent is taken by law enforcement. The company reserves the right for no refund policy. For discrepancies, customers can move legal jurisdiction to Ghaziabad jurisdiction only. If you have any concerns, please call: 9810589579.



LEGAL NOTICE FOR HIDDEN PRODUCTS

FREDI HD PLUS HIDDEN CAMERA

Hidden Camera Products are Strictly Prohibited to use for any kind of ILLEGAL ACTIVITY. We shall not be held Responsible for any Crimes Committed by using the Products Purchased from us.

We are requested to Customers kindly Respect the country "LAW AND REGULATIONS" in which we all are living must applied so please after buy or used the products have some manner .Dont break any rules and laws.

We are also known that some Countries Banned Used of Hidden Cameras as it considered Illegal unless taken the Consent By the Law Makers of those Conutries.

**COMPANY RESERVE RIGHT FOR NO REFUND POLICY.
CUSTOMER IF FURTHER HAS ANY DISCREPANCIES, CAN
MOVE LEGAL JURISDICTION IN GHAZIABAD JURISDICTION
ONLY.**

IF YOU HAVE ANY CONCERN THEN CALL ON- 9810589579.

Image: Legal notice detailing restrictions and responsibilities for hidden camera products.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x FREDI HD PLUS FHP-05 Body Camera
- 1 x Charging Cable
- 1 x Card Reader
- 1 x User Manual (this document)

- (Optional: 64GB Micro SD card, if included with purchase)

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

4.1. Product Dimensions



Image: Diagram showing the dimensions of the FREDI HD PLUS FHP-05 Body Camera. Dimensions are approximately 9.8cm (3.86in) height, 3.2cm (1.26in) width, and 1.9cm (0.75in) depth.

4.2. Controls and Ports

Easy to Operate



Image: Front and back view of the camera highlighting key controls and ports. These include: Power button, Return button, TF Card Slot, UP button, OK button, Down button, Charging Hole, and Reset button.

- **Power Button:** Turns the device on/off.
- **Return Button:** Navigates back in menus or exits current mode.
- **TF Card Slot:** For inserting a Micro SD card.
- **UP/DOWN Buttons:** Navigate through menu options or adjust settings.
- **OK Button:** Confirms selections or starts/stops recording.
- **Charging Hole:** USB port for charging and data transfer.
- **Reset Button:** Resets the device (use a pin to press).
- **Rotatable Lens:** 180-degree adjustable lens for various shooting angles.
- **1.3-inch Color Display:** For real-time preview and menu navigation.

4.3. Back Clip Design

The camera features a back clip design, allowing it to be easily attached to clothing pockets, bag belts, or other suitable locations for hands-free recording. The clip is adjustable and detachable.

Back Clip Type Design Easy to Carry

Can be installed and detachable, can be adjusted front and back clip clothes pocket, Books, bag belt, waist, etc.



Image: The camera demonstrating its back clip design, showing it attached to a shirt pocket, highlighting its portability and ease of carrying.

5. SETUP

5.1. Charging the Battery

Before first use, fully charge the camera's built-in 1200mAh battery. Connect the camera to a power source using the provided charging cable. The charging indicator will show the charging status. A full charge provides approximately 6-8 hours of continuous recording.

The camera supports recording while charging, allowing for extended operation when connected to a power bank or wall adapter.

Low Battery Reminder

When the battery level is low, the camera will display a reminder to recharge, preventing unexpected power loss during recording.

Low Battery Reminder

When the battery is too low, it will remind you that you need to recharge, preventing you from forgetting, and supports system reset.



Image: The camera screen displaying a low battery reminder, indicating the need for recharging.

5.2. Inserting a Micro SD Card

The camera supports Micro SD cards up to 128GB (64GB card may be included). Insert the Micro SD card into the TF Card Slot with the gold contacts facing down until it clicks into place. To remove, gently push the card in until it springs out.

Ensure the Micro SD card is formatted to FAT32 for optimal performance. If the card is new or causing issues, format it using the camera's menu settings or a computer.

5.3. Powering On/Off

Press and hold the **Power Button** for a few seconds to turn the camera on or off. The screen will illuminate upon power-on.

6. OPERATING INSTRUCTIONS

The camera offers various modes for recording video, capturing photos, and recording audio. Navigate through the menu

using the UP/DOWN buttons and confirm selections with the OK button.

6.1. Video Recording

From the main menu, select "Video" mode. Press the **OK Button** to start recording. Press it again to stop. The camera records in 1080P HD resolution.

Adjusting the Lens

The lens can be manually rotated 180 degrees to capture footage from different angles, making it versatile for various activities.



Image: The camera demonstrating its 180-degree rotatable lens, allowing for flexible video recording angles.

6.2. Photo Capture

Select "Photo" mode from the main menu. Press the **OK Button** to take a picture. Photos are saved in JPEG format.

6.3. Audio Recording

Select "Audio" mode to record sound only. Press the **OK Button** to start/stop audio recording.

6.4. Motion Detection

Activate motion detection in the camera's settings menu. When enabled, the camera will automatically begin recording when motion is detected and stop after 20 seconds of inactivity. This feature helps conserve battery life and memory space.

6.5. Night Vision

The camera is equipped with enhanced infrared capabilities and 5 built-in spotlights for clear recording in low-light or nighttime conditions. Night vision activates automatically or can be toggled in settings.

6.6. Playback

Select "Playback" mode from the main menu to view recorded videos, photos, or listen to audio files directly on the 1.3-inch color display. Use the UP/DOWN buttons to navigate through files and the OK button to play/view.

Instant Playback & Computer Connection

Instantly Playback & Replay on Computer

Instantly view recorded content after filming



Use a card reader to view and back up all your memories on your computer



Image: The camera displaying recorded content on its screen and an illustration of connecting the camera to a laptop via USB for file transfer and playback.

6.7. Connecting to a Computer (USB Mode)

Connect the camera to your computer using the provided USB cable. The camera will enter USB mode, allowing you to access recorded files as a removable disk. You can also use the camera as a PC webcam in this mode.



Image: The camera connected to a laptop via USB, showing options for Memory access, PC Camera, and Video. This mode allows for charging, recording while charging, and using the camera as a webcam.

7. MAINTENANCE

7.1. Cleaning

Wipe the camera body with a soft, dry cloth. Do not use liquid cleaners or solvents. For the lens, use a specialized lens

cleaning cloth.

7.2. Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

8. TROUBLESHOOTING

Problem	Possible Solution
Camera does not turn on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, press the Reset button with a thin object.
Cannot record video/photos.	Check if a Micro SD card is inserted correctly and has sufficient free space. Format the Micro SD card if necessary.
Poor video/image quality.	Ensure the lens is clean. Check lighting conditions; use night vision in low light.
Camera freezes or becomes unresponsive.	Press the Reset button with a thin object to restart the device.
Computer does not recognize the camera.	Ensure the USB cable is securely connected. Try a different USB port or cable. Ensure the camera is in USB mode.

9. SPECIFICATIONS

Feature	Detail
Brand	FREDI HD PLUS
Model Number	FHP-05
Video Capture Resolution	1080p
Image Sensor Technology	CMOS
Lens Type	Standard, 180-degree Rotatable
Viewing Angle	180 degrees
Screen Size	1.3 inches
Flash Memory Type	Micro SD (supports up to 128GB)
Flash Memory Speed Class	C2, C4, C6, or C10 (Video Speed Class V10 recommended)
Battery Capacity	1200mAh
Battery Life	6-8 hours (continuous recording)
Video Capture Format	AVI
Supported Audio Format	AVI

Feature	Detail
Supported Image Format	JPEG
Connectivity Technology	Wireless (Infrared for night vision), USB
Special Features	Motion Detection, Night Vision, PC Webcam Functionality
Water Resistance Level	Not Water Resistant
Product Dimensions (D x W x H)	19mm x 32mm x 98mm
Color	Black

10. WARRANTY AND SUPPORT

For product support or inquiries, please refer to the contact information provided at the point of purchase. Please note that the company reserves the right for no refund policy. Any legal discrepancies are subject to Ghaziabad jurisdiction only.

For urgent concerns, you may contact: 9810589579.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLJJMRZW>

More documents and user manuals: <https://manuals.plus/>