

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FASTWD](#) /

› [FASTWD Tablet 10-inch Android 14 User Manual - Model L30-EEA](#)

FASTWD L30-EEA

FASTWD Tablet 10-inch Android 14 User Manual

Model: L30-EEA

1. INTRODUCTION

This manual provides detailed instructions for the FASTWD 10-inch Android 14 Tablet, Model L30-EEA. It covers essential information regarding device setup, operation, features, maintenance, and troubleshooting to ensure optimal performance and user experience. The tablet features a 10-inch FHD 1920x1200 incell display, runs on Android 14, and supports 4G LTE and 5G WiFi connectivity. It is equipped with 36GB RAM (12GB physical + 24GB extended) and 128GB ROM, expandable up to 1TB.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items listed below are present:

- FASTWD 10-inch Android 14 Tablet (Model L30-EEA)
- Keyboard
- Mouse
- Protective Case
- Capacitor Pen (Stylus)
- Power Adapter
- USB-C Data Cable
- OTG Adapter
- User Manual



Image 2.1: FASTWD Tablet with its complete set of accessories, including a keyboard, mouse, charging adapter, USB-C cable, OTG adapter, stylus, and a protective case.

3. INITIAL SETUP

3.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the USB-C data cable to the tablet's charging port and the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2 hours.



Image 3.1: The tablet connected to its charger, illustrating the charging process and the 8000mAh high-capacity battery.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the FASTWD logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power Off" and confirm.
- **To Restart:** From the power options menu, select "Restart" and confirm.

3.3 Initial Configuration

Follow the on-screen prompts to complete the initial setup:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Set up screen lock methods (PIN, pattern, password, or Face ID).
5. Review and accept terms and conditions.

3.4 Inserting SIM and SD Card

The tablet supports 4G LTE connectivity via a SIM card and storage expansion via a Micro SD card (up to 1TB).

1. Locate the SIM/SD card tray on the side of the tablet.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place the Nano-SIM card and/or Micro SD card into the designated slots, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

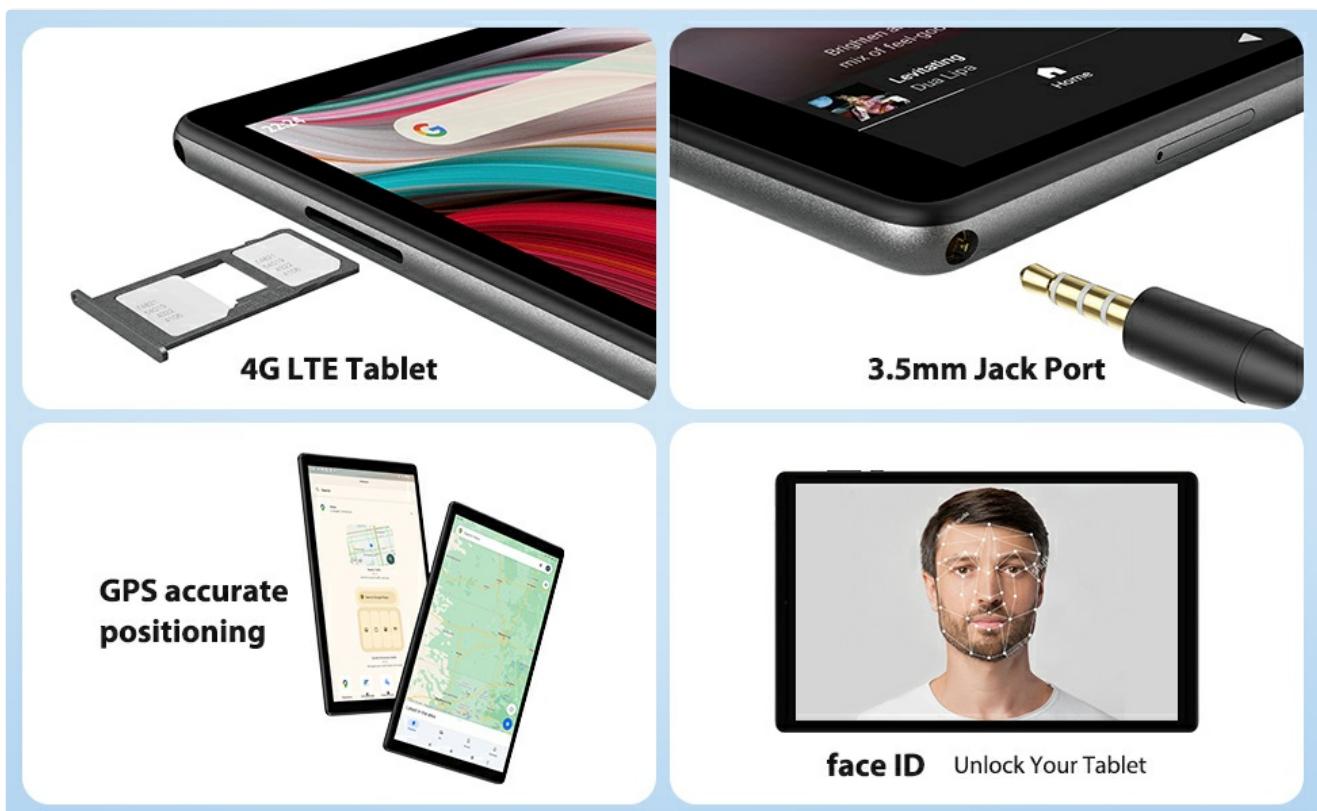


Image 3.2: Details of the tablet's SIM/SD card slot, 3.5mm audio jack, GPS functionality, and Face ID setup.

4. OPERATING YOUR TABLET

4.1 Android 14 Features

The FASTWD Tablet runs on Android 14, offering enhanced privacy, security, and user experience features:

- **Multitasking Window:** Utilize the new unique multitasking window feature to manage multiple applications simultaneously.
- **Gesture Touch Mode:** Navigate the system using intuitive gesture controls.
- **Global Dark Mode:** Activate dark mode for a comfortable viewing experience in low light conditions.
- **Parental Control:** Manage and monitor usage for children, ensuring a safe digital environment.
- **Face ID:** Unlock your tablet quickly and securely using facial recognition.

New Experience Android 14 Tablet

The new Android 14 update brings even more new features. Design pages, system functions and privacy security give you a different experience.

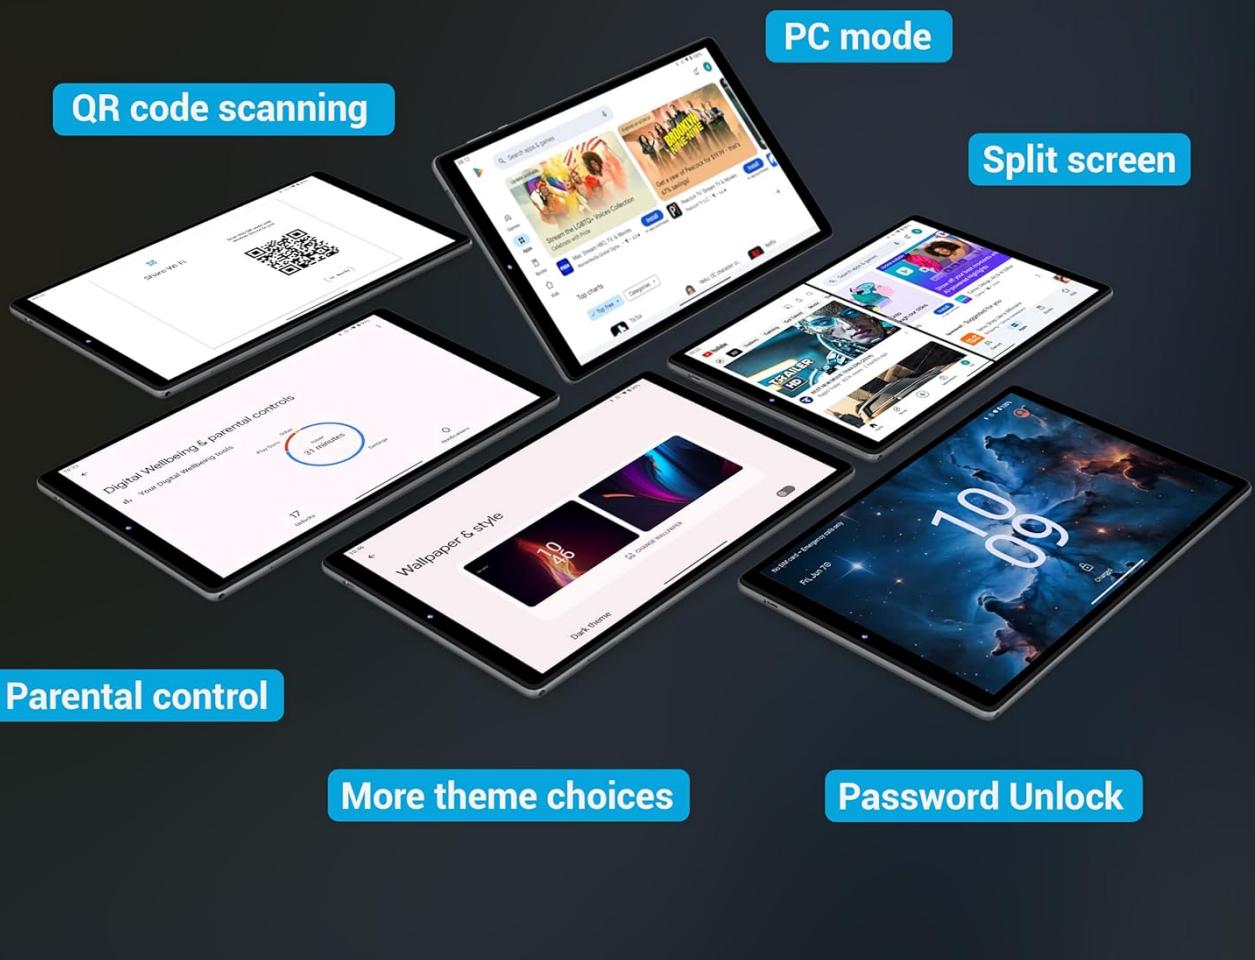


Image 4.1: Overview of Android 14 features including PC mode, split screen, QR code scanning, parental controls, theme customization, and various unlock methods.

4.2 Connectivity

The tablet supports advanced wireless connectivity options:

- **5G Dual-Band WiFi:** Connect to 2.4GHz and 5GHz Wi-Fi networks for stable and fast internet access.
- **4G LTE:** Insert a SIM card to enjoy mobile data connectivity on the go.
- **Bluetooth 5.0:** Pair with wireless accessories such as headphones, speakers, keyboard, and mouse.

Supporto 4G LTE

È sufficiente inserire la scheda SIM nel tablet per usufruire di comunicazioni 4G stabili ovunque. Anche quando siete in viaggio, potete navigare sul web senza problemi



Bluetooth



WiFi

Supporto 5G LTE

La risposta di connessione ultraveloce del 5G WiFi e del 2.4G WiFi consente di navigare sul web in qualsiasi momento e di velocizzare la navigazione. Sia che stiate guardando video, scaricando file o giocando online, sarete sempre un passo avanti.



Image 4.2: Demonstrates the tablet's 4G LTE and 5G WiFi capabilities, alongside Bluetooth connectivity for pairing devices.

4.3 Using the Keyboard and Mouse

The included keyboard and mouse connect via Bluetooth, enhancing productivity:

1. Ensure Bluetooth is enabled on your tablet (Settings > Connected devices > Bluetooth).
2. Turn on the keyboard/mouse and put them into pairing mode (refer to their individual manuals if needed).
3. On the tablet, search for available devices and select the keyboard/mouse to pair.



Image 4.3: Illustrates the Face ID unlock feature and a comprehensive view of the tablet's accessories, including the keyboard and mouse.

5. KEY FEATURES

5.1 Performance and Storage

The tablet is designed for smooth operation and ample storage:

- **RAM:** 36GB (12GB physical + 24GB extended) for efficient multitasking.
- **ROM:** 128GB internal storage, expandable up to 1TB via Micro SD card.
- **Processor:** Octa-core processor for responsive performance.

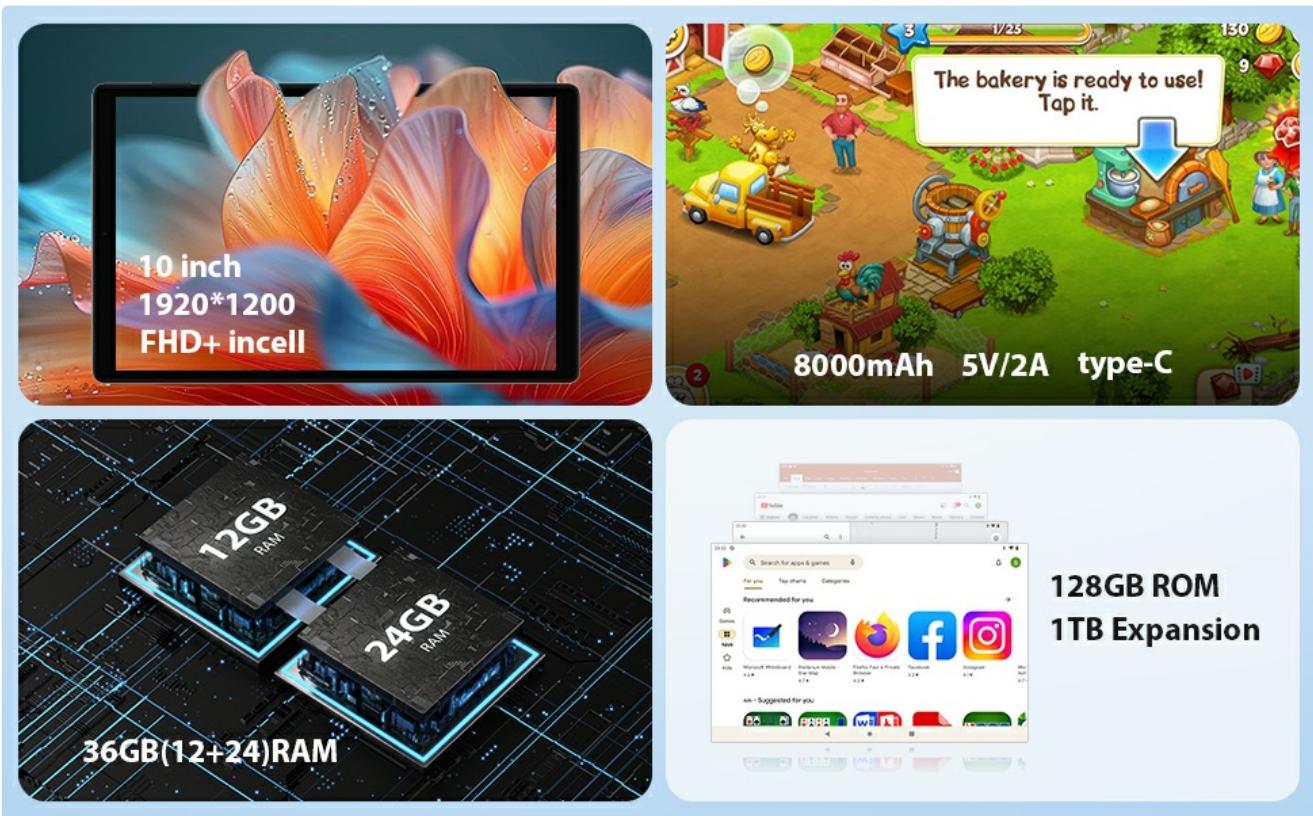


Image 5.1: Highlights of the tablet's display, battery capacity, and memory configuration (36GB RAM, 128GB ROM with 1TB expansion).

5.2 Display and Audio

- Display:** 10-inch FHD 1920x1200 in-cell display with eye protection modes (night light, eye protection mode).
- Audio:** Four amplitude speakers with AI noise cancellation technology for clear sound.
- Wireless Projection:** Supports wireless screen mirroring for larger displays.

Four amplitude speakers with AI noise cancellation technology automatically filters out some of the surrounding noise.

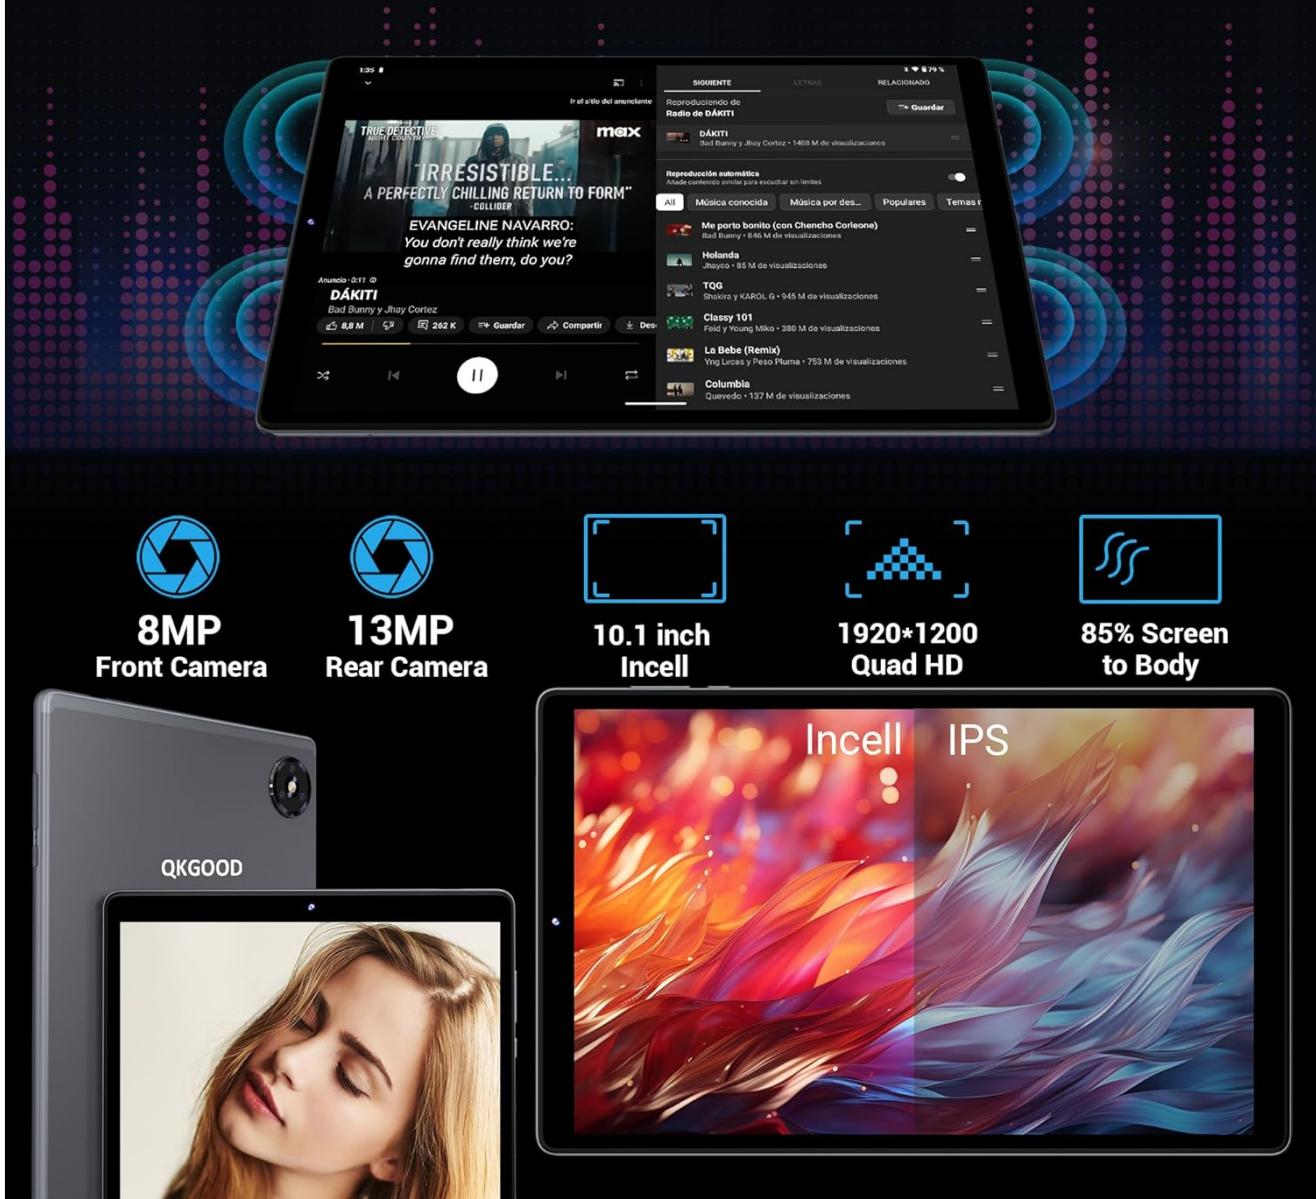


Image 5.2: Details on the tablet's four amplitude speakers with AI noise cancellation and the 10.1-inch incell display with 1920x1200 resolution.

5.3 Cameras

- **Rear Camera:** 13MP with AI scene recognition and smile detection.
- **Front Camera:** 8MP, suitable for video calls and selfies.



Image 5.3: Visual representation of the tablet's camera specifications (8MP front, 13MP rear) along with other key features.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	L30-EEA
Operating System	Android 14
Display Size	10 inches
Display Resolution	1920 x 1200 pixels (FHD Incell)
RAM	36GB (12GB physical + 24GB extended)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via Micro SD card
Processor Brand	MediaTek, Qualcomm, or Samsung (Octa-Core)
Processor Speed	2 GHz
Connectivity	5G Dual-Band WiFi (2.4GHz/5GHz), 4G LTE, Bluetooth 5.0
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	8000 mAh
Charging Port	USB Type-C (12W-PD fast charging)
Audio Jack	3.5mm

Feature	Specification
Product Weight (packaged)	1.32 Kilograms
Dimensions (packaged)	33.6 x 19.6 x 4.2 cm

7. MAINTENANCE AND CARE

- Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- Software Updates:** Regularly check for and install system updates to ensure optimal performance, security, and access to new features. Go to Settings > System > System update.
- Battery Care:** To prolong battery life, avoid extreme temperatures. Do not let the battery completely drain frequently.
- Storage Management:** Periodically clear unnecessary files and apps to maintain system speed. Utilize the expandable storage for large media files.
- Protection:** Use the provided protective case to guard against physical damage.

8. TROUBLESHOOTING

Problem	Solution
Tablet does not turn on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again. If unresponsive, perform a forced restart by holding the power button for 10-15 seconds.
Wi-Fi connection issues.	Restart your Wi-Fi router and the tablet. Forget the network in tablet settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance or apps crashing.	Close unused applications. Clear cache for problematic apps (Settings > Apps > [App Name] > Storage & cache > Clear cache). Ensure sufficient free storage space. Restart the tablet.
Touchscreen unresponsive.	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris. If a screen protector is installed, ensure it is properly applied and not interfering.
Cannot connect Bluetooth accessories.	Ensure Bluetooth is enabled on both the tablet and the accessory. Put the accessory into pairing mode. Check if the accessory is already paired with another device.

9. WARRANTY AND CUSTOMER SUPPORT


FASTWD provides comprehensive support for its products:

- Warranty:** The product typically comes with a one-year warranty. Please refer to the warranty card included in your package for specific terms and conditions.
- Technical Support:** Enjoy 2 years of technical support.
- After-Sales Service:** FASTWD offers 24-hour online after-sales service. For any questions or issues, please contact customer support via the email address provided in your product documentation or on the official FASTWD website.

- **Returns and Replacements:** A 30-day return and replacement policy is generally available.

Please retain your proof of purchase for warranty claims.

Related Documents - L30-EEA

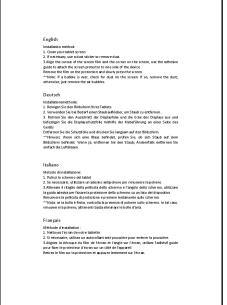	<p><u>How to Install a Tablet Screen Protector: Step-by-Step Guide</u></p> <p>Concise guide on installing a screen protector on your tablet, covering cleaning, alignment, and bubble removal. Suitable for TOSCIDO, YUMKEM, HEASUR, and other compatible tablets.</p>
	<p><u>FASTWD Tablet User Manual</u></p> <p>Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.</p>
	<p><u>IS530.2 Smartphone Set EEA: Technical Specifications and Features</u></p> <p>Detailed technical specifications and features of the IS530.2 Smartphone Set EEA by R. STAHL, including explosion protection, electrical characteristics, display, and mechanical specifications.</p>
	<p><u>R. STAHL IS930.M1 Tablet Set Mining EEA: Robust Industrial Tablet for Hazardous Environments</u></p> <p>Discover the R. STAHL IS930.M1 Tablet Set Mining EEA, an explosion-proof Android tablet designed for mobile workers in mining and hazardous environments. Featuring a durable design, advanced specifications, and safety certifications, it's ideal for IoT maintenance applications.</p>
	<p><u>Vickers 30 Design Proportional Valve Amplifier Adjustment Procedure - Danfoss</u></p> <p>Service manual detailing the adjustment procedure for Vickers 30 Design Proportional Valve Amplifiers by Danfoss. Covers setup, gain control, deadband compensation, and ramp control for hydraulic systems.</p>
	<p><u>Lexgo E-Scooter L10/L20/L30 User Manual and Operation Guide</u></p> <p>Comprehensive user manual for Lexgo E-Scooters including models L10, L20 Lite, L20, L30, L30 Lite, and L30 Max. Covers assembly, virtual password unlock, stem password, operation, smart helmet connection, folding, charging, technical specifications, error diagnostics, and safety instructions.</p>

