

Manuals.plus /

- › Midea /
- › Midea MDC17P0ABB Portable Countertop Mini 5L Built-in Water Tank, No Hookup Needed, 6 Programs, 360° Dual Spray, 162°F High-Temp& Air-Refresh Function, Dishwasher for Apartments& RVs, Black

Midea MDC17P0ABB

Midea MDC17P0ABB Portable Countertop Mini Dishwasher User Manual

Model: MDC17P0ABB
Your compact solution for sparkling clean dishes.

1. PRODUCT OVERVIEW

The Midea MDC17P0ABB Portable Countertop Mini Dishwasher is designed for small living spaces, offering convenience without the need for permanent installation. It features a 5L built-in water tank, eliminating the need for a direct water hookup, or it can be connected to a kitchen faucet. This compact unit can accommodate over 30 items, including plates up to 9.5 inches, and offers six washing programs to suit various needs.



Figure 1.1: Front view of the Midea Portable Countertop Mini Dishwasher.

2. SETUP AND INSTALLATION

Unpacking and Placement

- Carefully remove the dishwasher from its packaging.
- Ensure the distance between your countertop and any overhead wall cupboard is more than 19.6 inches (49.8 cm) for proper clearance.
- Place the dishwasher on a stable, level surface near a power outlet and a drain.

What's in the Box

Air Fresh

Enhancing **30%** Drying Performance
and Always Keep Tube Fresh.

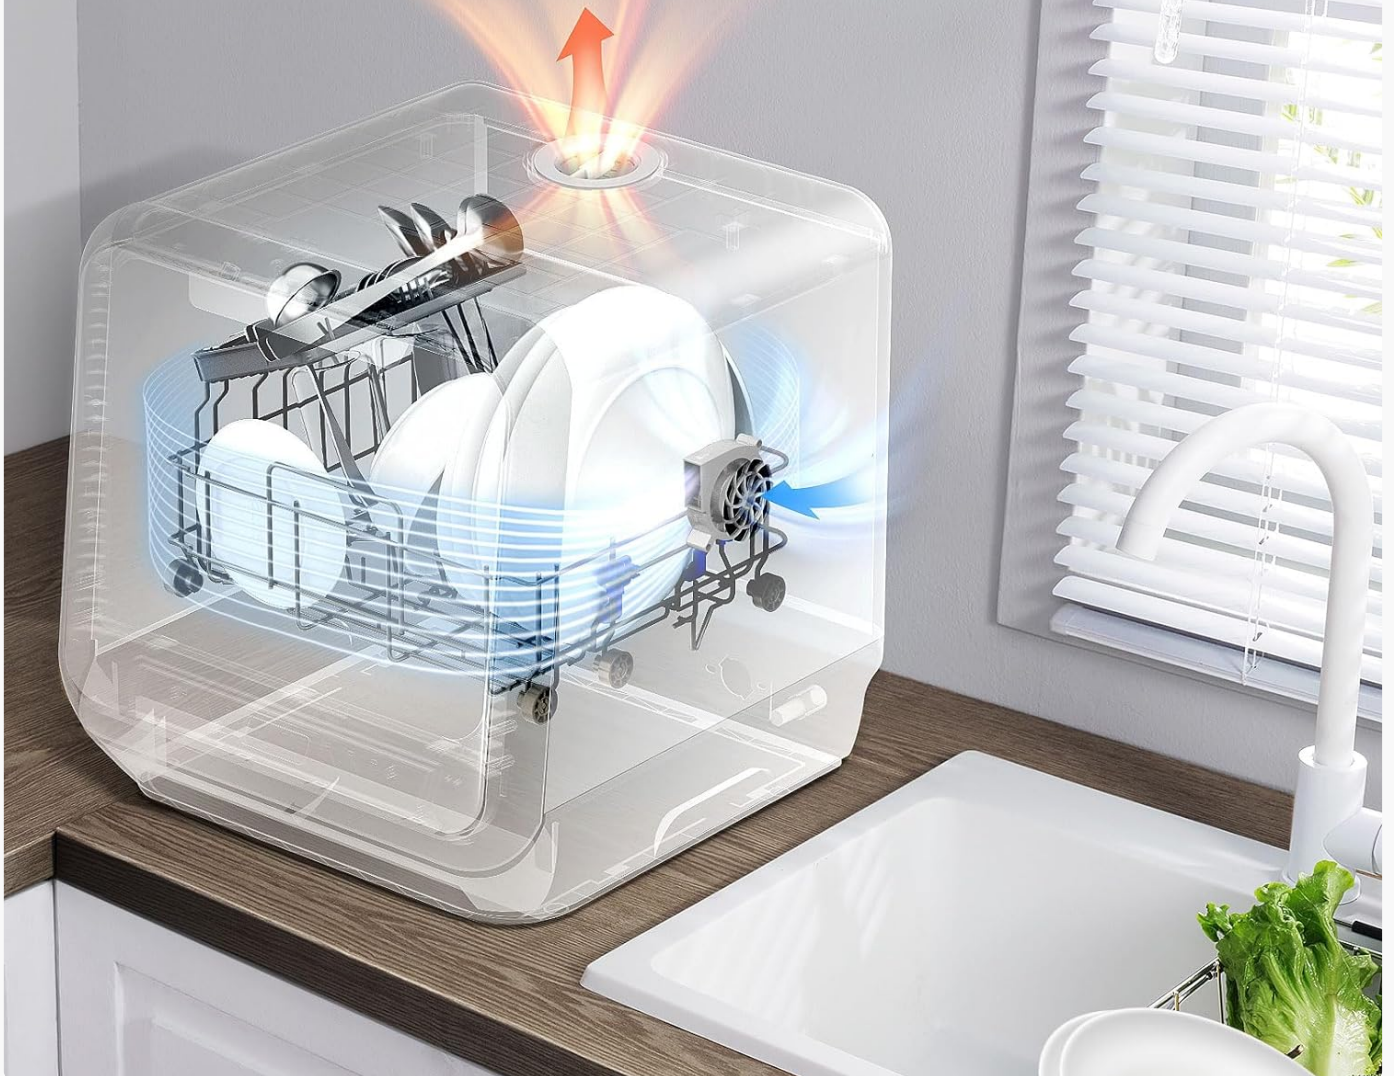


Figure 2.1: Included accessories: Water Container, Water Filling Channel, Bowl Basket, Quick Connect Inlet Hose Connector, Drain Hose, Ring Cap, Fruit Rack.

- Dishwasher unit
- Drain Hose
- Quick-Connect Inlet Hose (Adapter Included)
- Tableware Basket
- Water Pitcher

Water Supply Options

The Midea countertop dishwasher offers two convenient water supply methods:

1. **Built-in 5L Water Tank:** Manually add water to the integrated tank. This option requires no plumbing and allows for flexible placement.
2. **Faucet Connection:** Connect the dishwasher directly to your kitchen faucet using the included water hose and adapter.

162°F High Temp Hygiene Care

Removes Stains More Effectively



162°F High Temp Hygiene Care



360° Full-rotating Spray with Powerful Wash

Figure 2.2: Illustration of direct faucet connection versus manual water filling.

Attaching the Water Filling Channel (for manual fill)

For manual water filling, use the provided water filling channel to prevent spills and ensure water enters the tank correctly.



Intuitive Operation

LED Digital Display, See-Through Viewing Window, Touch Control Provide an easy operation.



Sliding Rollers

Sliding Rollers ensure the Basket Pushing and pulling are Smooth, Durable without Stuck.



Leak Protection

The overflow switch detects and cuts off the accidental water leakage, ensuring your kitchen is clean and tidy.



Quick Connect Hose

For your convenience, Midea offers a quick-connect hose and adapter (15/16" male) that can be hooked to the kitchen faucet directly. Please check whether the supplied adapter is suitable for your faucet.

Figure 2.3: Demonstrates using the attachable water filling channel for easy, spill-free water addition.

3. OPERATING INSTRUCTIONS

Loading Dishes

The dishwasher is designed to hold up to 30+ items, including plates up to 9.5 inches. Utilize the adjustable shelf for high glasses and foldable flip tines for pans or pots to maximize space.



Figure 3.1: The dishwasher's interior showing adjustable shelves and foldable tines for flexible loading.

Adding Detergent

Use standard dishwasher powders or detergents. Regular liquid dish soap is not recommended as it can cause operational issues. For the FRUIT program, no detergent is needed. For the RAPID program, use half the standard quantity of detergent.

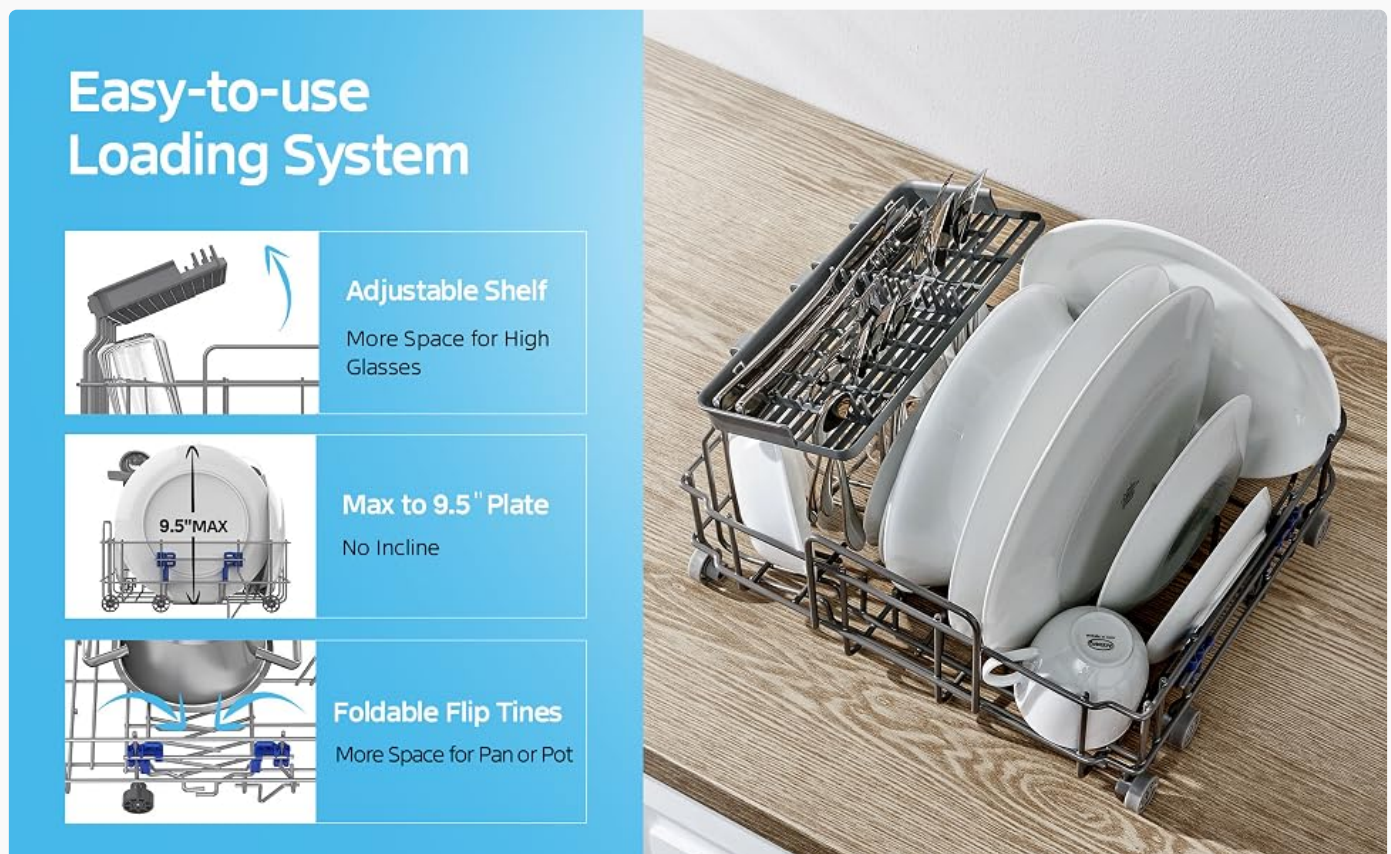


Figure 3.2: The detergent dispenser, compatible with various dishwasher detergents including powders, pods, or liquid.

Program Options

Select from six program options to meet your daily washing needs:

Attachable Water Filling Channel

- *Never Worry About Water Spill Out
- *Never Worry About Your Cupboard Not High Enough.



Figure 3.3: Overview of the six wash programs and their typical durations.

- **NORMAL:** Standard wash for everyday dishes. (Approx. 130 mins)
- **RAPID:** Quick wash for lightly soiled items. (Approx. 40 mins, use half detergent)
- **HYGIENE 162°F:** High-temperature wash for thorough sanitization. (Approx. 135 mins)
- **FRUIT:** Gentle wash for fruits, no detergent needed. (Approx. 20 mins)
- **GLASS:** Delicate care for glassware. (Approx. 120 mins)
- **AIR REFRESH:** Extra drying mode with circulation to remove moisture and odor.

Intuitive Operation

The dishwasher features an LED digital display and touch controls for easy program selection and monitoring. It also includes leak protection with an overflow switch that detects and cuts off water supply to prevent spills.



Figure 3.4: Features like intuitive touch controls, smooth sliding rollers, leak protection, and quick connect hose for user convenience.

4. MAINTENANCE AND CARE

Extra Drying & Stay Fresh Function

The AIR REFRESH function circulates air to remove moisture and odors, combined with 20 hours of automatic ventilation. This keeps your dishes and the machine dry and fresh for extended periods.

Six Programs

Meet Your Daily Needs

-  **HYGIENE -135 mins**
-  **NORMAL -130 mins**
-  **RAPID -40 mins**
-  **AIR REFRESH**
-  **GLASS -120mins**
-  **FRUIT -20mins**




Figure 4.1: Illustration of the Air Fresh system enhancing drying performance and maintaining freshness.

High-Temperature Hygiene Care

The 162°F (72°C) high-temperature wash program effectively removes tough stains and provides hygienic cleaning for your dishes.

Tiny Size. High Capacity

It holds up to 30+ Items, perfectly meets the daily needs of 2-3 people.

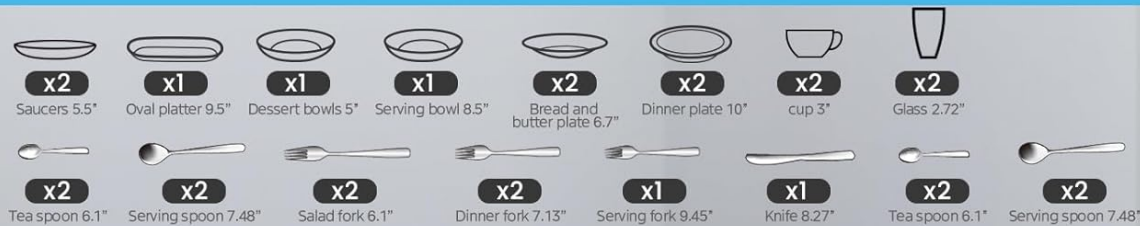

*Please make sure the distance between your countertop and wall cupboard is more than 19.7"



Figure 4.2: Visual representation of the 162°F high-temperature hygiene care and 360° dual spray system.

General Cleaning

- Regularly wipe down the exterior with a soft, damp cloth.
- Clean the filter and spray arms periodically to ensure optimal performance. Refer to the detailed cleaning instructions in the full manual for specific steps.

5. TROUBLESHOOTING

If you encounter issues with your Midea dishwasher, consider the following common troubleshooting steps:

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is fully closed. Check if a program has been selected and the start button pressed.

- **Dishes not clean:** Verify that you are using the correct type and amount of dishwasher detergent. Ensure dishes are loaded correctly, not blocking spray arms. Clean the filter and spray arms.
- **Water not draining:** Check the drain hose for kinks or blockages. Ensure the sink drain is not clogged.
- **Unit stops mid-cycle:** This could indicate a power interruption or an internal error. Try unplugging the unit for a few minutes and then plugging it back in to reset.
- **Water leakage:** Check all hose connections for tightness. Ensure the dishwasher is level. The built-in overflow protection should prevent major leaks.

For more detailed troubleshooting or persistent issues, please refer to the comprehensive troubleshooting guide in the full product manual or contact Midea customer support.

6. SPECIFICATIONS

Key technical specifications for the Midea MDC17P0ABB Portable Countertop Mini Dishwasher:

Feature	Specification
Model Name	Midea Portable Dishwasher Countertop
Model Number	MDC17P0ABB
Dimensions (D x W x H)	17.13"D x 16.56"W x 17.25"H (43.5 cm x 42.0 cm x 43.8 cm)
Item Weight	36.6 pounds (16.6 kg)
Water Tank Capacity	5 Liters
Voltage	120 Volts
Water Consumption	1.32 Gallons per Hour
Annual Energy Consumption	130 Kilowatt Hours Per Year
Number of Programs	6 (Normal, Rapid, Hygiene 162°F, Fruit, Glass, Air Refresh)
Max Plate Size	9.5 inches
Noise Level	62 dB
Material	Plastic
Installation Type	Countertop

7. WARRANTY AND SUPPORT

Midea products are manufactured to high-quality standards. For specific warranty information regarding your MDC17P0ABB Portable Countertop Mini Dishwasher, please refer to the warranty card included with your product or visit

the official Midea website. For technical support, service, or to inquire about replacement parts, please contact Midea customer service directly.

You can find more information and support resources on the official [Midea Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question