

L5B83G

Joelrise L5B83G Replacement Voice Remote Control User Manual

Model: L5B83G | Brand: Generic

1. INTRODUCTION

Thank you for choosing the Joelrise L5B83G Replacement Voice Remote Control. This manual provides essential information for setting up, operating, and maintaining your new remote control. Designed for seamless integration with compatible Smart TV devices, this remote offers voice control and quick access to popular streaming services, enhancing your entertainment experience.

2. SAFETY INFORMATION

- **Battery Handling:** Always use 2 AAA batteries (not included) of the same type and replace them simultaneously. Do not mix old and new batteries or different types of batteries. Ensure correct polarity (+/-) when inserting. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Disposal:** Dispose of used batteries and the remote control according to local regulations. Do not dispose of them in household waste.
- **Environment:** Keep the remote away from direct sunlight, heat sources, and moisture. Avoid dropping or subjecting the remote to strong impacts.

3. PRODUCT OVERVIEW

The L5B83G Voice Remote Control is designed for intuitive navigation and control of your Smart TV device. Below is a diagram illustrating the key components and buttons of the remote.



Figure 3.1: Labeled buttons of the L5B83G Voice Remote Control.

Key Buttons and Functions:

- **Power Button:** Turns your device on or off.
- **Microphone / Voice Button:** Activates voice commands for searching and controlling content.
- **Navigation Ring:** Used to move through menus and selections (Up, Down, Left, Right).
- **Select Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the home screen.
- **Menu Button:** Accesses additional options or context menus.
- **Play/Pause Button:** Controls media playback.
- **Rewind Button:** Rewinds media playback.
- **Fast Forward Button:** Fast forwards media playback.
- **Mute Button:** Mutes or unmutes audio.
- **Volume Up/Down Buttons:** Adjusts audio volume.
- **Guide Button:** Accesses the TV guide or live TV options.

- **App Shortcut Buttons:** Dedicated buttons for Prime Video, Netflix, Disney+, and Hulu for quick access to these streaming services.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.

4.2 Pairing Instructions

The L5B83G remote requires pairing with your Smart TV device before first use. Follow these steps:

1. Ensure your Smart TV device is powered on and within range.
2. Press and hold the **Home** button on the remote control for approximately 10-15 seconds.
3. The LED indicator on the remote will begin to flash quickly. This indicates the remote has entered pairing mode.
4. Continue to wait for about 30-60 seconds. The remote will automatically attempt to pair with your device.
5. Once successfully paired, the LED indicator will stop flashing, and the remote will be ready for use.

If pairing fails, ensure there are no obstructions between the remote and the device, and try the pairing process again. Ensure your device's software is up to date.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation and Control

Use the **Navigation Ring** to move the cursor or highlight items on your screen. Press the **Select** button to confirm your choice. The **Back** button will take you to the previous screen, and the **Home** button will return you to the main interface of your Smart TV device.

5.2 Voice Function

The L5B83G remote features a voice control function for convenient operation. To use:

1. Press and hold the **Microphone / Voice Button**.
2. Speak your command clearly into the microphone located at the top of the remote. For example, "Find action movies," "Open Netflix," or "Play [show name]."
3. Release the **Microphone / Voice Button** when you are finished speaking.

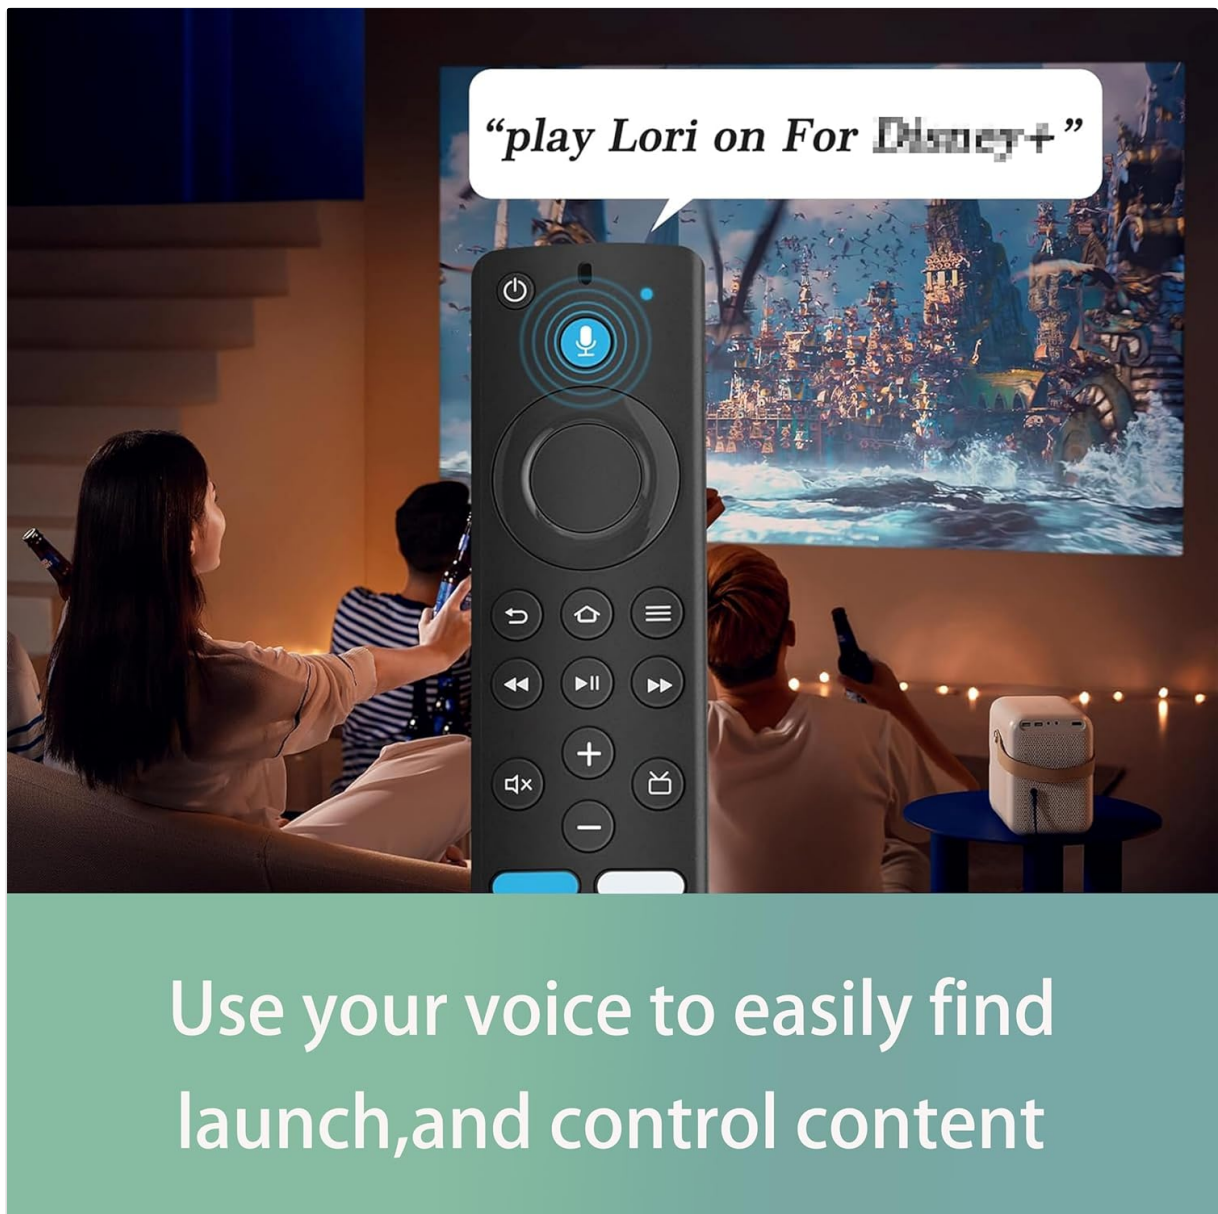


Figure 5.1: Using the voice function to control content.

5.3 Shortcut App Buttons

Directly access your favorite streaming services using the dedicated shortcut buttons for Prime Video, Netflix, Disney+, and Hulu. Simply press the corresponding button to launch the application instantly.

5.4 Long-Distance Transmission

The remote offers a reliable transmission range of up to 10 meters (approximately 33 feet), allowing you to control your device comfortably from various positions within your room.

6. COMPATIBILITY

The Joelrise L5B83G remote control is designed for wide compatibility with various Smart TV devices. Please review the compatibility information below to ensure it works with your specific model.

6.1 Compatible Devices

This remote is compatible with:

- Smart TV Stick Lite (2nd Gen and later)
- Smart TV Stick (2nd Gen and later)

- Smart TV Stick 4K
- Smart TV Stick 4K Max
- Smart TV Stick 4K Bundle
- Smart TV Cube (1st Gen and later)
- Smart TV (3rd Gen)



Figure 6.1: Visual guide to compatible Smart TV devices.

6.2 Incompatible Devices

This remote is **NOT** compatible with:

- Smart TV (1st and 2nd Gen)
- Smart TV Stick (1st Gen)
- Smart TV Edition smart TVs



Figure 6.2: Visual guide to incompatible Smart TV devices.

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries.
- **Protection:** The remote is made with durable ABS material. An included silicone protective case (if applicable) can help keep it safe and dust-free.

8. TROUBLESHOOTING

If you encounter issues with your Joelrise L5B83G remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding.	Low or dead batteries; remote not paired; obstruction between remote and device.	Replace batteries with new ones. Re-pair the remote following Section 4.2. Ensure clear line of sight to your device.
Pairing fails or takes too long.	Incorrect pairing procedure; interference; device not in pairing mode.	Ensure you are holding the Home button for the correct duration (10-15 seconds). Move closer to the device. Restart your Smart TV device and try pairing again.
Voice function not working or inconsistent.	Microphone obstruction; software glitch; remote not fully paired for voice.	Ensure nothing is covering the microphone. Re-pair the remote. Check your device's settings to ensure voice control is enabled. Speak clearly and close to the microphone.
Remote constantly tries to update.	Software issue or compatibility conflict.	Ensure your Smart TV device's software is up to date. Try restarting both the remote (by removing and reinserting batteries) and the Smart TV device. If the issue persists, contact customer support.

9. SPECIFICATIONS

- **Model Number:** L5B83G
- **Product Dimensions:** 6 x 2 x 1 inches
- **Item Weight:** 1.76 ounces
- **Batteries:** 2 AAA batteries (required)
- **Special Feature:** Voice Search
- **Color:** Black
- **Max Number of Supported Devices:** 10
- **Compatible Devices:** Television, Set Top Box (specifically listed Smart TV models)
- **Manufacturer:** joelrise
- **Country of Origin:** China

10. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the seller's policy or contact the manufacturer directly through their official channels.

For further assistance or inquiries, please retain your purchase receipt and product packaging.