

[Manuals.plus](#) /

› [Armocity](#) /

› Armocity L-Shaped Computer Desk with Power Outlets and LED Lights - Instruction Manual

Armocity 47" L-Shaped Computer Desk

Armocity L-Shaped Computer Desk with Power Outlets and LED Lights - Instruction Manual

Model: 47" L-Shaped Computer Desk | Brand: Armocity

PRODUCT OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your Armocity L-Shaped Computer Desk. Designed for versatility, this desk features integrated power outlets, USB ports, and LED lighting, making it suitable for gaming, work, or study environments. The reversible design allows for flexible configuration to fit various room layouts.



Corner Desk for Small Spaces with A Lot Of Tabletop Space

Image: The Armocity L-Shaped Computer Desk set up in a room, showcasing its monitor stand, storage bag, and LED lighting.

SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble the desk according to the provided instructions.
- Do not overload the desk to maintain its stability.
- Ensure all connections for power outlets and LED lights are secure before use.
- Keep liquids away from electrical components.
- Do not stand or sit on the desk.

SETUP AND ASSEMBLY


The Armocity L-Shaped Computer Desk is designed for straightforward assembly. All necessary tools are included. It is recommended that one person performs the assembly.

Package Contents:

- Desk components (tabletops, legs, crossbars)
- Hardware kit (screws, bolts, Allen wrench)
- Power outlet unit with USB ports
- LED light strip
- Headset hooks
- Side storage bag
- Instruction manual

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Verify that all parts listed in the manual are present.
2. **Assemble the Frame:** Attach the desk legs to the main frame components using the provided hardware. Ensure the X-shaped cross bars are securely fastened for enhanced stability.
3. **Attach Desk Tops:** Secure the tabletop sections to the assembled frame. Note that the desk can be configured as an L-shaped corner desk (47" x 47") or a long office desk (75.6"). Choose your desired orientation during this step.
4. **Install Monitor Stand:** Place the elevated monitor stand on the desk.
5. **Install Power Outlets and LED Lights:** Integrate the power outlet unit and LED light strip into the designated areas. Connect the power cord.
6. **Attach Accessories:** Install the headset hooks and side storage bag to your preferred side of the desk. Both are compatible with left and right sides.
7. **Final Check:** Ensure all screws are tightened and the desk is stable before placing items on it.

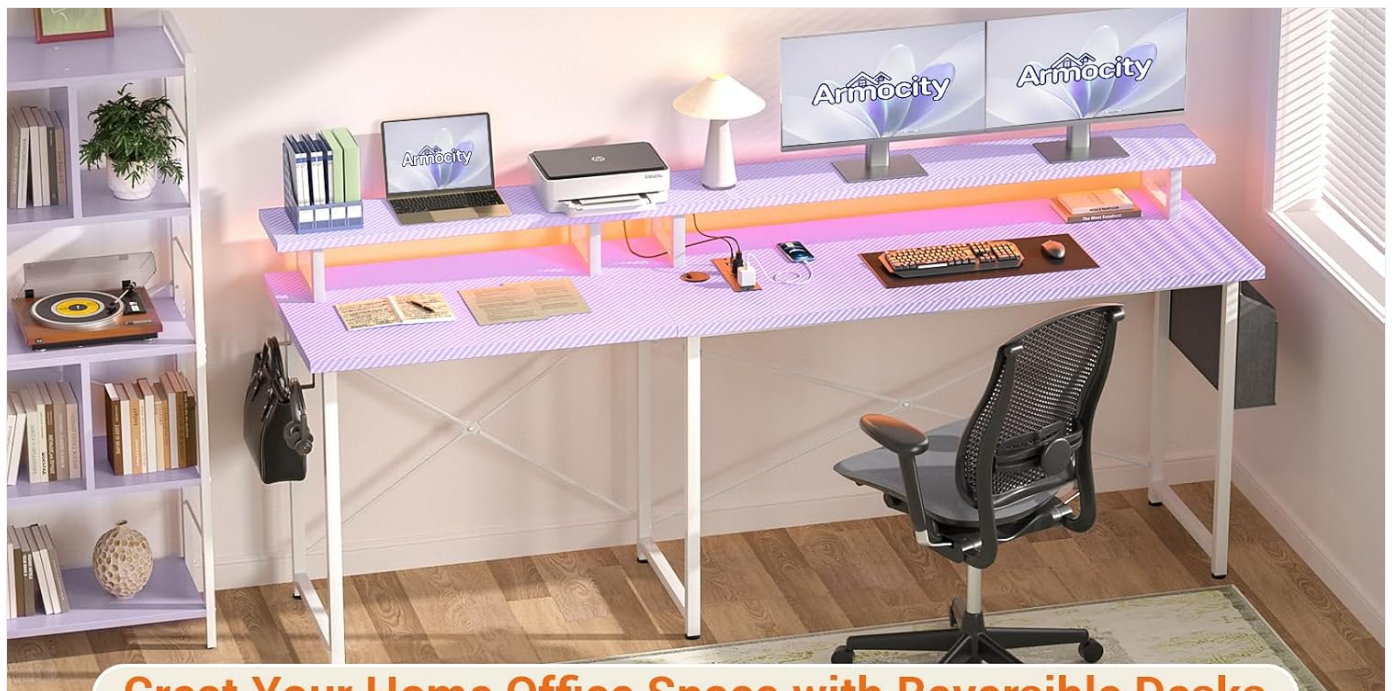

Creat Your Home Office Space with Reversible Desks



Image: Illustration demonstrating the reversible build options for the desk, allowing it to be configured as an L-shape or a long straight desk.

OPERATING INSTRUCTIONS

Power Outlets and USB Ports:

The desk includes a built-in power strip with 3 AC outlets (120V/12A) and 2 USB ports (5V/2A). To use, simply plug the desk's main power cord into a wall outlet. You can then connect your devices directly to the desk's integrated outlets and USB ports for convenient charging and power supply.



3 AC Outlets
120V/12A



2 USB Ports
5V/2A



Power Cord
6.5FT

Image: A close-up view of the integrated power outlets and USB ports on the desk, showing devices charging.

LED Lighting System:

The desk features hidden smart LED lights to enhance your environment. The LED lights offer both static and 20 dynamic modes. Control the lighting using the provided remote control or a compatible mobile application (if available, refer to the LED light manual for app details).

- **Static Mode:** Select a single color to maintain a consistent ambience.
- **Dynamic Modes:** Choose from various pre-programmed lighting effects, including color changes, fades, and flashes.
- **Brightness and Speed Adjustment:** Adjust the intensity of the lights and the speed of dynamic effects using the controls.

Your browser does not support the video tag.

Video: A user demonstrating the color-changing LED lights of the desk, cycling through various hues and effects.

Your browser does not support the video tag.

Video: A demonstration of the desk's LED lighting in a room setting, highlighting its ambient effect.

MAINTENANCE

To ensure the longevity and appearance of your Armocity L-Shaped Computer Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the carbon fiber finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the surface and electrical components.
- **Tighten Fasteners:** Periodically check and tighten all screws and bolts to maintain desk stability.
- **Cable Management:** Organize cables to prevent tripping hazards and maintain a tidy workspace.

TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common troubleshooting tips:

- **Desk Wobbles:**
 - Ensure all assembly screws and bolts are securely tightened.
 - Check that the desk is placed on a level surface. Adjust leveling feet if present.
 - Verify that the X-shaped cross bars are correctly installed.
- **LED Lights Not Working:**
 - Confirm the desk's main power cord is plugged into a functional wall outlet.
 - Check the connection of the LED light strip to the power source.
 - Ensure the remote control has working batteries and is pointed directly at the receiver.
- **Power Outlets/USB Ports Not Functioning:**
 - Verify the desk's main power cord is securely plugged in.
 - Test the wall outlet with another device to ensure it is supplying power.
 - Avoid overloading the outlets; ensure total wattage does not exceed the specified limit.

SPECIFICATIONS

Detailed specifications for the Armocity L-Shaped Computer Desk:

Feature	Detail
Brand	Armocity
Shape	L-Shape (Reversible)
Desk Design	Computer Desk
Color	Carbon Fiber Purple
Style	Modern

Base Material	Carbon Fiber
Top Material Type	Carbon Fiber
Finish Type	Glossy
Special Features	Power Outlets, USB Connectors, Smart LED Lights with Static and Dynamic Modes
Room Type	Bedroom, Home Office
Leg Style	X-shaped
Size	47 inch (L-shape configuration)
Number Of Shelves	2 (Monitor Stand)
Tabletop Thickness	1.18 Inches
Working Surface Diagonal Length	55.5 Inches
Maximum Height	29.1 Inches
Item Dimensions (L x W x H)	18.9 x 47.2 x 29.1 inches
Power Outlets	3 AC Outlets (120V/12A)
USB Ports	2 USB Ports (5V/2A)
Power Cord Length	6.5 FT
Storage Options	Shelves, Side Storage Bag
Assembly Required	Yes
Recommended People for Assembly	1
Includes Assembly Tools	Yes

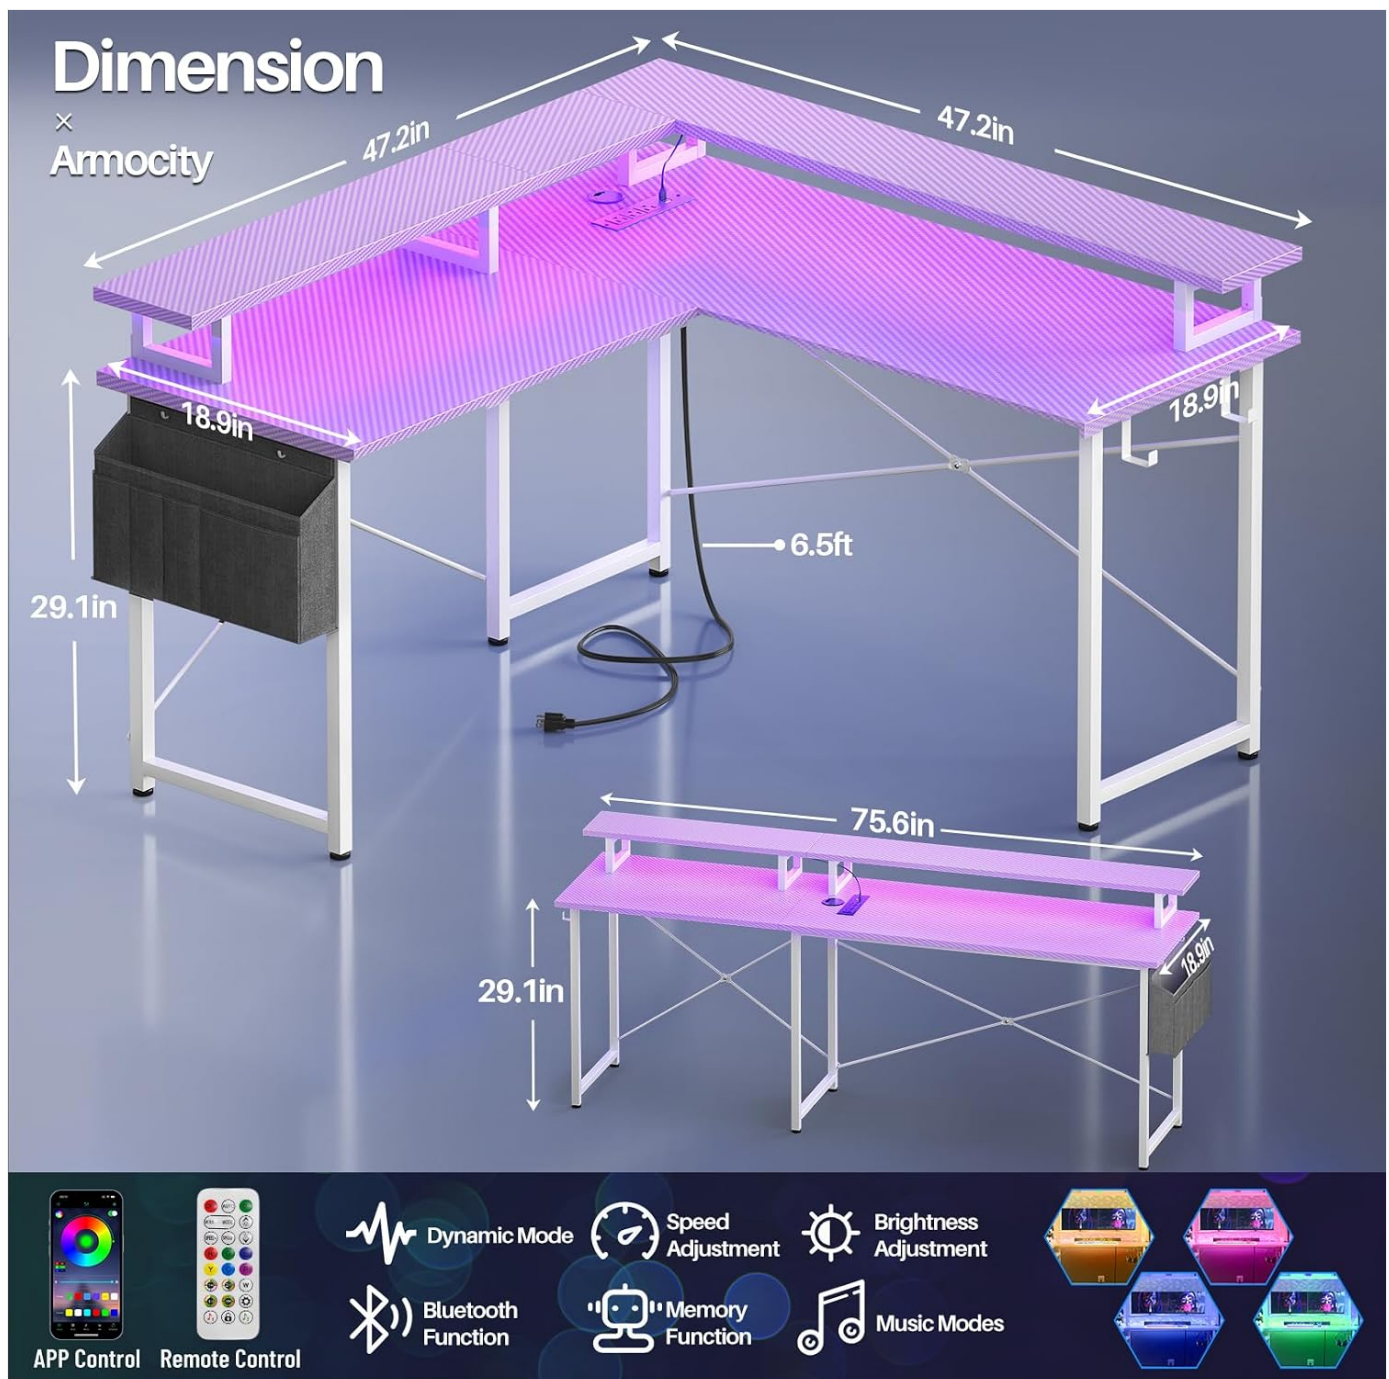


Image: Detailed dimension diagram of the Armocity L-Shaped Computer Desk in both L-shape and straight configurations.

WARRANTY INFORMATION

Armocity provides a limited service warranty for this product. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty documentation included with your purchase or contact Armocity customer service.

CUSTOMER SUPPORT

For any questions, assistance with assembly, troubleshooting, or warranty inquiries, please contact Armocity customer service. Our team is available to provide support and ensure your satisfaction.

Contact Information:

- Please refer to the contact details provided in your product packaging or visit the official Armocity website for the most current support information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question