



Manuals.plus /

› SogesHome /

› SogesHome Electric Height Adjustable Desk User Manual

SogesHome B0CLLC5PGK

SogesHome Electric Height Adjustable Desk User Manual

Model: B0CLLC5PGK

Brand: SogesHome

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your SogesHome Electric Height Adjustable Desk. Please read this manual thoroughly before assembly and operation to ensure proper setup and to maximize the lifespan of your product. This desk is designed to offer a versatile workspace, allowing seamless transitions between sitting and standing positions.

The desk features an electric height adjustment mechanism, a spacious 160 cm x 60 cm desktop, and a memory control panel for personalized height settings.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum load capacity of **80 kg** (176 lbs). Overloading may cause damage or injury.
- Keep children and pets away from the desk during height adjustment to prevent accidents.
- Ensure there are no obstructions in the desk's path during height adjustment.
- Do not sit or stand on the desk.
- Only use the provided power adapter.
- If any unusual noise or movement occurs, immediately stop operation and unplug the desk.

3. PACKAGE CONTENTS

Verify that all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, contact SogesHome customer support.

- Desktop (160 cm x 60 cm)
- Desk Legs/Frame (Electric lifting columns and feet)
- Control Panel with LED Display
- Power Adapter and Cable
- Cable Management Device
- Assembly Hardware (screws, tools)
- User Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to assemble the desk on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out.
2. **Assemble Desk Frame:** Attach the feet to the lifting columns using the provided hardware. Ensure all screws are tightened securely.
3. **Attach Desktop:** Place the desktop upside down on your soft surface. Position the assembled desk frame onto the desktop, aligning the pre-drilled holes. Secure the frame to the desktop using the provided screws. *Note: The desktop may consist of two pieces that fit together seamlessly.*
4. **Install Control Panel:** Mount the control panel to the underside of the desktop in the desired location, typically on the front edge.
5. **Connect Wiring:** Connect the motor cables from the lifting columns to the control box, and then connect the control panel cable to the control box. Finally, connect the power adapter to the control box and plug it into a power outlet.
6. **Install Cable Management:** Attach the cable management device to the underside of the desk to organize power and data cables.
7. **Adjust Table Feet:** If the desk is uneven, adjust the leveling feet at the bottom of the desk legs to stabilize it.



Figure 4.1: Fully assembled SogesHome Electric Height Adjustable Desk, showcasing its spacious desktop and sturdy frame. The desk is shown with multiple monitors and accessories, demonstrating its capacity as a functional workstation.



Figure 4.2: A close-up view of the desktop surface, highlighting the joint where the two desktop pieces meet. This design ensures a large working area while facilitating easier packaging and assembly.

ADJUSTABLE TABLE FEET



Figure 4.3: Detail of the adjustable table feet located at the base of the desk legs. These feet can be rotated to compensate for uneven floor surfaces, ensuring the desk remains stable and level.

5. OPERATING INSTRUCTIONS

5.1. Basic Height Adjustment

The desk's height can be adjusted between **72 cm (28.3 inches)** and **122 cm (48 inches)**.

- Press and hold the **UP (▲)** button to raise the desk.
- Press and hold the **DOWN (▼)** button to lower the desk.
- Release the button at your desired height. The LED display will show the current height.



Figure 5.1: Illustrates the adjustable height range of the desk, from a minimum of 72 cm to a maximum of 122 cm, providing a 50 cm adjustment span for ergonomic sitting and standing positions.

SWITCH BETWEEN SITTING AND STANDING



Figure 5.2: Depicts the desk's ability to smoothly transition between sitting and standing heights at a speed of 25mm/s, promoting a dynamic work environment.

5.2. Memory Presets

The control panel allows you to save up to 4 preferred height settings for quick adjustments.

ALL-IN-ONE KEYPAD

No need to worry about complicated operations

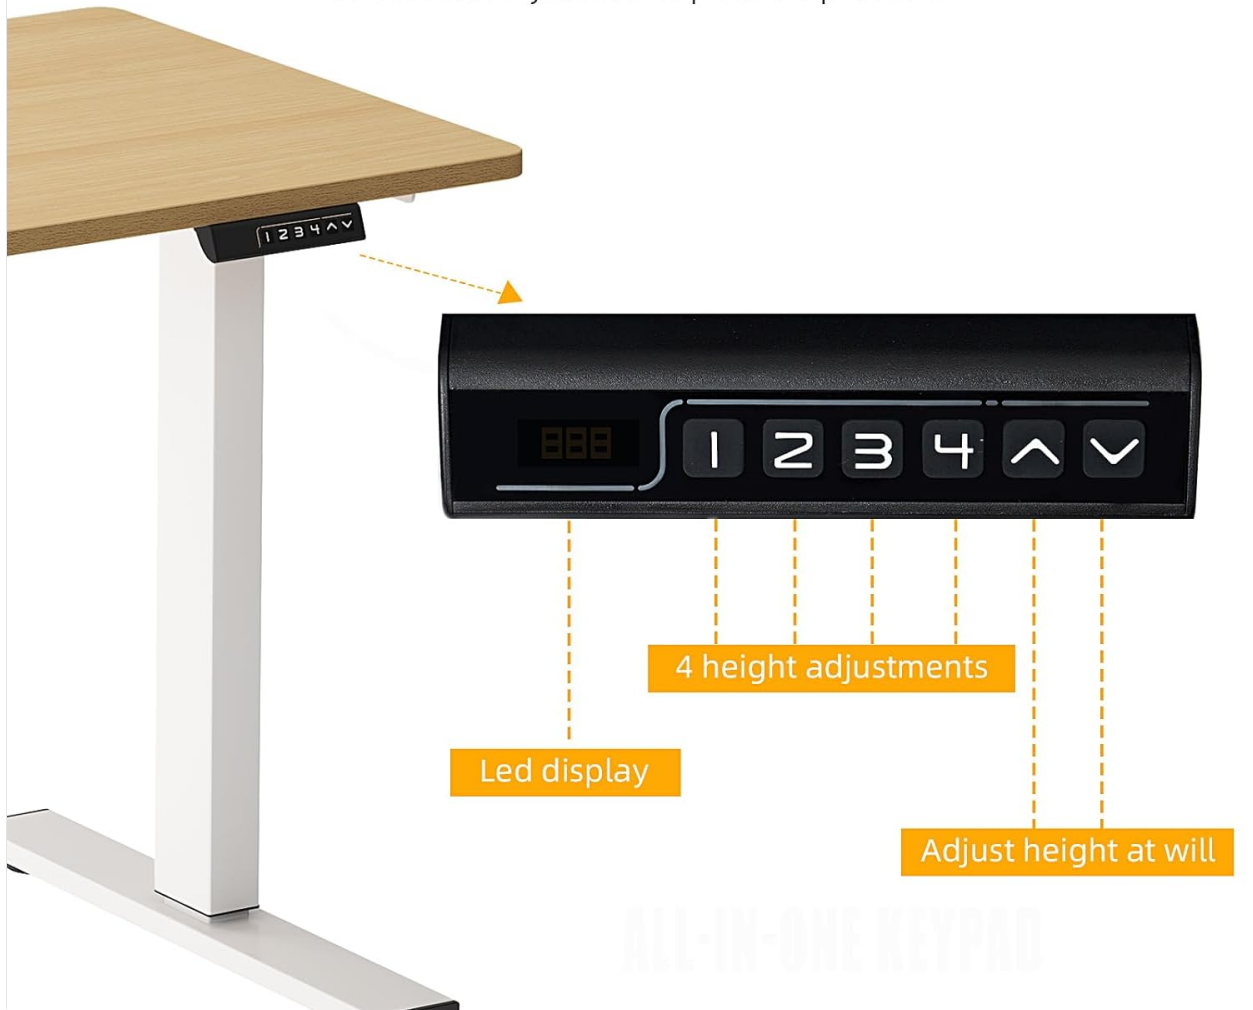


Figure 5.3: Detailed view of the 'All-in-One Keypad' featuring an LED display, dedicated up/down adjustment buttons, and four programmable memory buttons (1, 2, 3, 4) for saving preferred desk heights.

1. **Set a Memory Position:** Adjust the desk to your desired height using the UP/DOWN buttons.
2. Press the **M** button (if available, or hold one of the number buttons directly). The LED display may flash 'S' or 'M'.
3. Within 3 seconds, press one of the number buttons (**1, 2, 3, or 4**) to save the current height to that preset. The display will show the number to confirm.
4. **Recall a Memory Position:** Simply press the corresponding number button (**1, 2, 3, or 4**). The desk will automatically move to the saved height.

6. MAINTENANCE

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight.
- **Cable Management:** Ensure cables are neatly organized and not pinched or tangled, especially during height adjustments.

- **Weight Distribution:** Distribute weight evenly across the desktop to prevent strain on the lifting mechanism.

7. TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common problems and solutions:

- **Desk Not Moving:**
 - Check if the power cable is securely plugged into both the desk and the wall outlet.
 - Ensure all motor cables are properly connected to the control box.
 - Try unplugging the desk for 10 seconds and then plugging it back in to reset the system.
- **Uneven Movement/Desk Wobbles:**
 - Verify that the floor surface is level. Adjust the leveling feet at the bottom of the desk legs.
 - Ensure all assembly screws are tightened.
- **Error Codes on Display:**
 - Refer to the specific error code in a more detailed troubleshooting guide (if provided separately by manufacturer) or contact customer support. Often, a power cycle (unplug and replug) can resolve temporary errors.
- **Desk Stops Mid-Adjustment:**
 - The desk may have reached its maximum or minimum height limit.
 - Overload protection may have activated. Remove some weight from the desk and try again.

8. SPECIFICATIONS

Feature	Specification
Brand	SogesHome
Model	B0CLLC5PGK
Product Dimensions	160D x 60W x 72H Centimeters (Minimum Height)
Desktop Size	160 cm x 60 cm
Height Adjustment Range	72 cm - 122 cm
Colour	Teak white
Top Material Type	Wood
Base Material	Alloy Steel
Special Feature	Adjustable, Electric
Maximum Weight Recommendation	80 Kilograms
Item Weight	29 Kilograms
Assembly Required	Yes
Noise Level (Adjustment)	Approximately 50dB



Figure 8.1: Illustrates the desk's robust construction with dual crossbeams, designed to support a significant load. While the image indicates 100 kg, the official specification is 80 kg.



Quiet Adjustment
Noise 50db



Smooth
Lifting



Adjustable
Height



100 kg
Capacity



One Button
Control



Easy to
Clean

Figure 8.2: Highlights key features of the desk, including smooth and quiet height adjustment (approx. 50dB), adjustable height, a maximum load capacity (officially 80 kg), one-button control, and ease of cleaning.

9. WARRANTY AND SUPPORT

SogesHome products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official SogesHome website. For technical support, replacement parts, or any inquiries, please contact SogesHome customer service through the retailer where the product was purchased or via the contact information provided on the official SogesHome website.