

SHARP R-929KN-K

SHARP 29L Convection Microwave Oven R929KNK User Manual

Model: R-929KN-K

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your SHARP 29L Convection Microwave Oven, Model R-929KN-K. Please read this manual thoroughly before using the appliance and retain it for future reference.

The SHARP R-929KN-K is a versatile 29-liter convection microwave oven designed for various cooking needs, including microwave, grill, convection, and combination cooking. It features a durable stainless steel cavity, a healthy fry function, and an extensive auto-cook menu.

EXPERIENCE CONVENIENT COOKING WITH **SHARP** MICROWAVE



Stainless steel
cavity



Quartz heater



Healthy fry



400+ auto
cook menus



Image: Overview of the SHARP 29L Convection Microwave Oven highlighting its 29-liter capacity and key features like Vapour Clean, Quartz Heater, Eco Mode, Fermentation, Keep Warm, and Healthy Fry.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not operate the oven if the door or door seals are damaged. Contact qualified service personnel for repair.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.
- Do not use corrosive chemicals or vapors in this appliance.
- Ensure proper ventilation around the appliance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials from the oven and its accessories. Check the oven for any damage, such as dents or a misaligned door. Do not install if damaged.

Placement

Place the oven on a flat, stable surface that can support its weight. Ensure there is adequate space for ventilation: at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side. Do not block any ventilation openings.

SHARP MICROWAVE OVEN

SPACIOUS 29 LITRE CAPACITY



Image: Front view of the SHARP 29L Convection Microwave Oven, illustrating its dimensions: 523 mm width, 449 mm depth, and 300 mm height.

Power Connection

Plug the oven into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the appliance.

OPERATING INSTRUCTIONS

Your SHARP microwave oven features a jog dial control and push buttons for easy operation.

JOG DIAL CONTROL + PUSH BUTTONS

Make delicious dishes with a press of a button



Image: Close-up of the control panel, showing the jog dial and various function buttons for Microwave, Convection, Grill/Combi, Auto Menu, Set Clock, Time/Weight Defrost, Stop/Eco, and Start/430s.

Basic Microwave Cooking

1. Place food in a microwave-safe container.
2. Close the oven door securely.
3. Press the 'Microwave' button.
4. Rotate the jog dial to select the desired power level and cooking time.
5. Press 'Start' to begin cooking.

Convection Cooking

Use convection mode for baking and roasting. The oven circulates hot air to cook food evenly.

1. Place food on the metal rack provided.
2. Press the 'Convection' button.
3. Rotate the jog dial to set the desired temperature and cooking time.

4. Press 'Start'. The oven will preheat, then beep when ready to add food.

Grill Cooking

Ideal for browning and toasting.

1. Place food on the grill rack.
2. Press the 'Grill/Combi' button repeatedly until 'Grill' mode is selected.
3. Rotate the jog dial to set the cooking time.
4. Press 'Start'.

Healthy Fry Function

This function allows you to prepare dishes like french fries and papads with minimal or no oil, promoting healthier cooking.

AIR FRY/HEALTHY FRY

Create recipes with less/No oil



Image: Visual representation of the Air Fry/Healthy Fry feature, emphasizing cooking with less or no oil, surrounded by various fried foods.

Refer to the auto-cook menu for specific Healthy Fry options and instructions.

Auto Cook Menu

The oven includes over 400 pre-programmed recipes for various dishes, simplifying your cooking process.



Image: The SHARP microwave oven in a kitchen setting, with text indicating 'Auto Cook Menu: Cook 400+ Recipes'.

1. Press the 'Auto Menu' button.
2. Rotate the jog dial to select the desired recipe number.
3. Enter the food weight if prompted.
4. Press 'Start'.

Defrost by Weight or Time

This feature allows precise thawing of frozen foods.



DEFROST BY WEIGHT OR TIME

Image: A piece of meat on a cutting board, with the microwave oven in the foreground, illustrating the 'Defrost by Weight or Time' function.

1. Place frozen food in the oven.
2. Press the 'Time/Weight Defrost' button.
3. Rotate the jog dial to select either defrost by weight or by time, and adjust accordingly.
4. Press 'Start'.

MAINTENANCE AND CLEANING

Stainless Steel Cavity

The stainless steel cavity facilitates efficient heating and is easy to clean.

STAINLESS STEEL CAVITY

It facilitates an efficient heating



Image: The interior of the SHARP microwave oven, showing the stainless steel cavity, with text highlighting its efficient heating capability.

To clean, wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, use a microwave-safe cleaner.

Vapour Clean Function

This feature helps loosen food residue inside the oven for easier cleaning. Consult your full manual for specific instructions on activating and using the Vapour Clean function.

General Cleaning

- **Exterior:** Wipe with a soft, damp cloth. Avoid abrasive cleaners.
- **Door and Seals:** Clean the door and door seals regularly to ensure proper closure and operation.
- **Turntable:** The glass turntable can be removed and washed in warm soapy water or a dishwasher.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is secure; Close door firmly; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust time/power; Close door firmly.
Light not working	Bulb needs replacement.	Contact qualified service personnel.
Sparking inside oven	Metal in oven; Food residue.	Remove metal objects; Clean oven cavity.

If problems persist after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SHARP
Model Name	R-929KN-K
Capacity	29 Liters
Product Dimensions (D x W x H)	44.9D x 52.3W x 30H Centimeters
Item Weight	17.3 Kilograms
Colour	Black
Inner Material	Stainless Steel
Heating Method	Convection
Controller Type	Button
Human Interface Input	Buttons
Special Features	Defrost, Healthy Fry, Vapour Clean, Auto Cook Menu (400+ recipes)
Installation Type	Countertop

WARRANTY INFORMATION

The SHARP 29L Convection Microwave Oven (R-929KN-K) comes with a **1 Year Comprehensive Warranty** and a **3 Years Warranty on the Magnetron**. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions.

CUSTOMER SUPPORT

For any assistance, service requests, or inquiries regarding your SHARP microwave oven, please contact:

Sharp Business Systems (India) Private Limited

Plot No. 51, First Floor, Okhla Industrial Estate, Phase-III, New Delhi- 110020

Toll-Free: 1800-419-4322

E-Mail: support@sharp-oa.com

When contacting support, please have your model number (R-929KN-K) and purchase details ready.